


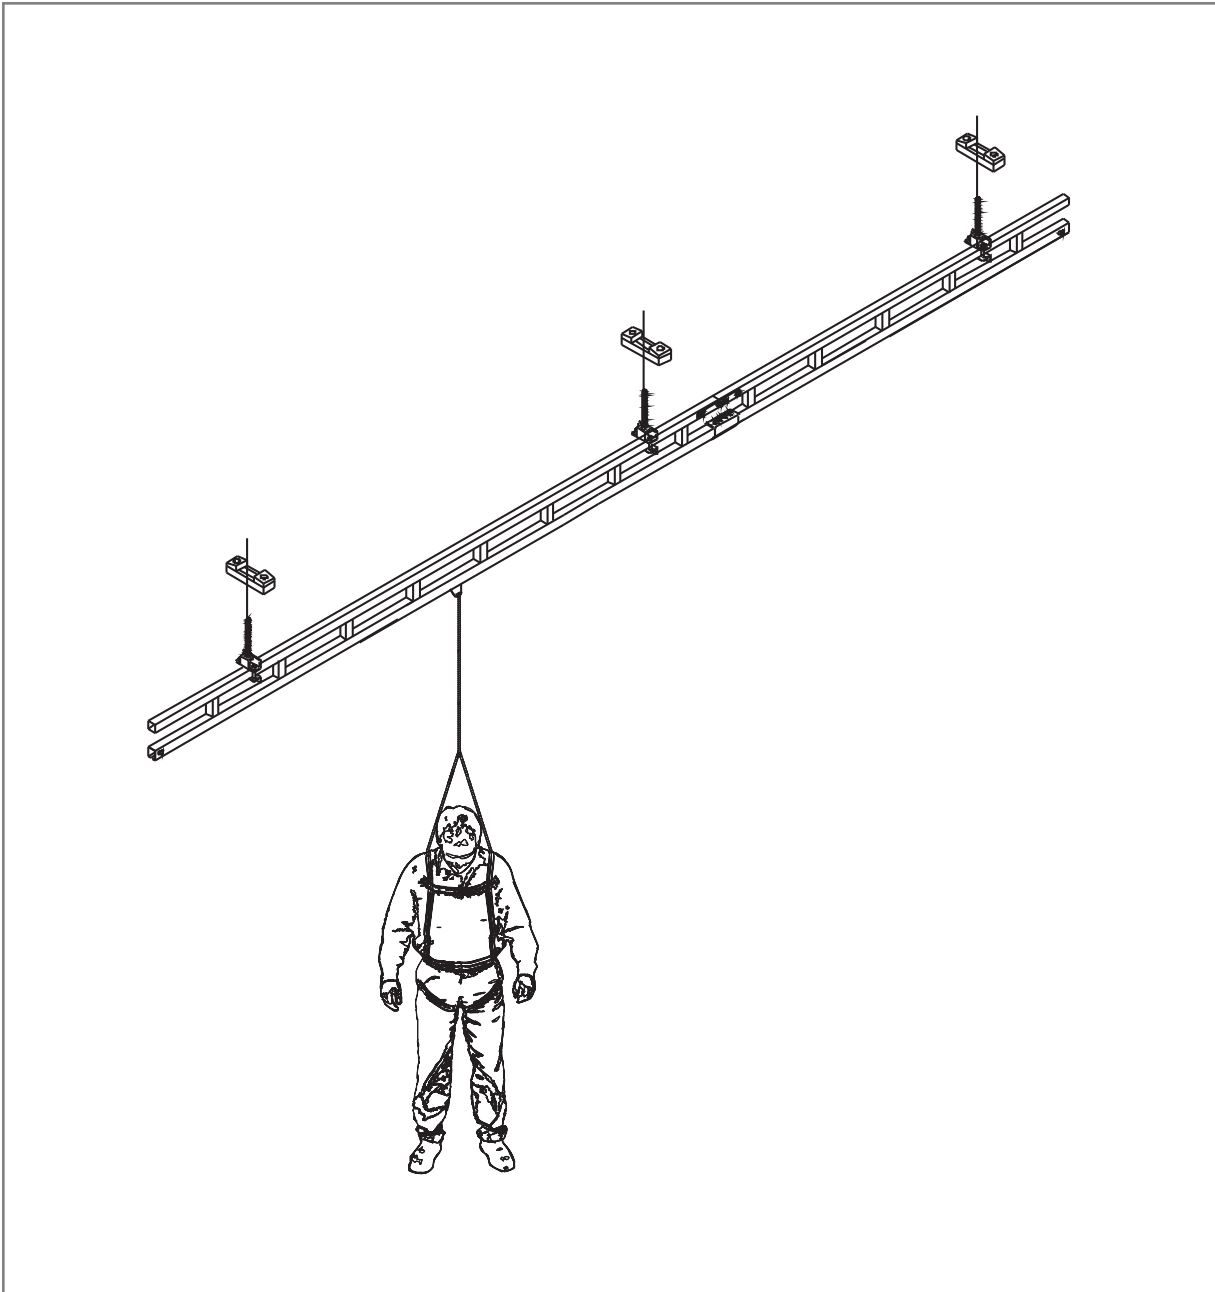

## Technical Manual for Rigid Lifelines Fall Protection Track

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE





# TABLE OF CONTENTS

Introduction to Fall Protection.....	4
Rigid Lifelines Fall Protection Systems.....	5
Specifying a Fall Protection System.....	6
Plain Fall Arrest Track.....	7
Single Track Trussed Fall Arrest System.....	7
Dual Trussed Fall Arrest Track.....	8
Components.....	7-14
Splices.....	8-10
Hangers.....	11-13
End Stops.....	14
Rotating Eyebolt Trolleys.....	14
End Trucks.....	14
Aluminum Fall Arrest Track.....	15
Fall Arrest Safety and Considerations.....	16
Fall Arrest Component and System Installation Requirements.....	17
Installation Instructions.....	17
Performance Testing of Fall Arrest Components and Systems.....	17
Inspection of Fall Arrest Systems.....	18
Lateral Bracing for Monorail.....	19
FAC-480 Assembly Instructions.....	20
Bar Joint Hanger Assembly.....	21
Sloped Hanger Assembly Instructions.....	22
Beam Clamp - Chart.....	23
Annual Systems Inspection Checklist.....	24
Annual Fold-Away Systems Inspection Checklist.....	25
Rigid Lifelines Warranty and Service Policy.....	28

# INTRODUCTION TO FALL PROTECTION

Unintentional falls are the leading cause of injury and the second most common cause of occupational related deaths in the United States.

There are three methods of protecting workers from injury due to falls:

1. **Eliminate the fall hazard.**
2. **Arrest the fall.**
3. **Restraint**

Arresting the fall may be done in a variety of ways, including guarding, nets, and personal fall protection systems.

Personal Fall Protection systems consist of three main components; an **anchorage**, a **body support**, and the **connecting means**.

This manual relates to the selection of a track system for dynamic protection of the worker. Harnesses and related equipment which work in conjunction with the track system require investigation of other sources. Each manufacturer's equipment recommendation may vary from case to case and affect the forces put on the track to different degrees.


A horizontal system is an anchoring track designed to be connected between two support points on the same level. This track, along with the trolley, serves as a mobile anchor point for the attachment of energy absorbing lanyards or self retracting lanyards. The purpose is to limit swing injuries by providing a continuous overhead support point as the worker moves horizontally along a work surface.

The anchorage on a horizontal fall arrest system may be either **static**, such as an eye bolt, or **dynamic**, such as a lifeline or track system, which protects the worker from falling, yet provides the desired amount of mobility to accomplish the task to be performed.

The **total distance that a worker falls** when attached to a horizontal type fall arrest system is equal to the fall distance of four components; the **free fall distance**, the amount of **sag** in the system, the **deceleration distance** of the shock absorption equipment the worker is using, and the stretching of the harness. Obviously the shorter the total fall distance, the less likely the worker will be injured. It is an industry accepted standard to include a 3' safety factor for added clearance.

Rigid Lifelines enclosed track systems ELIMINATE the sag distance component thereby lessening the overall fall distance. This allows the life saving lanyard and harness equipment to react faster and exert less force on the worker. This non sag action also lessens the likelihood of the worker colliding with an obstruction or lower grade level.

## RIGID LIFELINES FALL PROTECTION SYSTEMS

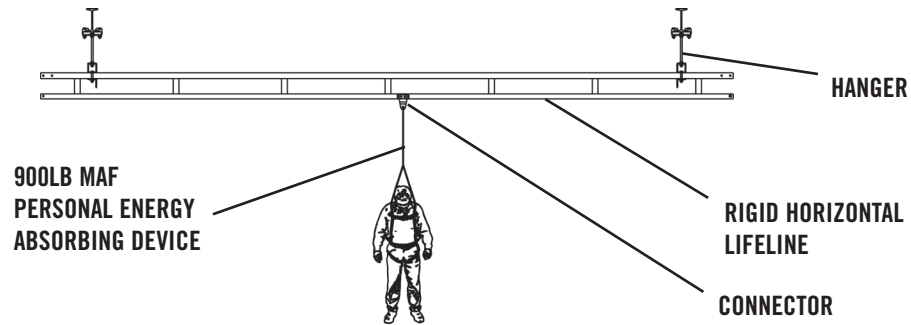

Rigid Lifelines fall arrest track systems have many distinctive advantages over wire rope systems.

Rigid track design with less free fall distance should be taken into account since the stretch of the wire rope does not have to be figured into the equation.

The worker can now be decelerated to a complete stop in a shorter distance, lowering the impact force on the body.

This design also saves headroom since an allowance for sag is no longer necessary. This feature also allows for use of track in situations where there is a minimum of overhead room.

Rotating eye trolleys provide smooth ergonomic movement within the track system and are not affected by side pull which can restrict the trolleys on a wire rope system, especially at the splices and hangers. The worker can now move freely from side to side under the track system, rather than be limited to the pathway directly below the wire rope. The rotating eye trolley allows 360° continuous movement eliminating tangling of the lanyard and harness. Side to side movement may be further enhanced through the use of double tracks and bridges known as traveling bridge systems.

With the addition of track splices, the length is limitless. Splice design ensures a smooth transition at joints and hangers.

Rigid truss design can be used to increase support centers to job and building requirements. Standard sizes are available to accommodate up to 58ft. support centers.

**All standard systems are designed for use with lanyards that limit the maximum arresting force to 900lbs. Special designs can be customized to virtually any distance.**

Utilizing track switches, turntables, transfer mechanisms and end trucks can make the scope and coverage of your fall arrest system virtually limitless. This is perfect for complete coverage of a facility such as; theatres, airplane hangers, bus depots, or anywhere overhead work is constant. All track, trolleys, cranes, and hangers are designed in accordance with A.N.S.I. Spec No. Z359.1-2007, OSHA Std. 1910.66, and OSHA Std. 1926.502

NOTE: If the same fall arrest system will be used to recover a fallen worker, a two man system must be specified.

# SPECIFYING A FALL PROTECTION SYSTEM

## Fall Arrest Selection Thoughts

1. How many workers will be using the system at one time?
2. How will the system be supported?
3. What type of lanyards and harnesses will be provided?
4. Make sure you can move trolleys past support points without disengaging from the lanyards.
5. Evaluate whether the trolley will slide smoothly without causing a swing fall hazard.
6. If a worker falls off the edge of the work area, how many degrees off-vertical will the lanyard line be?
7. How will a fallen worker be rescued?

## Specifying a Fall Arrest System

The following is an example of how to decide what fall arrest system will best suit the application at hand:

The customer wants a one person system on 6 foot support centers with a 20 foot overall length:

### 1. Choose Fall Arrest Track:

- A. With 6'-0" support centers for a one person system we refer to the table on page 7. No. P500 track is selected.
- B. Choose the part number FAPT520C-1MAN from sheet 13 of the Rigid Lifelines Fall Arrest Track Price List. This will provide (3) 6-foot support center spaces, and the standard 12" overhangs on each end.

### 2. Choose Accessories:

 


- 2 End Stops No. 500ES
- 1 Personnel Trolley No. 524RI
- 4 Track Hangers, either drop rod or flush type
- 1 Label Kit

Note that track splices are available to join multiple track sections together. Refer to pages 9-10 for track splices for track and splice plates for truss top tubes.

# COMPONENTS

## Plain Fall Arrest Track

1. Profile is ASTM A-572 steel cold formed.
2. Enclosed track low profile keeps space requirements to a minimum.
3. Profile design ensures wheel protection and accurate alignment with minimum friction.
4. Minimum maintenance. "Self" cleaning profile.
5. Available in three sizes.

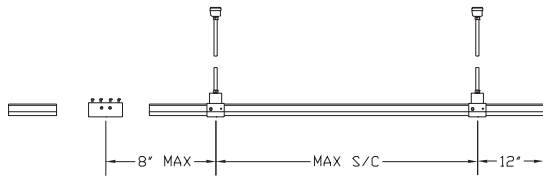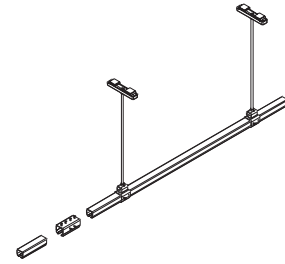

Part Numbers:  
**FA PT 5 XX (.XX)**  
 FA: Fall Arrest  
 PT: Plain Track  
 5: Track Series  
 XX: Length  
 (.XX): Decimal Feet (if needed)



### NOTES:


1. Maximum cantilever for one person on plain track is 2' for 500\* series track, and 3' for 600\*.
2. Maximum distance hanger to splice is 12".
3. Refer to Page 8 for off-vertical loading.
4. Each section of track must have at least 2 hangers.

TRACK SERIES	A	B	1 PERSON MAX S/C	2 PERSON MAX S/C
PT500	2 9/16"	2 3/8"	10'-0"	8'-0"
PT600	3 1/8"	2 15/16"	15'-0"	12'-6"

\* These lengths may be increased under certain circumstances. Consult with Rigid Lifelines engineering.



## Single Track Trussed Fall Arrest Systems

1. Used for spanning greater distance between supports.
2. Utilizes plain track profile for lower cord to insure conformity of components.
3. Low profile keeps space requirements to a minimum.
4. Combination of high strength to low weight ratio, helps reduce stress on structures.
5. Designed for one or two person systems.
6. Available in six standard sizes, to accommodate up to 58'-0" spans.
7. Custom design for any span greater than shown in catalogue.

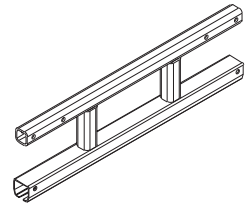


Part Numbers:  
**FA R 600- XX (.XX)**  
 FA: Fall Arrest  
 R: Trussed Runway  
 600: Track Series  
 XX: Length  
 (.XX): Decimal Feet (if needed)

TRACK SERIES	1 USER MAX S/S	2 USERS MAX S/S	A	B	C
520	20'	17'	10"	2"	2"
525	25'	18'	12 3/8"	2"	2"
530	30'	25'	14 3/8"	2 1/2"	2 1/2"
520C	40'	33'	10 1/4"	2"	10"
525C	50'	42'	12 5/8"	2"	10"
530C	58'	48'	14 5/8"	2 1/2"	12"

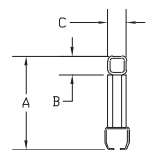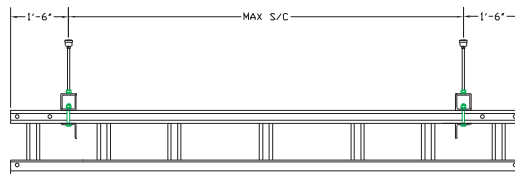

### NOTES:

1. Maximum cantilever on truss track is 48".
2. Maximum distance hanger to splice is 48".
3. Refer to Page 8 for off-vertical loading.



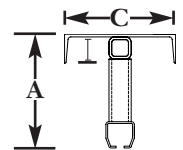


LATERAL BRACING REQUIRED BY OTHERS. Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc. Dimensions and weights are approximate and may change without notice.\*\*NOTE: If the same fall arrest system will be used to recover a fallen worker, a two man system must be specified.

# COMPONENTS (continued)
 
## Dual Trussed Fall Arrest Track

1. Profile is ASTM A-572 steel cold formed.
2. Enclosed track low profile keeps space requirements to a minimum.
3. Profile design ensures wheel protection and accurate alignment with minimum friction.
4. Minimum maintenance. "Self" cleaning profile.
5. Available in three standard sizes.
6. Custom design for spans greater than shown.

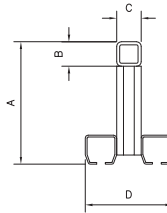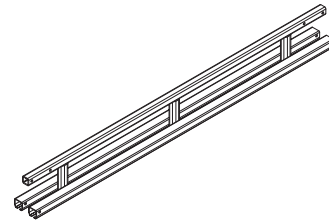

Part Numbers:  
**FA 2T520-XX (.XX)**  
 Decimal Feet  
 (if needed)  
 Length  
 Track Series  
 Trussed Fall Arrest

**NOTES:**

1. Maximum cantilever is 48".
2. Maximum distance hanger to splice is 48".


TRACK SERIES	2 USER MAX S/S	A	B	C	D
520DST	38'	10"	2"	2"	7 1/8"
525DST	45'	12 3/8"	2"	2"	7 1/8"
530DST	53'	14 3/8"	2 1/2"	2 1/2"	7 5/8"

**LATERAL BRACING REQUIRED BY OTHERS.** Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc.

## Splices

1. Track splice joints are supplied complete with vertical and horizontal adjustment screws which facilitate precise alignment of the track sections at a joint.
2. When positioning splice joints it is important to insure that they are placed within the allowable distance from an adjacent support bracket for maximum loads.
3. Welded joints are possible, however they are not recommended as they inhibit the adjustments, future modification, or dismantling of a system.
4. In the case of truss trucks, splice plates are used to join the upper chords of the truss section.

## Maximum Off-Vertical Loading

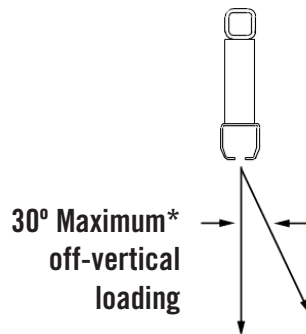


**\*Consult factory for loading exceeding 30° off-vertical.**


Dimensions and weights are approximate and may change without notice.



**Splices (continued)  
Track Splice**

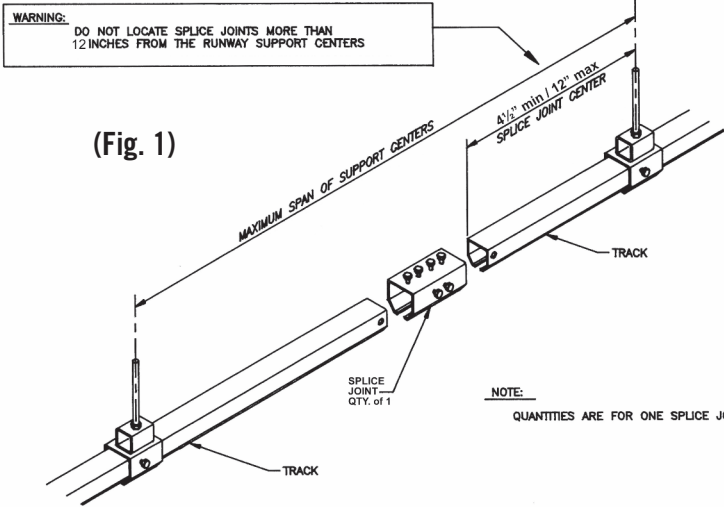

TRACK	500	600	700	500 DUAL TRACK
WEIGHT LB.	5	8 1/2	17	7 1/2
DIM A	3 3/16"	3 15/16"	4 9/16"	6 3/16"
DIM B	7"	8"	10"	7"
DIM C	2 15/16"	3 11/16"	5 1/4"	2 15/16"
PART NO.	1503-	1603-	1703-	9-2420

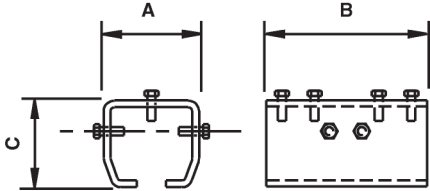

If your system has more than one section length of fall arrest track, each additional section is installed in the same manner as the first, with the addition of a splice joint assembly.

**Plain track:** Splice joints should be within 12" of a support bracket or hanger as shown in Fig. 1. Each section of track **must** have at least 2 hangers.





Splice joints should be within 18", 48" max, of a support bracket or hanger.

The track splice joint is made from a sleeve with a total of eight set screws threaded into the top and both sides. Slide the sleeve over the end of the first runway track, then butt the second runway track against the first. Center the sleeve over the joint. The two center top set screws should be tightened slightly to push the tracks against the base of the sleeve so that the two bottom surfaces of the track are even. Adjust the side set screws so that the track slots are aligned and there is a smooth transition from one track to the other, see Fig. 2. Tighten all top set screws then side set screws for correct track alignment.

TRACK SERIES	TORQUE SPECIFICATIONS
500	50 IN-LBS
600	60 IN-LBS

**EXCEEDING THESE TORQUE SPECIFICATIONS MAY CAUSE END TRUCKS TO BIND IN TRACK**

**(Fig. 2)**

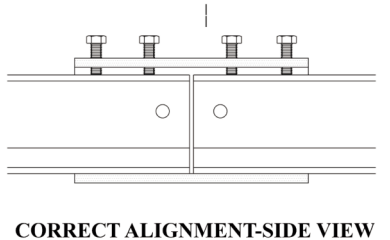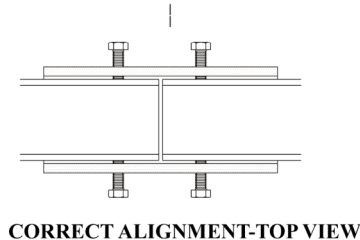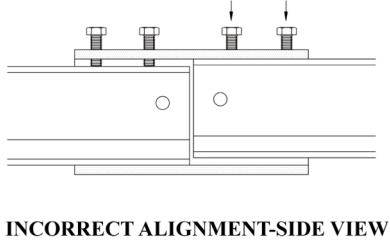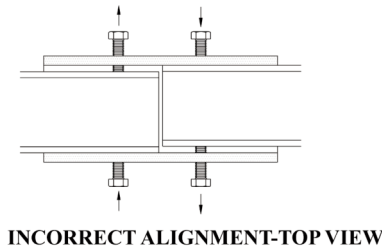



# COMPONENTS (continued)

## Splices (continued) Track Splice

Trussed fall arrest splice joints also include two splice plates and four, 1/2" bolts with nuts and lock washers. Install the splice plates to connect the ends of the truss tubes with the four through bolts provided. Torque through bolts to 50 FT. lbs., see Fig 3.

TRACK	500	600	700
TRUSS TUBE SIZE	2"	2 1/2"	3"
PLATES (2)	SP-1		
BOLTS (4)	10-0218	10-0217	10-0206
LOCK NUTS (4)	13-0003		
WEIGHT LB.	1 1/2	1 1/2	1 1/2
PART NO.	SP-2	SP-25	SP-3

**WARNING:**  
DO NOT LOCATE SPLICE JOINTS MORE THAN 48 INCHES FROM THE FALL ARREST TRACK SUPPORT CENTER  
DO NOT CANTILEVER THE FALL ARREST TRACK ENDS MORE THAN 48 INCHES BEYOND THE RUNWAY SUPPORT CENTERS.

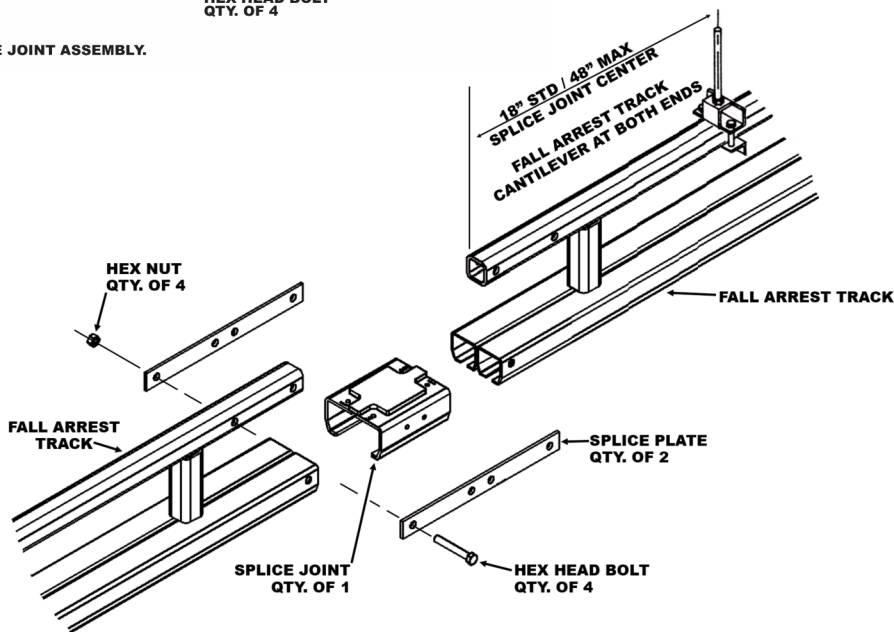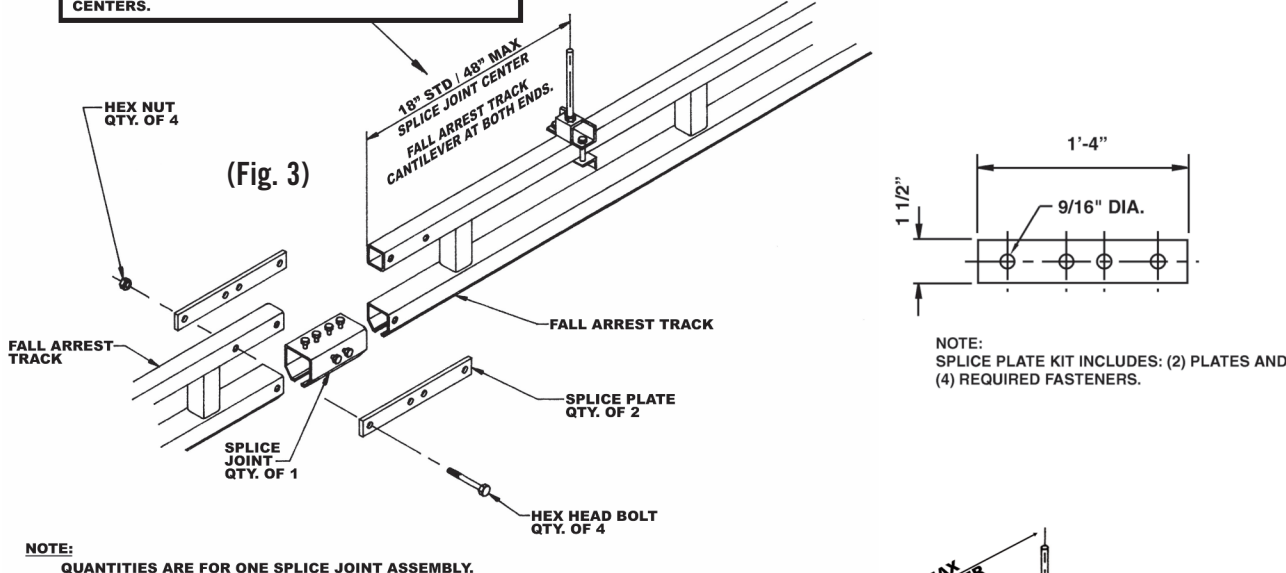


**LATERAL BRACING REQUIRED BY OTHERS.** Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc.

## COMPONENTS (continued)

### Hangers

#### Plain Track Support Bracket

1. Used to support plain track.
2. Complete with adjustment screw.
3. Cold formed to wrap around the track profile.
4. Can be directly welded to overhead supports.

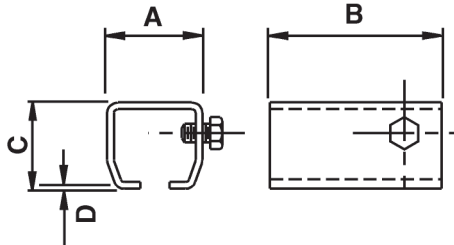


TRACK	500	600	700
WEIGHT LB.	2	5	8
DIM A	3 1/4"	3 15/16"	4 1/2"
DIM B	3 1/2"	4 1/2"	5"
DIM C	2 15/16"	3 11/16"	5 1/4"
DIM D	1/4"	5/16"	3/8"
SETSCREW	5/16-18NC	3/8-16NC	1/2-13NC
PART NO.	1504	1604	1704

### Hangers

#### Ceiling Support Bracket

1. Plain support bracket with mounting plate welded to top.
2. Bolted directly to overhead structure.

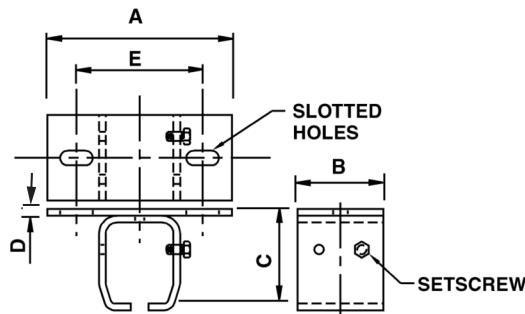


TRACK	500	600	700
WEIGHT LB.	4	8	14 1/2
DIM A	6 11/16"	8 5/16"	10 1/4"
DIM B	3 1/2"	4 1/2"	5"
DIM C	2 15/16"	3 3/4"	5 5/16"
DIM D	1/4"	3/8"	1/2"
DIM E	4 13/16"		
SETSCREW	5/16-18NC	3/8-16NC	1/2-13NC
PART NO.	502	602	702
SLOTTED HOLES	11/16 x 1 1/8"		

### Hangers

#### Side Support Bracket

1. Furnished to allow mounting of plain track to side of support structure.
2. Furnished complete with bolts, nuts, and lockwashers.

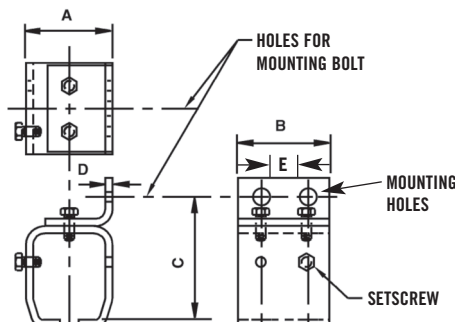


TRACK	500	600
WEIGHT LB.	3	7
DIM A	2 9/16"	3 1/8"
DIM B	3 1/2"	4 1/2"
DIM C	3 15/16"	5"
DIM D	1/4"	3/8"
DIM E		
MOUNTING HOLES	11/16"	7/8"
SETSCREW	5/16-18	3/8-16
PART NO.	501	601

## COMPONENTS (continued)

### Hangers

#### Drop Rod Support Bracket

1. Used to support plain track when supplied with drop rods.
2. Fabricated from plain support bracket and steel tubing.
3. Top hole pre-drilled for appropriate drop rod.

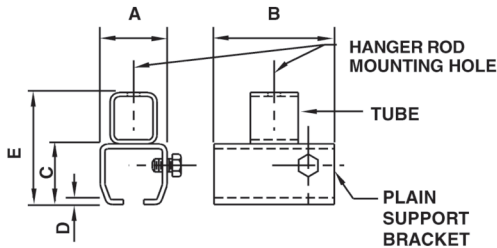


TRACK	500	600	700
WEIGHT LB.	3	6 1/2	9 1/2
DIM A	3 1/4"	3 15/16"	4 1/2"
DIM B	3 1/2"	4 1/2"	5"
DIM C	2 15/16"	3 11/16"	5 1/4"
DIM D	1/4"	5/16"	3/8"
DIM E	4 15/16"	6 11/16"	8 1/4"
HANGER ROD	5/8"Ø		3/4"Ø
PART NO.	500HB	600HB	700HB

### Hangers

#### Truss Track Drop Rod Hanger

1. Used to support truss track when supplied with drop rods.
2. Fabricated from structural steel.
3. Complete with proper nuts, bolts, lockwashers, and spacers.

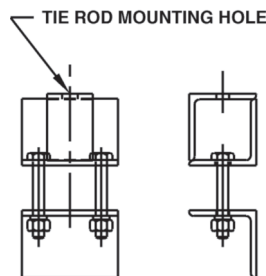


TRUSS STYLE TRACK	R500 R525	R530
TRUSS TUBE	2"	2 1/2"
TIE ROD DIA. or BOLT DIA.	5/8"	5/8"
WEIGHT LB.	4 1/2	5
PART NO.	FAHTB2	FAHTB25

### Hangers

#### Truss Track Flush Clamp

1. Furnished for direct clamping to overhead steel.
2. Complete with nuts, bolts, lockwashers, lindapters, and spacers.
3. Overhead beam size must be specified when ordering.

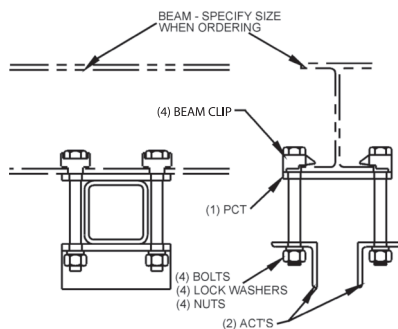


TRUSS STYLE TRACK	R520/R520C R525/R525C	R530/R530C
WEIGHT LB.	14	14
PART NO.	FAK-20	FAK-25

K-H-20 through K-H-30 maximum flange width 6"  
K-H-35 and K-H-40 maximum flange width 8.5"

# COMPONENTS (continued)

## Hangers Adjustable Beam Clamp


- Utilized to attach to overhead steel when using drop rod hangers.
- Furnished in two sizes:  
 C480 - Fits beams with 2-1/4" to 8" flange width, 7/16" max. thickness.  
 C482 - Fits beams with 4" to 10" flange width, 1/2" max. thickness.

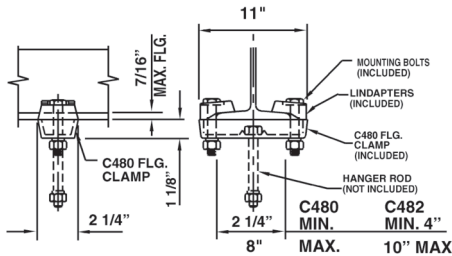

TRACK PROFILE	500	600	700	900
CLAMPS REQD.	1	1	1	2
HANGER ROD DIA	5/8"		3/4"	
PART NO.	FAC-480			
WEIGHT LB.	5 3/4			
PART NO.	C-482			
WEIGHT LB.	20			

## Hangers Hanger Kit Plain Track


- Standard kit furnished with C480 adjustable beam clamp, drop rod support bracket, and 12" rod.

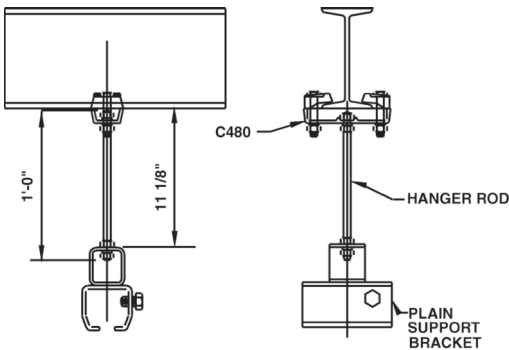

TRACK	500	600	700
PART NO.	FAK-CMP-500	FAK-CMP-600	FAK-CMP-700
WEIGHT LB.	11	17	23

## Hangers Hanger Kit Truss Track

- Standard kit furnished with C480 adjustable beam clamp, drop rod support bracket, and 12" rod.

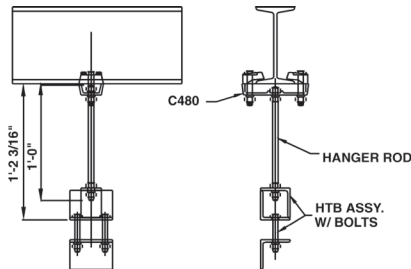


TRUSS STYLE TRACK	R520/R520C R525/R525C	R530/R530C
WEIGHT LB.	12	27
PART NO.	FAK-CMT-500	FAK-CMT-530

**LATERAL BRACING REQUIRED BY OTHERS.** Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc.

## COMPONENTS (continued)

### End Stops

1. Must be used at ends of all tracks to prevent trolley from leaving track profile when in use.
2. Bolt through connection supplied with rubber bumper, bolt, nut, and lockwasher.
3. May be used as intermediate stop to prevent workers from entering same area of track system.

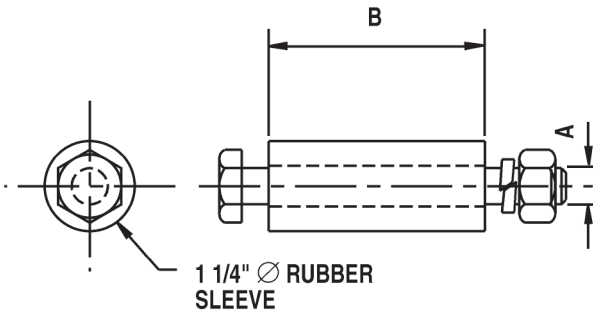


TRACK	500	600	700
WEIGHT LB.	1/2	1/2	1/2
DIM A	1/2"	1/2"	1/2"
DIM B	2"	2 5/8"	3"
PART NO.	FA500ES	FA600ES	FA700ES

NOTE: Must be used on ends of ALL tracks.

### Rotating Eye Trolley


1. All steel body.
2. Plastic wheels furnished as standard, equipped with anti-friction ball bearings for smooth and effortless movement. Steel wheels optional at no charge.
3. Rotating eye travels full 360° to allow complete freedom of movement without concern for twisting of lanyard or harness.

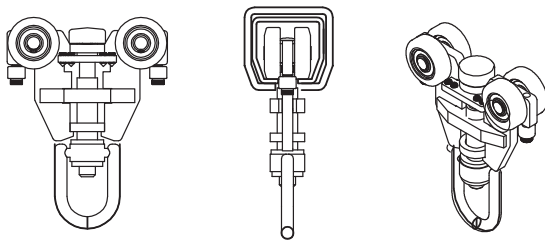

TRACK SERIES	TROLLEY	A	B	C	D
500 SERIES C/DST	FA525-AT	5 1/4"	2 9/16"	5 1/8"	1 1/2"
600 SERIES	FA624RI	5 5/16"	2 15/16"	6 1/4"	1 1/2"
700 SERIES	FA724RI	5 3/8"	4 1/8"	8 7/8"	1 1/2"


### End Trucks

1. Used to make crane bridge where lateral travel is desired.
2. All steel body.
3. Plastic wheels standard, steel are available.

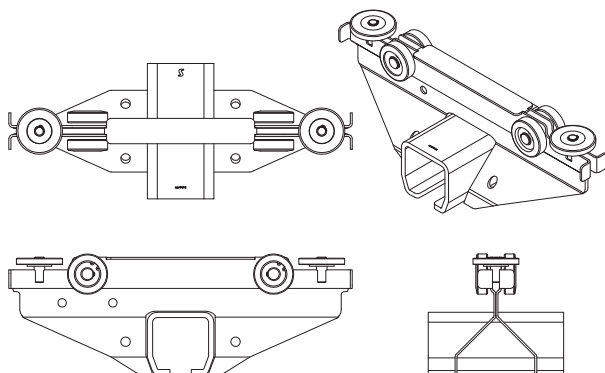


TRACK	500	600	700
CAPACITY	500	1000	2000
WEIGHT LB.	14	24	48
DIM A	3/8"	1/2"	5/8"
DIM B	1'-5 11/16"	1'-7 11/16"	1'-11 5/8"
DIM C	3 9/16"	4 3/16"	5 5/8"
DIM D	7"	8"	10"
PART NO.	1554SL	1654SL	1754SL

# ALUMINUM FALL ARREST TRACK

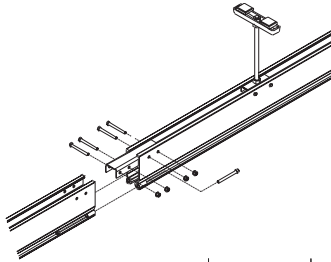


ALU-TRACK® with plain splice and standard hanger.

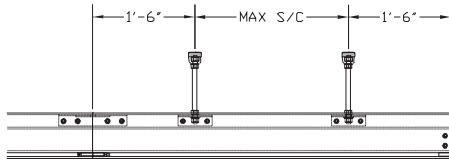

ALU-TRACK®			
TRACK SERIES	A	1 MAN** MAX S/C	2 MAN MAX S/C
306	6"	11'-6"	9'-6"
308	8"	20'	17'
REINFORCED ALU-TRACK®			
TRACK SERIES	A	1 MAN** MAX S/C	2 MAN MAX S/C
306	12.5"	30'	26'


**LATERAL BRACING REQUIRED BY OTHERS.** Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc.

## ALU-TRACK® Hoist Trolley

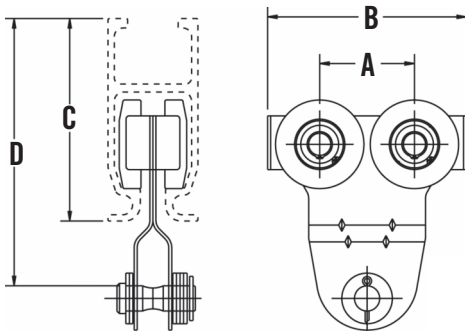

TRACK SERIES	TROLLEY	A	B	C	D
6" ALU	AT-HTK6-01	3"	6"	6"	8 1/16"
8" ALU	AT-HTK8-01	3 3/4"	7 7/8"	8"	10 9/16"

## ALU-TRACK® Hangers

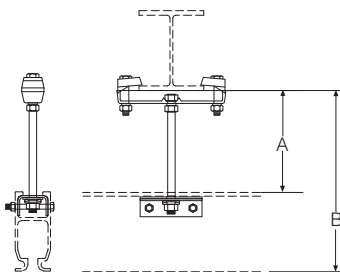

TRACK SPLICE HANGER KIT				
	306		308	
	AT-HK6-01-1.00	AT-HK6-01-2.00	AT-HK8-01-1.00	AT-HK8-01-2.00
A	10-3/8" 263.5MM	1'-10 3/8" 568.5MM	10 1/4" 260MM	1'-10 1/4" 565MM
B	1'-4 3/8" 416MM	2'-4 3/8" 721MM	1'-6 1/4" 463.5MM	2'-6 1/4" 921MM

**LATERAL BRACING REQUIRED BY OTHERS.** Rigid Lifelines recommends consulting a qualified professional architect or engineer in your local area to determine your building support adequacy. Considerations include your geographical region, snowfall, seismic loading, etc. Dimensions and weights are approximate and may change without notice. \*\*NOTE: If the same fall arrest system will be used to recover a fallen worker, a two man system must be specified.

# FALL ARREST SAFETY AND CONSIDERATIONS

## Fall Arrest Safety

1. Remove systems and components from service IMMEDIATELY if they have been subjected to fall impact until inspected by a competent person and deemed undamaged and suitable for use.
2. Promptly rescue employees in the event of a fall, or assure that they are able to rescue themselves.
3. Inspect systems prior to each use for wear, damage, and other deterioration; and remove defective components.
4. Do NOT attach fall arrest systems to guard rail systems or hoists.
5. Do NOT attach fall arrest systems to crane bridges unless specifically designed for such use by a qualified person.
6. Every fall arrest system should have a rescue plan to recover fallen workers. If the same fall arrest system will be used to recover a fallen worker, a two man system must be specified.

## Fall Arrest Considerations

Anyone working over a height of 4 ft. or more above a lower level with an unprotected side or edge in general industry shall be protected from falling.

Anchorage used for attachment of personal fall arrest equipment shall be independent and capable of supporting at least 5000 pounds per employee attached, or designed, installed and used as part of a complete fall arrest system which maintains a safety factor of two (2) and under the supervision of a qualified person.

Per OSHA 1926.500, Subpart M, "Anchorages used for attachment of personal fall arrest equipment shall be independent and capable of supporting at least 5000 pounds per employee attached, or designed installed and used as part of a complete fall arrest system which maintains a safety factor of two (2) and under the supervision of a qualified person.

Personal fall arrest systems when stopping a fall shall:

1. Be rigged so that an employee can neither free fall more than 6 feet nor contact any lower level.
2. Bring an employee to a complete stop and limit maximum deceleration distance an employee travels to 3.5 feet.
3. Have sufficient strength to withstand twice the potential impact of an employee free falling a distance of six (6) feet or the free fall distance permitted by the system, whichever is less.

**Note: Consult factory for custom design if maximum arresting force exceeds 900 lb.**

Personal fall arrest systems shall not be attached to guardrail systems.

Systems shall be inspected prior to each use for wear, damage and other deterioration.

If the system is to be used by an employee having a combined person and tool weight of more than 310 pounds, then the system must be appropriately modified.

**Personal Fall Arrest Systems and components subjected to impact loading shall be immediately removed from service and shall not be used again for employee protection until inspected and determined to by a competent person to be undamaged and suitable for reuse.**

**Check bolts for tightness annually, or more frequently if the system is subjected to extreme environments or severe service.**



## FALL ARREST COMPONENT AND SYSTEM INSTALLATION REQUIREMENTS

Engineered Fall Arrest components and standard systems displayed in Rigid Lifelines sales literature are pre-engineered for vertical loading applications up to a maximum of 30 degrees off-vertical and comply with all regulations as defined by ANSI Z359.1 and OSHA 1926.502 for engineered components.

Engineered Fall Arrest custom systems are application specific, and take into consideration the actual, site specific, use of the system. This includes defined dimensions of height and cantilever, and any lateral loading (non-vertical loading) that may exist.

When Rigid Lifelines Fall Arrest components are ordered individually, each component must be employed and maintained in accordance with all ANSI and OSHA regulations.

### INSTALLATION INSTRUCTIONS

Install components as defined in this manual and in accordance with ANSI and OSHA regulations. If the system is a standard engineered Fall Arrest system, install the system(s) as defined on the provided assembly drawings included in the (reference) Installation and Maintenance Manuals, P/N 103-0010, 103-0011, or 103-0033. Installation and Maintenance Manuals, P/N 103-0010, 103-0011, or 103-0033 are crane installation manuals and provided for installation guidance reference only.

If the system has been custom engineered as custom system by Rigid Lifelines, install the system(s) as defined on the provided custom assembly drawing.

**NOTE: Rigid Lifelines fall arrest components are similar to crane designs, but may never be used as a crane.**



**Never use a Rigid Lifelines Fall Arrest component or system as a crane or to lift objects, unless specifically engineered by Rigid Lifelines to do so.**

### PERFORMANCE TESTING OF FALL ARREST COMPONENTS AND SYSTEMS

Rigid Lifelines recommends following the ANSI requirements for dynamic performance testing of all Rigid Lifelines fall arrest components and systems. The dynamic performance test, as defined by ANSI Z359.1-2007 consists of a 220 lb test weight dropped for a total 6-foot free fall before a 900 lb MAF (maximum arresting force) lanyard engages to decelerate the load. A two-man system will use two separate weights (using one 900 MAF lanyard per weight), a three-man system will use three separate weights, and so on. ANSI standards are available at [www.ansi.org](http://www.ansi.org)

# INSPECTION OF FALL ARREST SYSTEMS

## Before Each Use:

- Operators should visually inspect the fall arrest system before each use.

## Annual Inspection:

1. Inspect all bolts for tightness.
2. Inspect all components for cracks, bends.
3. Inspect any pivot bolts or pivot eye bolts for bent shanks or bent shafts. If shaft is bent more than .010" replace. Replace any components if threads are deteriorated, or if there are any imperfections.
4. Inspect track flanges. If lower flanges are bent more than 5 degrees, replace track. If flange thickness has decreased more than 10% through wear, erosion, or corrosion, replace.

## Inspection After a Fall:

Rigid Lifelines components must be inspected by a competent person (as defined by ANSI & OSHA) in the event of a fall. If the Rigid Lifelines provided components pass inspection all Rigid Lifelines components can be immediately placed back into service.


A competent person should inspect for the following:

1. Inspect all components for straightness. Replace any bent components.
2. Inspect all components for cracks.
3. Inspect all bolts for tightness.
4. Inspect any pivot bolts or pivot eye bolts for bent shanks or bent shafts. If shaft is bent more than .010" replace. Replace any components if threads are deteriorated, or if there are any imperfections.
5. Inspect track flanges. If lower flanges are bent more than 5 degrees replace track.


# LATERAL BRACING FOR MONORAIL

## SWAY BRACING REQUIREMENTS


1. SWAY BRACING IS REQUIRED FOR ALL SYSTEMS WITH HANGER RODS.
2. BRACING IS REQUIRED AT EACH END OF SYSTEM IN BOTH DIRECTIONS. (LATERALLY AND LONGITUDINALLY).
3. INTERMEDIATE BRACING IS REQUIRED ON ONE SIDE OF MONORAIL
4. AT EACH HANGER CLOSEST TO RUNWAY SPLICES.
5. SWAY BRACING SHALL BE USED TO REDUCE LATERAL STRESSES ON HANGER RODS AND HELP PREVENT SYSTEM HARDWARE FROM LOOSENING AND FATIGUE DUE TO CYCLIC LOADING.
6. RIGID LIFELINES DIVISION OF SPANCO IS NOT RESPONSIBLE FOR DESIGN OF SUPPORTING STRUCTURES OR ATTACHMENTS OF SYSTEM HANGERS AND/OR BRACING TO SUPPORTING STRUCTURES. ALL SUPPORTING STRUCTURES SHALL BE DESIGNED BY A QUALIFIED PERSON USING ALL APPLICABLE LOCAL, STATE, AND NATIONAL CODE REQUIREMENTS.
7. SUPPORT STRUCTURES SHALL BE DESIGNED PER REQUIREMENTS OF "AMERICAN INSTITUTE OF STEEL CONSTRUCTION" (AISC), SPECIFICATION FOR DESIGN, FABRICATION AND ERECTION OF STRUCTURAL STEEL FOR BUILDINGS. SPECIFIC ATTENTION SHALL BE GIVEN TO REQUIREMENTS FOR IMPACT AND DEFLECTION TO MAINTAIN THE INTEGRITY OF THE COMPLETE BUILDING / FALL ARREST SYSTEM. ALL RESPONSIBILITY FOR THE FINAL DESIGN SHALL REST WITH THE QUALIFIED PERSON AND NOT RIGID LIFELINES DIVISION OF SPANCO.
8. ALL BRACING SHOWN IN THIS DRAWING IS TO BE USED AS A GUIDE ONLY AND SHALL BE CONSIDERED AS THE MINIMUM REQUIRED FOR ANY RIGID LIFELINES DIVISION OF SPANCO CEILING MOUNTED SYSTEM. MINIMUM PIPE SIZE SHALL BE 1"Ø SCH.40 FOR SYSTEMS WITH HANGER RODS UP TO 6'-0" LONG. SYSTEMS WITH RODS LONGER THAN 6'-0" SHALL BE CONSIDERED TO REQUIRE SPECIAL DESIGN ATTENTION.
9. OTHER BRACING MATERIALS AND DESIGNS MAY BE ACCEPTABLE PROVIDED THEY ARE DESIGNED BY A QUALIFIED PERSON.

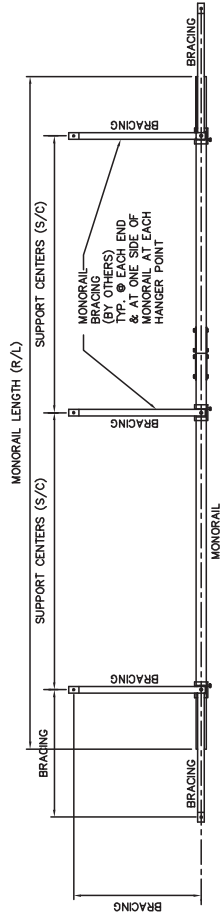

TOP VIEW


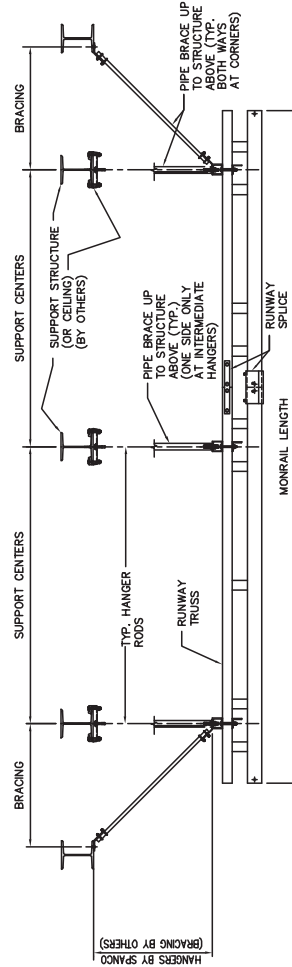


SIDE VIEW

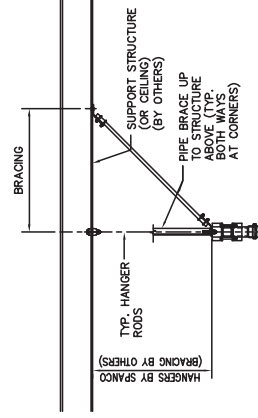



END VIEW

# FAC-480 ASSEMBLY INSTRUCTIONS

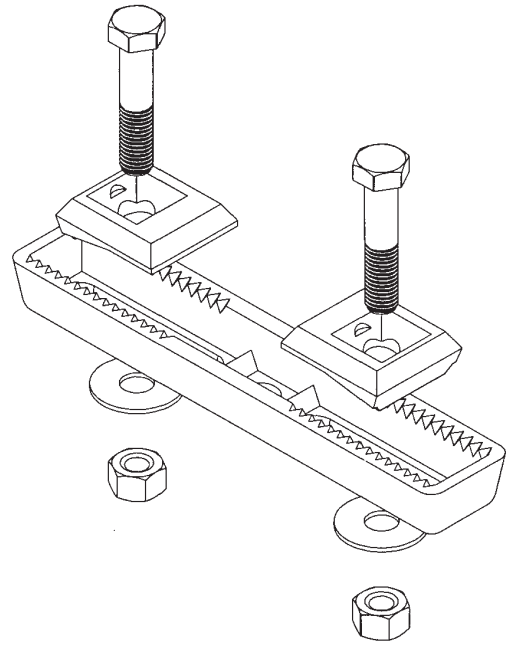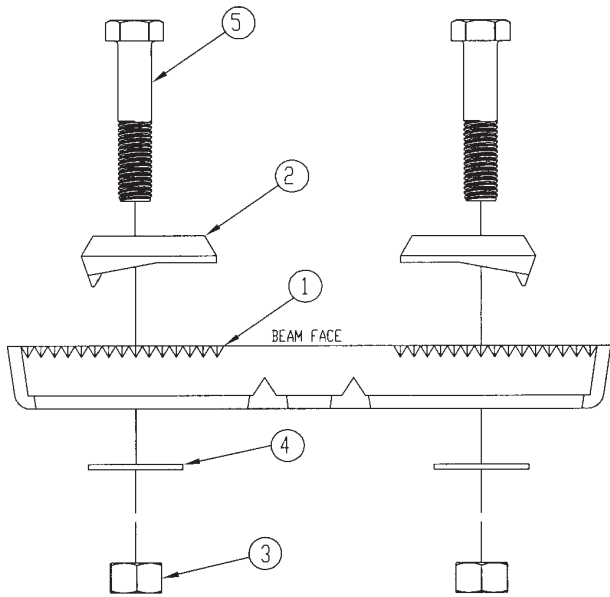

1. (1) C-480-BASE
2. (2) C-480-CLAMP
3. (2) C-480-LOCK NUT
4. (2) C-480-FLATWASHER
5. (2) C-480-BOLT

TORQUE ALL FASTENERS:  
 5/8" - 108 FT-LBS  
 3/4" - 210 FT-LBS

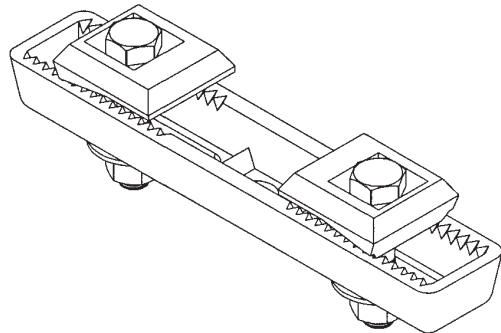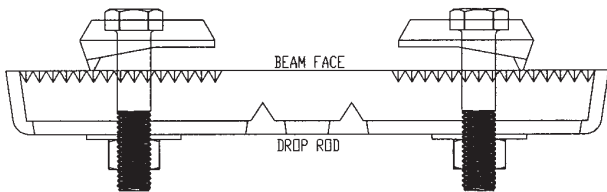

# BAR JOINT HANGER ASSEMBLY

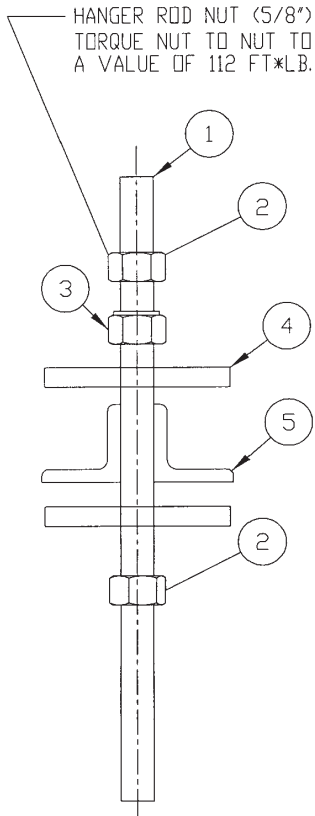


FIGURE 1


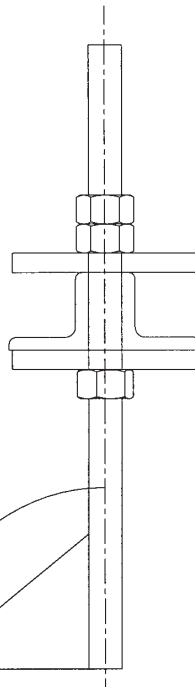


FIGURE 2

ROD MUST HANG STRAIGHT DOWN AFTER INSTALLATION. DO NOT BEND ROD

NOTES:

1. NUTS MUST BE TORQUED TO PREVENT ROD FROM TURNING OUT.
2. BOLT PADS MUST BE POSITIONED SUCH THAT THEY SEAT FULLY ON BAR TRUSS.
3. TIGHTEN NUTS 2 & 3 TO PULL BOLT PADS TIGHTLY AGAINST BEAM AS SEEN IN FIGURE 2.

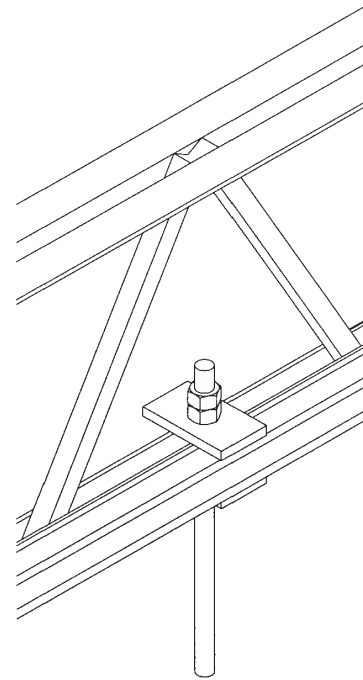

NOTE:  
 1) MAX LOAD 5650 LB  
 2) FOR HORIZONTAL TRUSSES ONLY




1. (REF) HANGER ROD (5/8")
2. (2) 5/8"-11 NC HEX NUTS
3. (1) LOCK NUT (5/8")
4. (2) 5/8" BOLT PAD
5. (REF) EXISTING BUILDING STRUCTURE

RIGID LIFELINES IS NOT RESPONSIBLE FOR ENGINEERING, DESIGN, VALIDATION, OR QUALITY OF SUPPORT STRUCTURE.

TORQUE ALL FASTENERS:  
 5/8" - 108 FT-LBS  
 3/4" - 210 FT-LBS

# SLOPED HANGER

## Assembly Instructions:

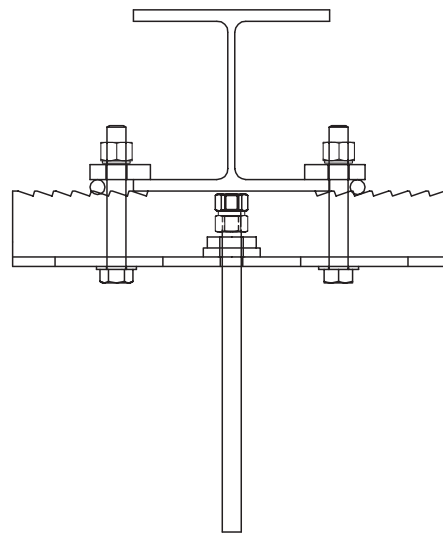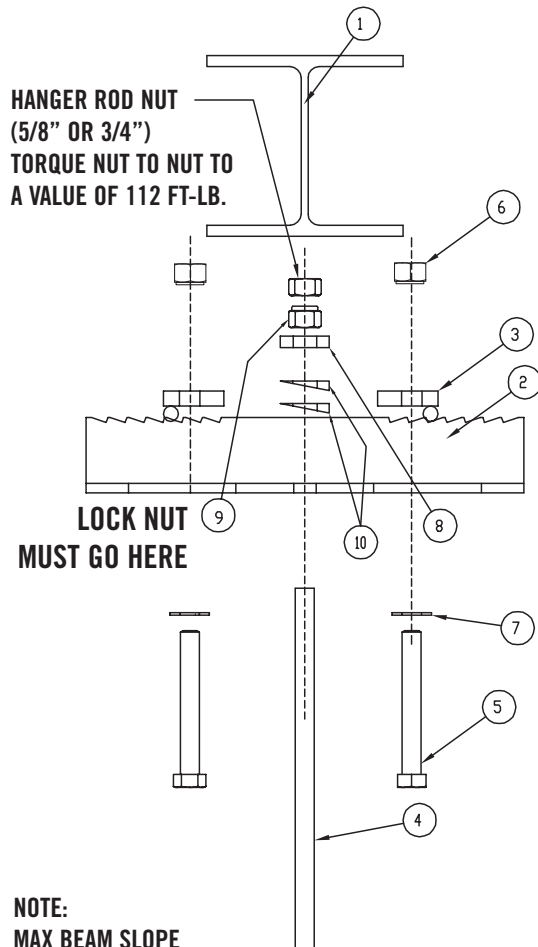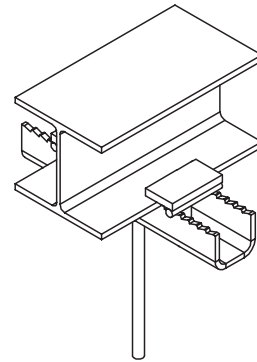

**NOTE:**  
MAX BEAM SLOPE  
19°, (3" PER FOOT)

RIGID LIFELINES IS NOT RESPONSIBLE  
FOR ENGINEERING, DESIGN, VALIDATION  
OR QUALITY OF SUPPORT STRUCTURE.

1. Nuts must be torqued to prevent rod from turning out.
2. Clips must be positioned such that they seat fully in cutout, with the bolt as close as possible to the edge of the beam flange.
3. Position clips such that they are an equal number of cutouts from the center.
4. Tighten nut 6 to pull clamp channel tightly against beam.

1. (Ref) Existing Building Structure
2. (1) Beam Clamp Channel
3. (2) Beam Clamp Clip
4. (Ref) Hanger Rod (5/8" or 3/4")
5. (2) 5/8"-11 NC X 4 1/2", GR 5
6. (2 Ref) 5/8"-11 NC Hex Nuts
7. (2) 5/8" Flat Washer
8. (1) Spherical Washer (5/8" or 3/4")
9. (3) Lock Nut (5/8" or 3/4")
10. (2) Bevel Washer

# BEAM CLAMP - CHART

## CHART

BEAM THICKNESS (IN)	5/8" DIAMETER LINDAPTER	3/4" DIAMETER LINDAPTER
1/4"	S	S
5/16"	M	S
3/8"	S+CW	M
7/16"	L	S+CW
1/2"	S+2CW	L
9/16"	L+CW	M+CW
5/8"	M+P1	L+CW
11/16"	L+2CW	S+P1
3/4"	L+P1	S+3CW
13/16"	L+3CW	M+P1
7/8"	M+2CW+P1	M+3CW
15/16"	M+2P2	M+CW+P1
1"	L+2CW+P1	S+2CW+P1

**S = SHORT TAIL**




 
 
 
**M = MEDIUM TAIL**

**L = LONG TAIL**

**CW = CLIP WASHER**

**P1 = PACKING**


**P2 = PACKING**

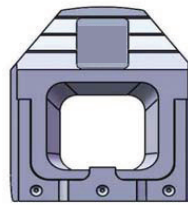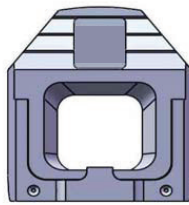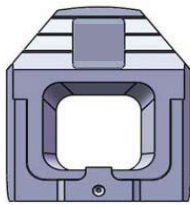


**SHORT TAIL  
(1) DOT  
(OR NO DOT)**

**MEDIUM TAIL  
(2) DOT**

**LONG TAIL  
(3) DOT**

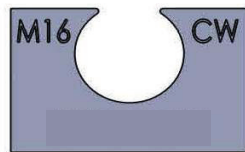

**CLIP WASHER  
(CW)**

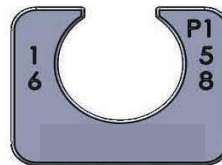

**PACKING  
(P1)**



\*Download and print blank checklists from the Literature link at rigidlifelines.com

Rigid Lifelines Annual Fall Protection  
Systems Inspection Checklist



Inspector Name: \_\_\_\_\_ Date: \_\_\_\_\_

System Number: \_\_\_\_\_ Model: \_\_\_\_\_

	Inspection Point	Inspection Result (✓)	
		Pass	Fail
1)	Check that the beam clamps are installed horizontal within +/- 5°.		
2)	Check that end stop bolts are present and have locknuts installed.		
3)	Using a torque wrench, check that all bolts are torqued to values shown in manual.		
4)	Check that splices, if supplied, are centered on track joints.		
5)	Verify that capacity signs are present, attached, and legible.		
6)	Verify that the number of trolleys matches the value on the capacity sign.		
7)	Verify that the fall arrest system is not being used for material handling.		
8)	Check the track for levelness within +/- 1/4" per 20 feet of track.		
9)	Check the track flanges. Track flanges cannot be bent downward more than 5°.		
10)	Check the track thickness. Track thickness cannot be worn more than 10°.		
11)	Check all systems welds for cracks.		
12)	Check system components for corrosion and bent or damaged areas.		
13)	Verify trolley can traverse entire length of track without snags.		
14)	Check connector trolley for visibly bent eye bolt, broken welds, or excessive wear or corrosion.		
15)	Test the operation of the connector trolley eye bolt <b>and</b> wheels can rotate freely.		
16)	Verify that no "fall indicator" grooves are visible on anchor trolley center shaft. (See operators manual for details.)		
17)	Test the anchor trolley engagement function by applying at least 90 lbs. of weight to swivel hook. The trolley should not roll.		
18)	Check system components for loose or missing parts.		
19)	Check system support structure for stability.		
20)	Verify that C-480's are installed properly and fasteners are torqued to proper values. (See operations manual for details)		



Rigid Lifelines Fold-Away Fall Protection Systems Inspection Checklist



Inspector Name: \_\_\_\_\_ Date: \_\_\_\_\_

System Number: \_\_\_\_\_ Model: \_\_\_\_\_

Inspection Point	Inspection Result (3)	
	Pass	Fail
1) Test the operation of the support jibs and verify the jibs and connector pivots rotate freely.		
2) Check the support jibs for excessive bearing wear.		
3) Check the support jibs for properly installed and tightened pivot bolts.		
4) Check the support jibs for loose or missing fasteners.		
5) Check the jib connector pivots for bent or broken parts, or bent or broken welds.		
6) Check support structure for stability.		

\*Download and print blank checklists from the Literature link at [rigidlifelines.com](http://rigidlifelines.com)







**Rigid Lifelines**  
730 Hemlock Road  
Suite 104  
Morgantown, PA 19543

Toll Free: (844) 467-4443  
Local: (610) 286-8030  
Fax: (610) 286-6408

[RigidLifelines.com](http://RigidLifelines.com)

### **TEN-YEAR EQUIPMENT WARRANTY**

Rigid Lifelines warrants the engineered track equipment, wearable end truck wheels, and Anchor Trolley™ wheels and teeth to be free from defects in material and workmanship for a period of ten (10) years commencing on the date of installation.

### **TWO-YEAR EQUIPMENT WARRANTY**

Rigid Lifelines warrants XSPlatforms Fall Protection components to be free from defects in material and workmanship for a period of two (2) years commencing from the date of installation.

### **ONE-YEAR EQUIPMENT WARRANTY**

Rigid Lifelines warrants the motorized products and drive components to be free from defects in material and workmanship for a period of one (1) year, commencing on the date of shipment to the first retail purchaser ("Purchaser").

Rigid Lifelines warrants all Rigid Lifelines fall protection soft goods, devices, connectors, and accessories to be free from defects in material and workmanship for a period of one (1) year, commencing on the date of shipment to the first retail purchaser ("Purchaser").

Rigid Lifelines is dedicated to offering superior service and quality products to all of our customers. If you would like to contact a customer service representative, please call the following number: 1 (844) 467-4443. We will be happy to assist you in any way that we can.

These warranties do not extend to equipment which has been subject to misuse, use in excess of rated capacity, negligent operation, use beyond Rigid Lifelines published service factors, improper installation or maintenance, adverse environments, and does not apply to any equipment which has been repaired or altered without Rigid Lifelines written authorization. This warranty is void for any product that is designed to deform or absorb energy during a fall event and needs to be replaced after a fall event has occurred.

Written notice of any claimed defect must be given to Rigid Lifelines within thirty (30) days after such defect is discovered. Rigid Lifelines obligation, and Purchaser's sole remedy under this warranty is limited to, at Rigid Lifelines discretion, the replacement or repair of the equipment at Rigid Lifelines factory or at a location approved by Rigid Lifelines. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES WHATSOEVER WHETHER EXPRESS, IMPLIED, OR STATUTORY. SELLER MAKES NO WARRANTY AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE EQUIPMENT AND MAKES NO OTHER WARRANTY, EITHER EXPRESS OR IMPLIED.

Rigid Lifelines shall not be liable, under any circumstances, for any indirect, special, or consequential damages including (but not limited to): lost profits, increased operating costs, or loss of production. This warranty shall not extend to damages including (but not limited to): lost profits, increased operating costs, or loss of production. This warranty shall not extend to any components or accessories not manufactured by Rigid Lifelines (example: casters), with the exception of the components, systems, or accessories involved with XSPlatforms, and purchaser's remedy for such components and accessories shall be determined by the terms and conditions of any warranty provided by the manufacturer of such components and accessories.

### **SERVICE POLICY**

1. Obtain as much information as possible concerning the problem through personal observation by yourself or other authorized personnel familiar with the job and equipment: include model, serial and/or part numbers, voltages, speeds and any other special identifying features. Be prepared to discuss the situation in detail.
2. All authorized labor charges will be based on straight time. Hourly rates, estimated man hours, and not to exceed total dollar amount required for corrections are to be agreed upon before authorization is given. There will be no allowances for overtime except in dire emergencies and then only with prior approval.
3. A verbal agreement may be reached immediately on both the method of correction and the approximate cost. A warranty authorization number will be assigned for the specific incident. A confirming written authorization will be forwarded to the distributor.
4. The distributor must send an itemized invoice, showing our release number or invoice number and warranty authorization number after authorized corrections have been made. A credit memo will be issued by accounting after the invoice has been received and approved. Warranty charges ARE NOT to be deducted from outstanding open account invoices under any circumstances.
5. Any field corrections made prior to an authorization by Rigid Lifelines will not be accepted as a warranty charge or the responsibility of Rigid Lifelines. Any modification to the equipment made without the prior approval of the seller will void all warranties. A verbal authorization for modification may be obtained, in which event a warranty authorization number will be assigned for the specific modification. A confirming written authorization will be forwarded to the distributor.