

# INSTALLATION AND MAINTENANCE MANUAL LM CHAIN HOIST

## LOADMATE<sup>®</sup> LM05 SERIES II

English

STD-R-KHA-F-CQD-ENG



**THIS PAGE INTENTIONALLY LEFT BLANK**

 **CAUTION:** Read the instructions supplied with the product before installation and commissioning.

 **CAUTION:** Keep the instructions in a safe place for future reference.

**Table of contents**

**1 INTRODUCTION .....5**

1.1 Contact Information.....5

1.2 Warranty.....5

1.3 Disclaimer .....5

1.4 Safety .....6

1.5 Placards and Instructions.....8

**2 INSTALLATION.....9**

2.1 General .....9

2.2 Lubrication.....9

2.3 Mounting ..... 10

2.4 Load Hook Throat Opening..... 10

2.5 Electrical Connection ..... 11

2.6 Three Phase Power Connections ..... 12

2.7 Single Phase Power Connections ..... 13

**3 INITIAL START-UP ..... 14**

3.1 General ..... 14

3.2 Correcting the Direction of Hook Travel..... 14

3.3 Operational Checks – No Load..... 15

3.4 Operational Checks – With Load ..... 15

**4 HOIST OPERATION..... 16**

**5 LOW HEADROOM TROLLEY ..... 17**

5.1 Description – Technical Characteristics (low headroom trolley)..... 17

5.1.1 Technical Characteristics ..... 17

5.1.2 Environmental Data..... 18

5.1.3 Optional equipment ..... 18

**6 SWIVEL TROLLEY ..... 19**

6.1 Description – Technical Characteristics (swiveling trolley to 3.2 tons) ..... 19

6.1.1 Technical Characteristics ..... 19

6.2 Installation of Swivel Trolley..... 20

6.3 Electric Swivel Trolley ..... 21

6.3.1 Swiveling trolley (3.2 tons) ..... 22

6.3.2 Swiveling trolley (3.2 to 5.0 tons) (NOT LOCALLY AVAILABLE) ..... 22

6.3.3 Procedure to adjust swivel trolley guide rollers ..... 23

**7 MAINTENANCE ..... 24**

7.1 Basic Hoist Construction ..... 24

7.2 Motor / Body..... 24

7.3 Hoist Motor Brake and Load-Limiting Device ..... 25

7.3.1 Slip Clutch Operation ..... 25

7.3.2 Slip Clutch Adjustment after Installation..... 27

7.3.3 Hoist Motor Brake Adjustment (See *Figure 11*) ..... 28

7.3.4 Replacement Criteria for Motor Brakes..... 29

7.4 Load Chain..... 30

7.4.1 General..... 30

7.4.2 Maintenance Inspection ..... 30

7.4.3 Load Chain Specifications (see *Figure 12*) ..... 32

7.4.4 Removing the Load Chain..... 32

7.4.5 Installing the Load Chain..... 33

7.5 Fall Stop Assembly ..... 35

7.5.1	General.....	35
7.5.2	Removing fall stop ( <i>Figure 14</i> ).....	35
7.5.3	Fall Stop Installation ( <i>Figure 14</i> ).....	35
7.6	Chain Container.....	36
7.6.1	Removing Chain Container ( <i>Figure 15</i> ).....	36
7.6.2	Installing Chain Container ( <i>Figure 15</i> ).....	36
7.7	Vinyl Chain Bag (optional).....	37
7.7.1	Installing Vinyl Chain Bag ( <i>Figure 16</i> ).....	37
7.8	Limit Switches.....	38
7.8.1	Upper and Lower Travel Safety Limit Switch.....	38
7.8.2	Upper and Lower Rotary Travel Limit Switch (Optional Only on 3-Phase units).....	39
7.9	Hooks.....	40
7.9.1	General.....	40
7.9.2	Inspection.....	41
7.9.3	Hook Dimensions and Specifications.....	41
7.9.4	Top Hook.....	42
7.10	Control Changes and Fuses.....	43
7.10.1	Control Circuit Fuses.....	43
7.10.2	Three-phase Single-speed Voltage Changes:.....	44
7.11	Control Panel Layout – Three Phase – Two-speed Hoist – 208/230/460 Volts.....	45
7.12	Three Phase – Wiring Diagram – Two-speed Hoist - 208/230/460 volts – Power Circuit.....	46
7.13	Three Phase – Wiring Diagram – Two-speed Hoist - 208/230/460 volts – Control Circuit.....	47
7.14	Control Panel Layout – Three Phase – Two-speed Hoist – 575 volts.....	48
7.15	Three Phase – Wiring Diagram – Two-speed Hoist – 575 volts – Power Circuit.....	49
7.16	Three Phase – Wiring Diagram – Two-speed Hoist – 575 volts – Control Circuit.....	50
7.17	Control Panel Layout – Three Phase – Single Speed Hoist – 208/230 volts.....	51
7.18	Control Panel Layout – Three Phase – Single Speed Hoist – 460 volts.....	52
7.19	Three Phase – Wiring Diagram – Single Speed Hoist – 208/230/460 volts – Power Circuit.....	53
7.20	Three Phase – Wiring Diagram – Single Speed Hoist – 208/230/460 volts – Control Circuit.....	54
7.21	Power Supply Layout – Single Phase – Control Panel – 115V.....	55
7.22	Single Phase – Wiring Diagram – 115V Power Circuit.....	56
7.23	Single Phase – Wiring Diagram – Control Circuit.....	57
7.24	Wiring Diagram – Single Phase – 3 Button – Push Button.....	58
7.25	Wiring Diagram – 5 Button – Push Button.....	59
7.26	Wiring Diagram – 7 Button – Push Button.....	60
<b>8</b>	<b>PREVENTATIVE MAINTENANCE.....</b>	<b>61</b>
8.1	Maintenance and Inspection Table.....	61
8.2	Lubrication.....	62
8.3	Recommended technical support for various spare parts.....	63
8.4	Screw Tightening Torque (lb-ft) Specifications.....	63
8.5	Troubleshooting.....	64
<b>9</b>	<b>PARTS ILLUSTRATION.....</b>	<b>66</b>
9.1	Hoist Body – Three Phase Power Supply.....	66
9.2	Hoist Body – Single Phase Power Supply.....	68
9.3	Helical Gear Mechanism & Brake.....	70
9.4	Lifting Assembly.....	72
9.5	Chain Guide Assembly – With Limit Switches.....	74
9.6	Controls.....	75
9.7	Rotary Limit Switch.....	76
9.8	Double Brake Mechanism.....	77
9.9	Low Headroom Trolley.....	78
9.9.1	Low Headroom Trolley (Drive Components).....	78
9.9.2	Low Headroom Trolley (Suspension Components).....	80
9.10	Electric trolley (Swiveling trolley 0 to 3.2 Tons (3200 Kg)).....	82
9.11	Push Button Assembly – Horizontal Pairs of Buttons.....	84
9.12	Pushbutton Assembly – Horizontal Pairs of Buttons.....	85
9.13	Push Button Assembly – Vertical Pairs of Buttons (Option).....	86
9.14	Push Button Assembly – Vertical Buttons (Option).....	88

# 1 INTRODUCTION

## 1.1 Contact Information

Please do not hesitate to use the following contact information in the event that you may need assistance:

### R&M MATERIALS HANDLING, INC.

4501 Gateway Boulevard

Springfield, OH 45502

General Telephone: 937 - 328-5100

Toll Free Telephone (US): 800 - 955-9967

General Fax: 937 - 325-5319

Parts Department Fax (US): 800 - 955-5162

Parts Dept. Fax (other): 937 - 328-5162

Website: [www.rmhoist.com](http://www.rmhoist.com)

## 1.2 Warranty

All sales are subject to the [R&M Materials Handling, Inc. Standard Terms and Conditions of Sale](#) (Revision 101707), a copy of which is available at [www.rmhoist.com](http://www.rmhoist.com) or upon request from [R&M Materials Handling, Inc.](#) customer service/sales representatives and the terms of which are incorporated as if fully rewritten herein.

## 1.3 Disclaimer

This Manual has been prepared by [R&M MATERIALS HANDLING, INC.](#) to provide information and suggestions for hoist installation, maintenance, and inspection personnel. This manual should be used in conjunction with the [LoadMate® Electric Chain Hoist Operator's Manual](#) to teach safe operating practices to all personnel associated with hoist operations and maintenance.

It is **NOT** intended that the recommendations in this manual take precedence over existing plant safety rules and regulations or OSHA regulations. However, a thorough study of the following information should provide a better understanding of proper installation, maintenance, and inspection procedures that are to be followed in order to afford a greater margin of safety for people and machinery in the area of hoist operations.

It must be recognized that this is a manual of recommendations for the Hoist Installation, Maintenance, and Inspection personnel and its use is permissive not mandatory. It is the responsibility of the hoist owner to make personnel aware of all federal, state, and local codes and regulations. The owner is responsible for providing instruction and insuring that certain installation, maintenance, and inspection personnel are properly trained.

## 1.4 Safety

**Read and understand this manual before using the hoist.**

Important issues to remember during installation, operation, maintenance, and inspection are provided at the hoist control stations, at various locations on the hoist, in this manual, and in the [LoadMate® Electric Chain Hoist Operator's Manual](#). These issues are indicated by **DANGER**, **WARNING**, or **CAUTION** instructions or placards that alert personnel to potential hazards, proper operation, load limitations, and more.



**DANGER:** Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.



**WARNING:** Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



**CAUTION:** Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**Taking precedence over any specific rule, however, is the most important rule of all:**

**“USE COMMON SENSE”**

It is a responsibility of the hoist owner / user to establish programs to:

1. Train and designate hoist operators, and
2. Train and designate hoist inspectors / maintenance personnel.

The words **SHALL** and **SHOULD** are used throughout this manual in accordance with definitions in the ASME B30 standards as follows:

**SHALL** indicates a rule is mandatory and must be followed.

**SHOULD** indicates a rule is a recommendation, the advisability of which depends on the facts in each situation.

Hoist operation, hoist inspection, and hoist maintenance personnel training programs should be based on requirements in accordance with the latest edition of:

- **ASME B30.16 Safety Standard for Overhead Hoists ( Underhung )**

Such training should also provide information for compliance with any Federal, State, or Local Code requirements, and existing plant safety rules and regulations.

If an overhead hoist is installed as part of an overhead crane or monorail system, training programs should also include requirements in accordance with the latest editions, as applicable, of:

- **ASME B30.2 Safety Standard for Overhead and Gantry Cranes, Top Running Bridge, Single or Multiple Girder, Top Running Trolley Hoist**
- **ASME B30.11 Safety Standard for Monorails and Underhung Cranes**
- **ASME B30.17 Safety Standard for Overhead and Gantry Cranes, Top Running Bridge, Single Girder, Underhung Hoist.**

**NOTICE:**

It is a responsibility of the owner / user to install, inspect, test, maintain, and operate a hoist in accordance with the ASME B30.16 Safety Standard, OSHA Regulations, and ANSI / NFPA 70, National Electric Code. If the hoist is installed as part of a total lifting system, it is also the responsibility of the owner / user to comply with the applicable ASME B30 volume that addresses other types of equipment used in the system.



Further, it is the responsibility of the owner / user to require that all personnel who will install, inspect, test, maintain, and operate a hoist read the contents of this manual, [LoadMate® Electric Chain Hoist Operator's Manual](#), ASME B30.16 Safety Standards for Overhead Hoists (Underhung), OSHA Regulations, and ANSI / NFPA 70, National Electric Code. If the hoist is installed as part of a total lifting system, all personnel must also read the applicable ASME B30 volume that addresses other types of equipment used in the system.



**DANGER:** Failure to read and comply with any one of the limitations noted in this manual can result in product failure, serious bodily injury or death, and / or property damage.

[R&M MATERIALS HANDLING, INC.](#) has no direct involvement or control over the hoist's operation and application. Conforming to good safety practices is the responsibility of the owner, the user, and its operating personnel.

Only those Authorized and Qualified Personnel who have shown that they have read and have understood this manual and the [LoadMate® Electric Chain Hoist Operator's Manual](#) should be permitted to operate the hoist.

The owner / user **SHALL** ensure that all Operators read and understand the [LoadMate® Electric Chain Hoist Operator's Manual](#) prior to operating the hoist.

## 1.5 Placards and Instructions

READ and OBEY all Danger, Warning, Caution, and Operating Instructions on the hoist and in this manual and [LoadMate® Electric Chain Hoist Operator's Manual](#). Make sure that all placards are in place and legible.

Failure to comply with safety precautions in this manual and on the hoist is a safety violation that may result in serious injury, death, or property damage.



## 2 INSTALLATION



**DANGER:** Before installing, removing, inspection, or performing any maintenance on a hoist, the main switch shall be de-energized. Lock and tag the main switch in the de-energized position in accordance with ANSI Z244.1. Follow other maintenance procedures outlined in this manual and ASME B30.16.

### 2.1 General

Prior to installation, the unit shall be checked thoroughly for damage during shipment or handling at the job site.

Each complete electric chain hoist is load tested at the factory at 125% of the nameplate-rated capacity.

All hoists are designed for the type of mounting specified by the purchaser. The adequacy of the supporting members (monorail beams, cranes, hangers, supports, framing, etc.) is the responsibility of user / owner and shall be determined or verified by qualified personnel.

Read the instructions contained in this manual and the [LoadMate® Electric Chain Hoist Operator's Manual](#) as well as any other related manuals. Observe the warning tags attached to the unit before the installation is started.

### 2.2 Lubrication

The hoist gear case comes completely pre-lubricated with grease.

Note: Open trolley wheel gearing has not been greased at the factory. See the trolley manual for proper gear lubricant to use before installing hoist.


The load chain requires lubrication prior to first use. Chain lubricant is included with shipment of each new chain hoist.

## 2.3 Mounting

Below are three types of mounting:

1. Hook Mounted
2. Base Mounted
3. Coupling Mounted
4. Trolley Mounted – NOT SHOWN – is accomplished via a Hook or Trolley Coupling to the Trolley Assembly.

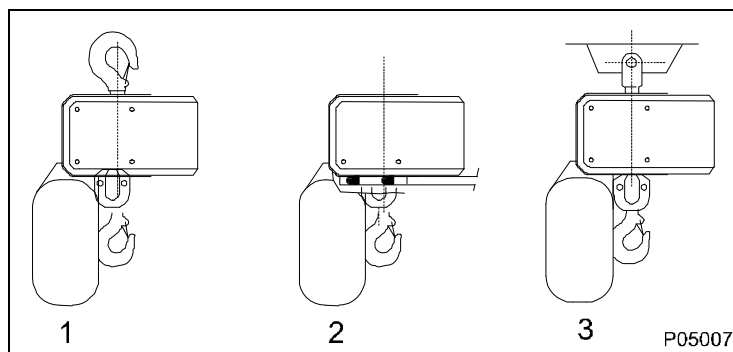Figure 1. Mounting Types



For all trolley-mounted hoists, refer to appropriate trolley manual for trolley installation instructions.

After a trolley-mounted hoist has been assembled to a beam, check for balance. Each trolley-mounted hoist is balanced at the factory for “as shipped” condition. Any auxiliary devices (radio control, lights, hose reels, etc.) furnished and mounted by “others” may require additional counterweight. Hoists must hang straight without a load or there will be a noticeable “kick” when a load is applied to hook. An unbalanced hoist / trolley may result in damage to equipment.

## 2.4 Load Hook Throat Opening



**CAUTION:** ANSI B30.16-1998 recommends that the throat opening of a load hook be measured and recorded prior to putting a hoist into service and that a gage be made to provide a quick visual inspection for a bent hook as required during routine inspections. Record this information before initial start-up. See Section 7.9 for more detailed hook information.

## 2.5 Electrical Connection

The user / owner must provide the main power supply hardware (cable, conductor bar, fuses, disconnect switch, etc.).



**CAUTION: Make sure that the power supply voltage is the same as that shown on hoist serial plate / nameplate.**



**CAUTION: Make sure that fuses and other current overload devices are in place to protect the power supply.**



**CAUTION: Make sure that power cable or conductors have sufficient capacity to maintain the hoist supply voltage by  $\pm 5$  percent of nominal voltage under all operating conditions. Poor voltage regulation may cause motor overheating or sluggishness, and chattering / inoperative motor brake(s) and controls.**



**CAUTION: Do not use power supply cables with solid conductors.**




**WARNING: Failure to properly ground the hoist presents the danger of electric shock.**



**WARNING: An improper or insufficient ground connection creates an electrical shock hazard when touching any part of the hoist or trolley.**

## 2.6 Three Phase Power Connections

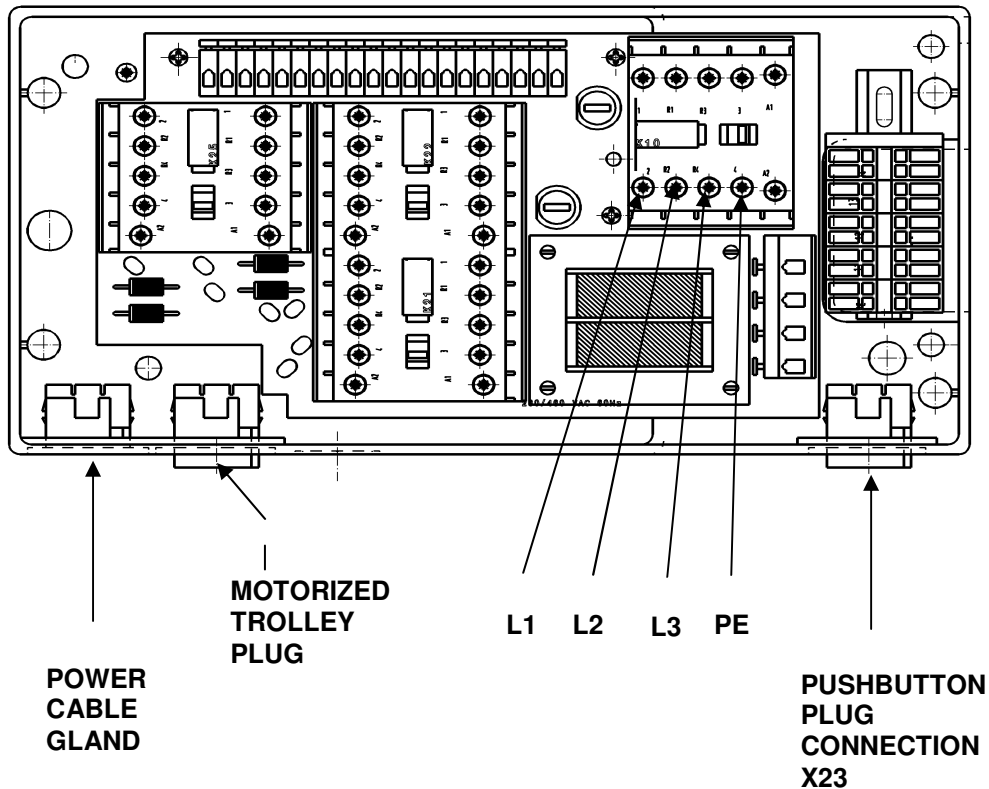
Figure 2. Three Phase Control Box Power Connections



1. Remove the control box cover.
2. Insert the power supply cable through the cable gland.
3. Connect phases L1, L2, L3, PE (GROUND) to mainline contactor K10.
4. Tighten the terminal screws
5. Tighten the cable gland or connector to secure the cable.
6. Connect push button assembly to X23.
7. Connect motorized trolley (optional).
8. Close the control enclosure cover.

## 2.7 Single Phase Power Connections

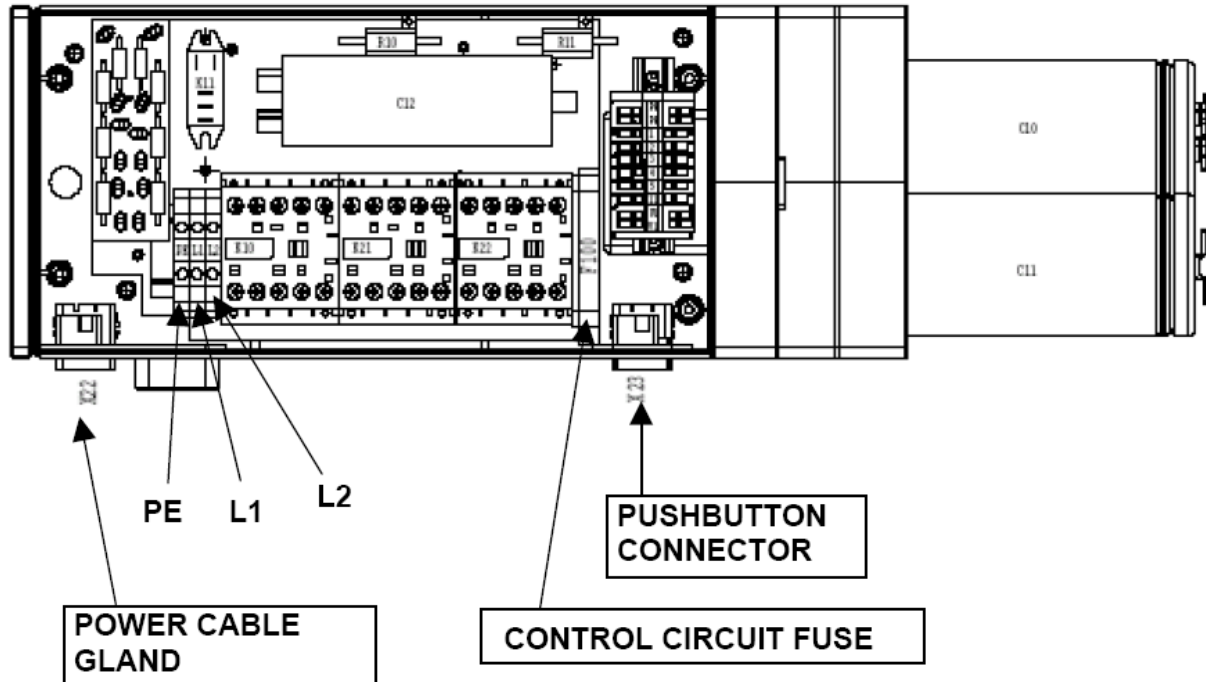Figure 3. Single Phase Control Box Power Connections



1. Remove the control box cover.
2. Insert power supply through the power cable gland.
3. Make the following connections:
  - Connect power lead to L1
  - Connect neutral lead to L2
  - Connect ground lead to PE
4. Check terminals to insure they are tight.
5. Close the box.
6. Check the hoist operation

### 3 INITIAL START-UP



**WARNING:**



Before connecting power to hoist, check all “motion” buttons on pendant control assembly to make sure that they operate freely without binding or sticking. Check pendant cable and strain relief connection to ensure that they are not damaged.

#### 3.1 General

Initial start-up procedures are as follows:

- Read all attached **WARNING** tags and placards affixed to hoist.
- Oil load chain generously over entire length of chain.
- Make sure that load chain is not twisted. If so, untwist load chain before using.
- Make sure fall stop is placed at least 6” [150 mm] from last chain link on free end.
- Install chain container.
- If furnished, make sure that trolley wheels have proper spacing in relation to beam flange. See appropriate trolley manual for details.
- Check direction of hook travel to make certain that it corresponds to respective control button that is depressed. That is, does hook travel “**UP**” when **UP BUTTON** is depressed? If OK, go to section 3.3. If not, proceed to section 3.2 for correcting direction of travel.

#### 3.2 Correcting the Direction of Hook Travel



**WARNING:**



**DO NOT** change control leads in pushbutton enclosure or at motor relays. **DO NOT** change nameplates on pushbutton assembly. The upper/lower safety limit switch is wired in series with “**UP**” control circuit as furnished from factory. Changing pushbutton control leads or nameplates will prevent the upper safety travel limit switch from functioning properly.

Reversing any two power leads of a three-phase AC motor will reverse the direction of rotation.

- Reverse any two leads of a three-phase power at the main power source or at connections to motor. **Do not change internal wiring of hoist.**
- After changing two of the main power leads, recheck direction of rotation. Press “**UP**” button only. If hook travel goes in “**UP**” direction, proceed to section 3.3. If not, redo section 3.2.

### 3.3 Operational Checks – No Load

- Check hoist motor brake function. Run empty load block up or down to check that load block does not drift more than 1.0 inch [25mm]. If so, adjust brake as described in Section 7.3 of this manual.
- Run empty load block down to check that fall stop (located on free end of load chain) makes proper contact with upper / lower travel safety limit switch and that limit switch functions properly.
- Run empty load block up to check that load block makes proper contact with upper / lower travel safety limit switch and that limit switch functions properly.
- Run empty load block up and down several times while checking for proper tracking of load chain.

### 3.4 Operational Checks – With Load

- After completion of no-load operational tests, the user /owner should perform a full load test even though each complete hoist is load tested at factory.
- Lift a near capacity load about one (1) foot [30cm] above floor level. Check that the brake holds load. Also, check stopping capability of brake when lifting to a stop and lowering to a stop.
- Move trolley the full length of monorail or crane beam. Check for any binding of trolley wheels on flange and/or interference at splice joints, hanger connections / bolts, etc.
- Check contact with stops. Contact with stops **SHALL** only be made with trolley bumpers. Stops that are designed to make contact with wheels **SHALL NOT** be used.

## 4 HOIST OPERATION



### WARNING:



BEFORE PROCEEDING WITH THE NORMAL OPERATION OF THIS HOIST, THE OPERATOR/(S) SHALL BE TRAINED IN ACCORDANCE WITH THE [LoadMate® Electric Chain Hoist Operator's Manual](#) AS SUPPLIED WITH THIS HOIST.



FAILURE TO READ AND COMPLY WITH ANY ONE OF THE LIMITATIONS NOTED IN THIS MANUAL AND THE [LoadMate® Electric Chain Hoist Operator's Manual](#) FURNISHED WITH THIS HOIST CAN RESULT IN PRODUCT FAILURE, SERIOUS BODILY INJURY OR DEATH, AND / OR PROPERTY DAMAGE.




REFER TO SECTION 1.0 OF THIS MANUAL FOR CONTACT INFORMATION IF ADDITIONAL ASSISTANCE IS NEEDED.



## 5 LOW HEADROOM TROLLEY

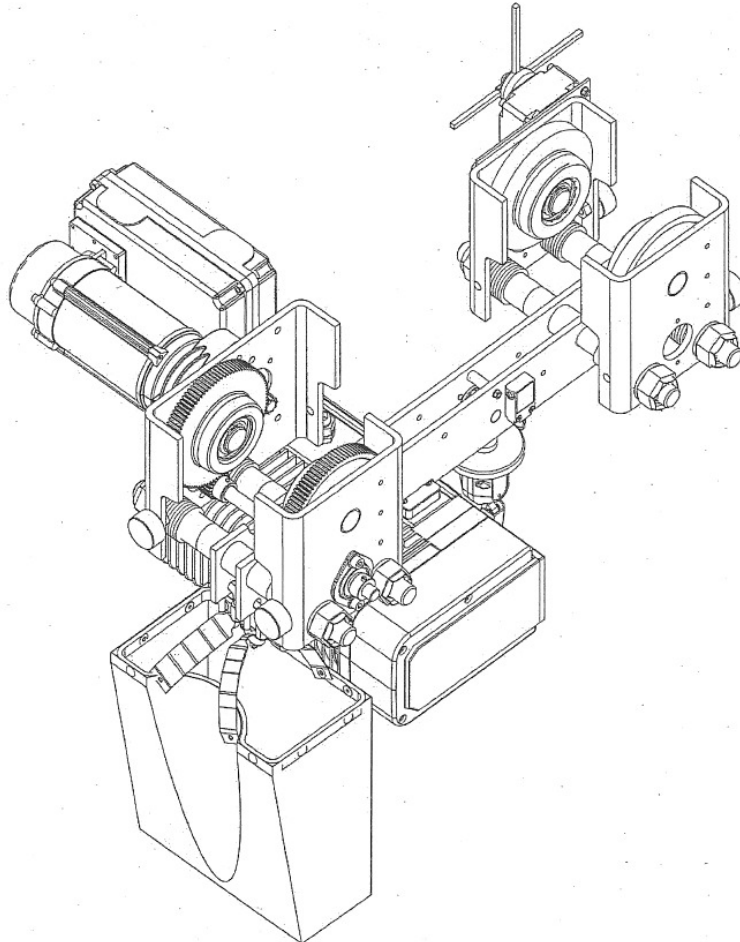Figure 4. Low headroom trolley



### 5.1 Description – Technical Characteristics (low headroom trolley)



NOTE: The trolley you have just purchased must be used only with the nominal load indicated on the rating plate.



NOTE: The trolley's service life will depend upon the level of duty, the average operating time, the number of starts and the maintenance applied to it.

#### 5.1.1 Technical Characteristics

The low headroom trolley can be used for loads from 60 kg up to 5000 kg with all our electrical chain hoists. It can be driven with an inverter drive unit or a dual or single speed unit.

## 5.1.2 Environmental Data

<b>Ambient temperature:</b>	<b>-10°C to +40°C</b>
<b>Protection degree:</b>	<b>IP55 as standard</b>
<b>Sound level:</b>	<b>70 decibels at 1 m</b>

## 5.1.3 Optional equipment

- **Limit Switch:** This cuts off the directional movement when the trolley reaches the end of its run.
- **Electric Actuation Device:** This actuates the supply line; the slide block must not exceed the rolling profile (A).
- **Brush:** This allows for earthing, due to the brush rubbing on the profile element.
- **Raceway Stops:** Not supplied: These must be fitted on the profile element, at the end of the trolley run.

## 6 SWIVEL TROLLEY

### 6.1 Description – Technical Characteristics (swiveling trolley to 3.2 tons)



NOTE: The trolley you have just purchased must be used only with the nominal load indicated on the rating plate.



NOTE: The trolley's service life will depend on the level of duty, the average operating time, the number of starts and the maintenance applied to it.

#### 6.1.1 Technical Characteristics

	Type 1	Type 2
	30 Hz ≤1000 kg	100 Hz >1000 kg
Fem Class	H4	H4
IP	IP55	IP55
Insulation class	F	F
Duty factor	40%	40%
Operating temperature	-10 °C, +40 °C	-10 °C, +40 °C
Power supply frequency	60 Hz	60 Hz
Standard speed	20/5 m/min 80/20 fpm	20/5 m/min 80/20 fpm
Default acceleration time (Deceleration time)	2.5 s	2.5 s
Thermal protection for motor	Option	Option
Thermal protection for frequency converter	Std.	Std.
Noise level	70 db	70 db

## 6.2 Installation of Swivel Trolley

The service life of the trolley depends upon the way it is installed. The instructions in this manual must be followed carefully for the installation, use and maintenance of the hoist. Any use contrary to these instructions can be dangerous. Do not use hoist until this manual has been fully read and understood. Always keep this manual near the hoist, available to the operator and the person in charge of maintenance.

Make sure that the safety rules are followed (harness, clearance of work areas, posting of instructions to be followed in the area, etc.).

The Trolley can be mounted on any type of standard profile (see: setting of the flange width).



**NOTE:** Check the width of the runaway rail and adapt the spacing of the flanges of the trolley as indicated by the tables.

### **Make sure:**

- That the profile is secured.
- That the profile is suitable to the loads to be supported.
- That the dimensions are compatible with the trolley that is to be installed.
- That the electrical characteristics of the mains network conform to those of the motor.

### **Carry out:**

#### 1 – Disassembly of the trolley:

- Remove the side plate on the counterweight side.
- Position the trolley on the beam.
- Refit the side plate.  
(see: Tightening torques)


#### 2 – Without disassembly of the trolley:

- Install the trolley on the profile, by the end.
- Fit the travel limit stops (not provided) at the end of the runway.
- Check that the nuts are correctly tightened.  
(see: Tightening torques)

After these checks, perform the following test with care:

1. Drive in one direction with the slow speed for a few seconds.
2. Accelerate up to the high speed and keep the high speed for 5-10 seconds.
3. Follow the same procedure in the other direction.
4. If the trolley drives in the wrong direction, swap the cables (blue and white) of the motor or the wires on D1 and D2.
5. Check the function of the slow down and end limit switches.

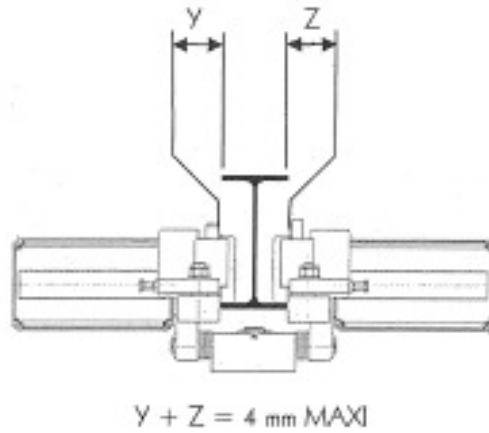Figure 5. Drive wheel and idler wheel/side plates



Adjust drive wheel and idler wheel/side plates as shown above.

### 6.3 Electric Swivel Trolley

Figure 6. Electric swivel trolley


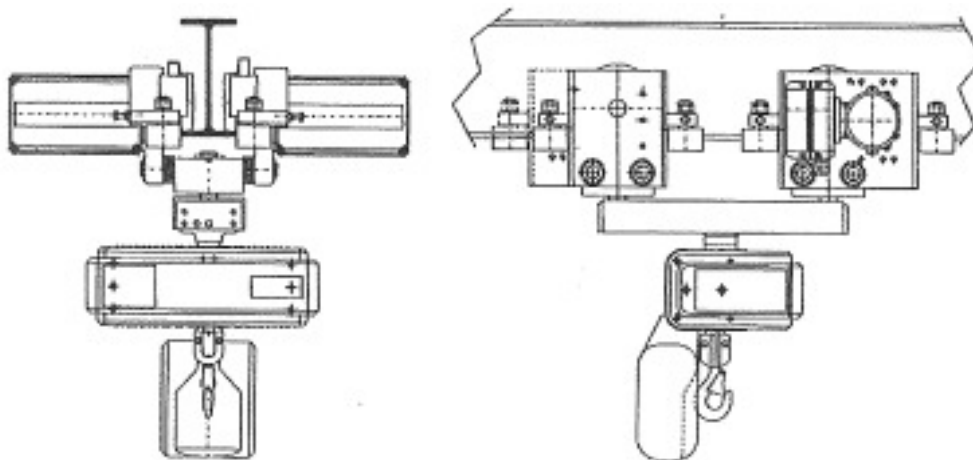


Table 1. Electric swivel trolley

HOIST TYPE	SWIVELING TROLLEY TYPE	CAPACITY	NUMBER OF WHEELS	WHEEL DIAMETER	MOTOR TYPE
C05	SWIV32	0 – 1 ton	4	100	2 x TMU 1 (35 Hz)
C10	SWIV32	0 – 2 tons	4	100	2 x TMU 2 (100 Hz)
C16-20-25	SWIV32	0 – 3.2 tons	4	100	2 x TMU 2 (100 Hz)

### 6.3.1 Swiveling trolley (3.2 tons)

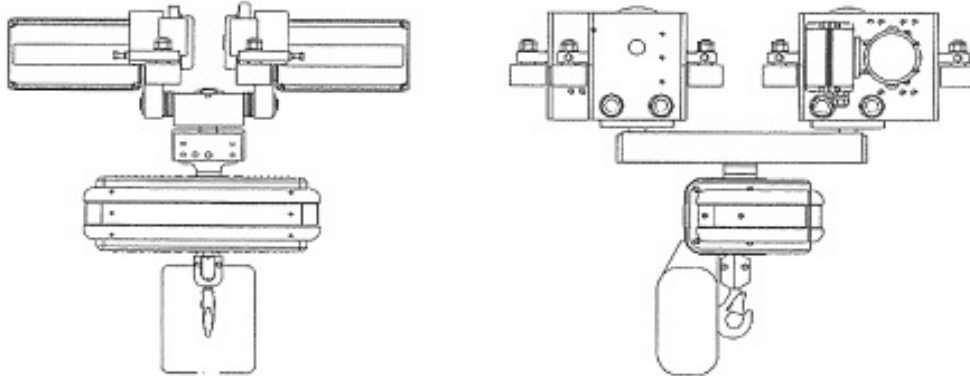
Figure 7. Swiveling trolley (3.2 tons)



- CAPACITY MAX 3.2 TONS (3200 KG)
- RAY OF CURVE MINI 2.6 FEET

### 6.3.2 Swiveling trolley (3.2 to 5.0 tons) (NOT LOCALLY AVAILABLE)

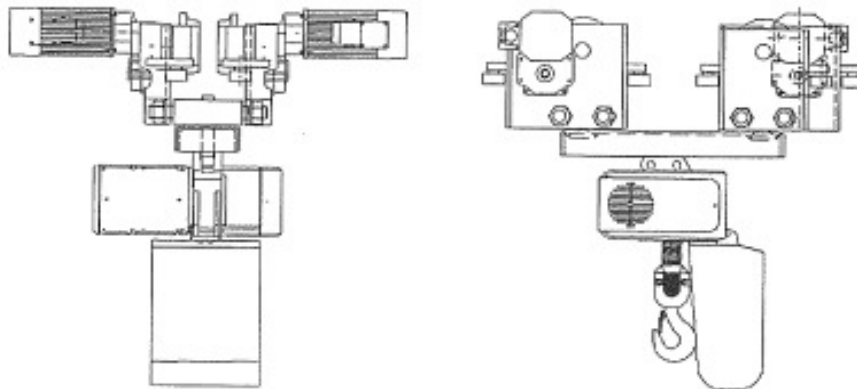Figure 8. Swiveling trolley (3.2 to 5.0 tons)




- CAPACITY MAX 3.2 TO 5 TONS (3200 TO 5000 KG)
- RAY OF CURVE MINI 3.9 FEET

### 6.3.3 Procedure to adjust swivel trolley guide rollers

1. Loosen nut "A" (8 plcs).
2. Adjust guide rollers the maximum distance away from beam.
3. Place swivel trolley on beam.
4. Move trolley to curve section of beam.
5. Adjust guide rollers allowing approximately 3/16" (4-5 mm) clearance per side using screw "B."
6. Tighten nut "A" (8 plcs).

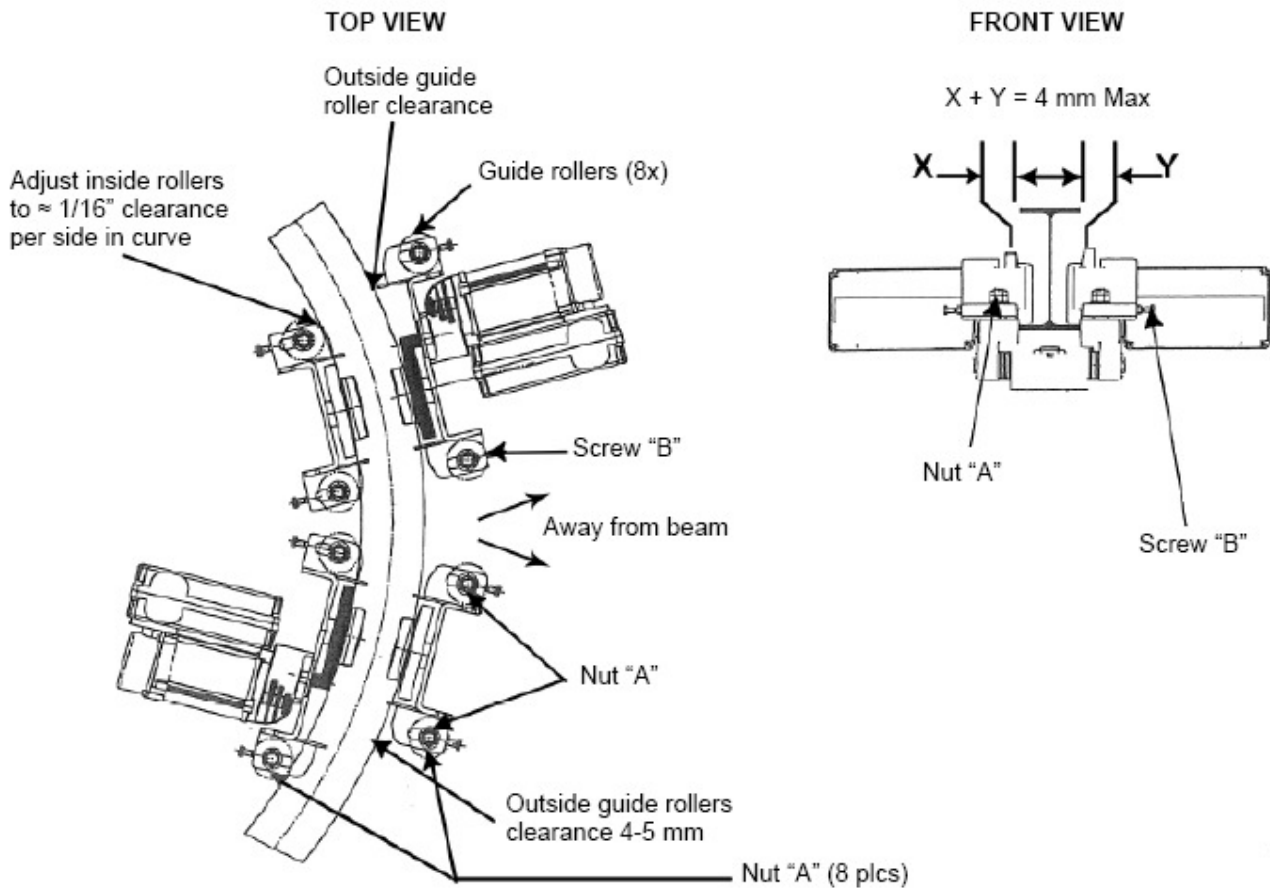Figure 9. Swivel trolley guide rollers




NOTE: Adjustments should be made with swivel trolley in radius of monorail.

## 7 MAINTENANCE

### 7.1 Basic Hoist Construction

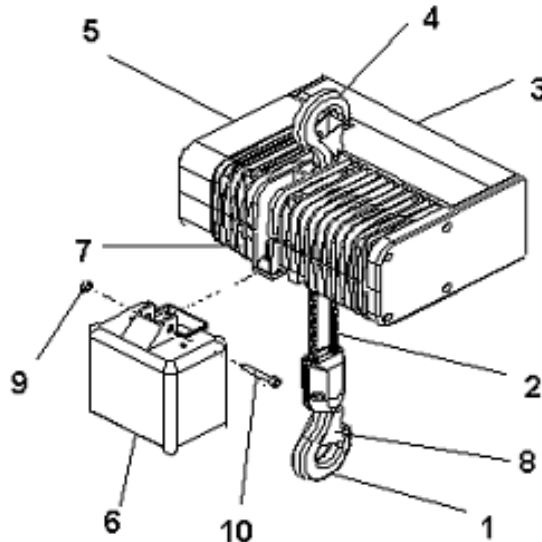Figure 10. Basic Hoist Components



1. LOAD BLOCK ASSEMBLY (2-FALL SHOWN)
2. LOAD CHAIN
3. ELECTRICAL CONTROL ENCLOSURE
4. TOP HOOK
5. HOIST GEAR BOX ASSEMBLY
6. CHAIN CONTAINER & HARDWARE
7. HOIST BODY / MOTOR
8. LOAD HOOK SAFETY LATCH
9. FASTENER
10. PIN

### 7.2 Motor / Body

The hoist motors are designed to provide dependable hoisting service. The standard motors are enclosed for IP55 rated protection against normal hazards of dust and moisture. The motor bearings are sealed and do not require further greasing.

The hoist body is constructed of aluminum and requires no maintenance. Remove from service and replace the hoist body if damaged.



## 7.3 Hoist Motor Brake and Load-Limiting Device

The hoisting motor is equipped with a D.C. electromagnetic disc brake. The brake brings the load to a smooth and quick stop and holds the load when the motor is not energized. An energized coil releases the hoist brake to allow the hoisting motor to run freely when in use.

The load-limiting device is a slip clutch and it is integrated into the design of the hoist motor brake. Even if the clutch slips, once power is removed, the brake will engage to stop and hold the load.

### 7.3.1 Slip Clutch Operation

When the motor brake is energized, ITEM 1 pulls ITEM 2 away from ITEM 3. ITEM 3 is free to rotate. ITEM 9 applies pressure to ITEM 3 that forces ITEM 3 to engage ITEM 4. The face-to-face contact between ITEMS 3 & 4 creates an adjustable slip clutch between the motor and the load chain sprocket.

As ITEM 8 is tightened, ITEM 9 applies more pressure on the interface between ITEMS 3 & 4. More pressure increases the load capacity of the hoist and less pressure decreases the capacity of the hoist. ITEM 2 is adjusted to allow the hoist to lift 110 – 125 percent of the rated capacity of the hoist.

In the event that the slip clutch begins to slip during the lifting or lowering process, release the hoist motion control button to stop the motor. This will de-energize the brake. ITEM 2 will now press against ITEMS 3 & 4 to stop rotation and slippage between ITEMS 3 & 4. This will stop and hold the load. Re-adjustment of ITEM 8 will be necessary to eliminate slipping. See section 7.3.2.

Figure 11. Cross Section of Hoist Brake / Slip Clutch

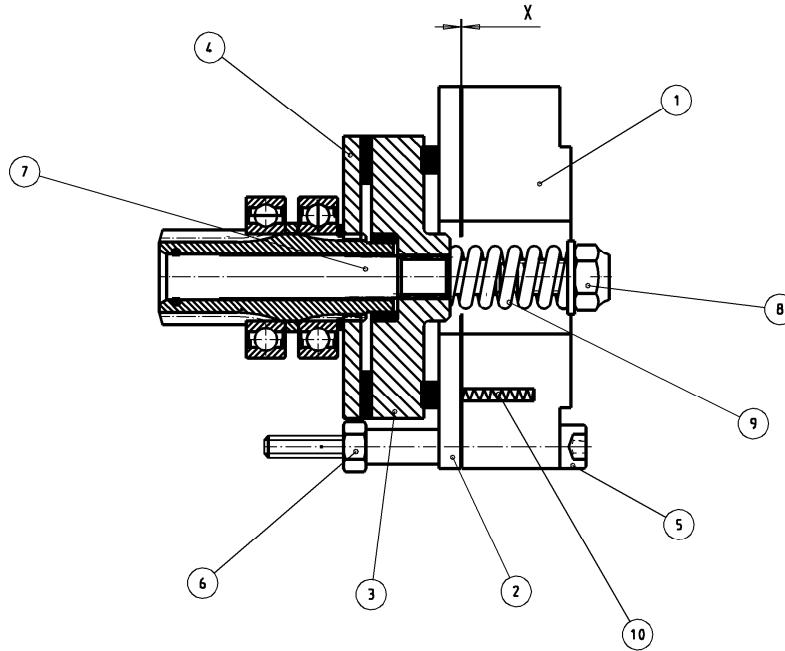


Table 2. Hoist Brake / Slip Clutch Parts List

ITEM	DESCRIPTION
1	ELECTROMAGNETIC COIL
2	BRAKE LINING PLATE
3	SLIP CLUTCH PLATE
4	SLIP CLUTCH LINING DISC
5	LOCKING SCREW
6	BRAKE ADJUSTING NUT
7	GEAR INPUT SHAFT
8	SLIP CLUTCH ADJUSTING NUT
9	SLIP CLUTCH SPRING
10	COIL SPRING

**NOTE: Item 'X' (air gap) is discussed in section 7.3.3 Hoist Motor Brake Adjustment.**



SEE Figure 11



**CAUTION:** Make sure the motor is not running before placing tool on the nut to adjust it. Do not touch any moving components.



**CAUTION:** The slip-clutch generates heat when slipping. ITEMS 3 & 4 absorb this heat. When these items become too hot, clutch adjustment may be difficult due to unstable behavior of friction surfaces. If this happens, allow brake & clutch assembly to cool before trying to re-adjust slip-clutch.



**CAUTION:** Decreasing torque too much when adjusting slip-clutch will allow a suspended load to free-fall when trying to lift. If this occurs, release the motion button and the brake will engage to stop and hold the load.

### 7.3.2 Slip Clutch Adjustment after Installation

1. Hook a load of at least 110 percent but not more than 125 percent of nameplate capacity.
2. Remove plastic cap from inspection hole in brake cover.
3. Raise load at slow speed and fast speed to test slip clutch operation.
4. Insert a socket (13mm) through inspection hole, and slide it over the slip clutch adjusting nut (item 8 - Figure 11).
5. Turn nut in required direction:
  - Turn nut **clockwise to increase** the torque.
  - Turn nut **counterclockwise to decrease** the torque.
6. Repeat steps 3 and 4 until load can be barely lifted in fast speed. **CAUTION: DO NOT OVERHEAT.** If overheated, clutch may not adjust due to instability of friction surfaces.
7. Once adjustment is completed, install plastic cap.
8. Check function of clutch at 100 percent of nameplate-capacity while in fast speed.

#### NOTICE:



**The slip clutch / Torque Limiter is a safety device to prevent overloading of the hoist. This device is not intended for use as means to measure the weight of load being lifted.**

### 7.3.3 Hoist Motor Brake Adjustment (See *Figure 11*)

If maximum air gap of brake has been reached or will be exceeded before next inspection, readjust air gap.

Minimum air gap  
 $X = 0.008''$  [ 0.2 mm ]

Maximum air gap  
 $X = 0.020''$  [ 0.5 mm ]


Before adjusting brake, remove load. Per ANSI Z244.1, lockout and tag main disconnect switch in de-energized position. Follow other maintenance procedures outlined in this manual and ASME B30.16.

1. Remove brake cover and gasket.
2. With a feeler gauge, check three (3) places near each mounting bolts to measure air gap (  $X$  ) between brake thrust disc (item 2) and coil (item 1).
3. To adjust air gap use a 0.008" feeler gauge and proceed as follows:
  - Loosen locking screw (item 5).
  - Adjust the air gap by turning the brake adjusting nut (6) counterclockwise to reduce the air gap; turn clockwise to increase it.
  - Tighten the locking screw (5).
  - Make the same operation with the 2 other adjustment points.
  - Control the air gap adjustment all around the magnet.
4. Check brake operation. Run load block up and down several times without a load to test operation of brake. Then, lift a capacity load about one foot above floor, stop, and check that brake holds load.
5. Install gasket and brake cover.

### 7.3.4 Replacement Criteria for Motor Brakes

Table 3. Replacement Criteria for Motor Brakes

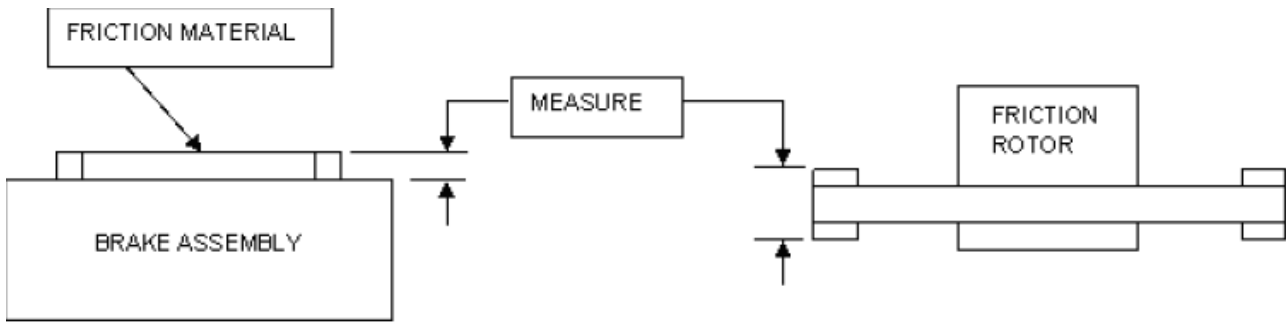	THICKNESS AS NEW	REPLACE WHEN
LM 01	0.260 inches (6.6 mm)	0.220 inches (5.6 mm)
LM 05	0.370 inches (9.4 mm)	0.330 inches (8.4 mm)
LM 10	0.055 inches (1.4 mm)	0.016 inches (0.4 mm)
LM 16	0.406 inches (10.3 mm)	0.366 inches (9.3 mm)
LM 20	0.406 inches (10.3 mm)	0.366 inches (9.3 mm)
LM 25	0.406 inches (10.3 mm)	0.366 inches (9.3 mm)



**LM 01 / 05 / 10 MODELS**

**LM 16 / 20 / 25 MODELS**

## 7.4 Load Chain

### 7.4.1 General




**CAUTION:** A hoist **SHALL NEVER** be used if the load chain shows any evidence of mechanical damage or excessive wear. Never use the load chain as a sling. Use only original equipment chain as supplied by a factory authorized source. Improper load chain storage or installation can render the load chain unusable prior to the first lift.

### 7.4.2 Maintenance Inspection

A qualified person **SHALL** be designated to routinely conduct an in-depth inspection of the load chain (See Section 8 – Preventative Maintenance for schedule recommendations). This designated person **SHALL** inspect load chain using good judgment in evaluating the remaining service life. Any deterioration of load chain resulting in appreciable loss of original strength **SHALL** be noted and evaluated.

An in-depth inspection **SHALL** include a written record that is dated and signed by the inspector.

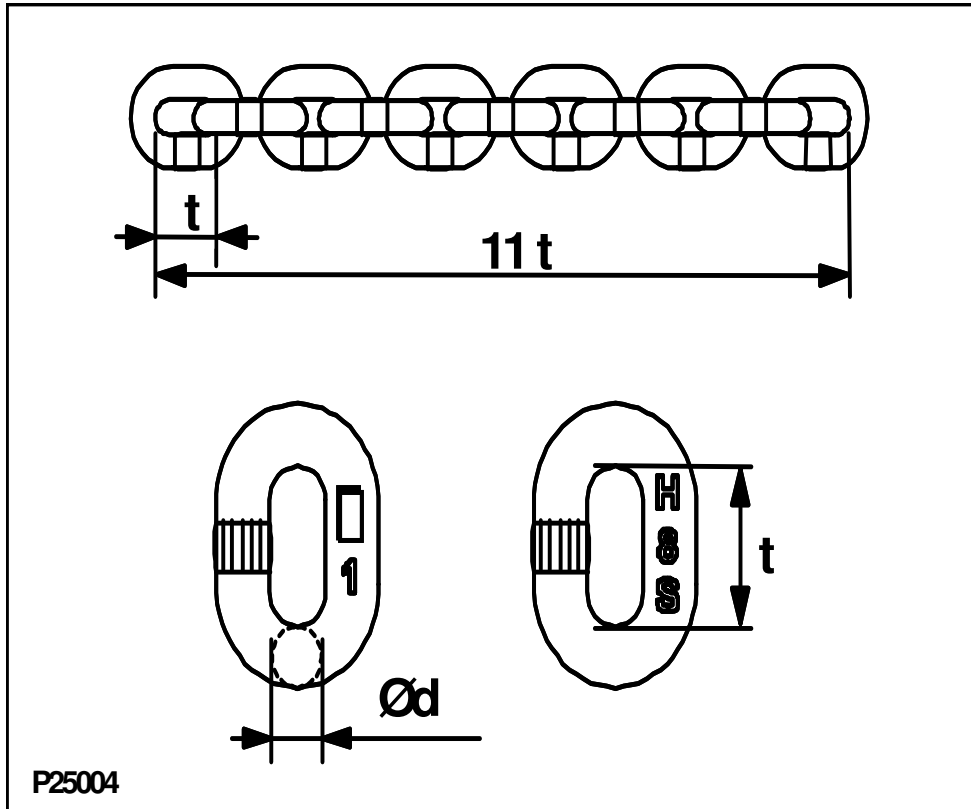Figure 12. Chain Dimensions



Measure the following chain dimensions at several points on chain: (Figure 12)

- Dimensions of one link (  $d \times t$  ) where,  $d$  = diameter and  $t$  = pitch
- Length over 11 links (  $11 t$  )

Replace load chain if any one of these dimensions exceeds maximum allowed wear.

**Maximum allowed wear:**

<b>Minimum link diameter allowed</b>	<b>(d):</b>	<b>0.1693" [4.30 mm] MINIMUM</b>
<b>Maximum pitch allowed</b>	<b>(t):</b>	<b>0.5157" [13.10 mm] MAXIMUM</b>
<b>Maximum length allowed</b>	<b>(11t):</b>	<b>5.5216" [140.25 mm] MAXIMUM</b>

**NOTICE:**



**If load chain needs replaced, then inspect chain guide and chain (load) wheel on hoist and idler sprocket in 2-fall load block for excessive wear. A chain sprocket showing evidence of scored pockets or sharp edges generated from wear SHALL be replaced. A worn chain sprocket or idler sprocket can greatly reduce the life of load chain.**

### 7.4.3 Load Chain Specifications (see *Figure 12*)

Chain Specification:	Load chain
Chain type:	Standard
Diameter (d) x pitch (t):	0.189" (4.8 mm) /0.492" (12.5 mm)
Class:	DAT
Grade:	H8S or HIS G80 RAS
Maximum working stress:	19,652 lbs/in <sup>2</sup> (135.5 N/mm <sup>2</sup> )
Hardened surface:	580 or 700 HV (Vickers Hardness)
Thickness:	0.0039" (0.1 mm) to 0.0079" (0.2 mm)
Standard:	DIN 5684 - 8
Marking (10 x t):	1 or 16 H 8 S or A 8
Maximum working load per one fall:	1100 lbs. (500 kg)
Breaking load:	6519.50 lbs. (29 kN)
Maximum breaking stress:	116,030 lbs/in <sup>2</sup> (800 N/mm <sup>2</sup> )
Total breaking elongation:	>10% min.
Weight for 100 links:	1.5 lbs. (0.680 kg)

### 7.4.4 Removing the Load Chain

#### 1-FALL CHAIN

1. Remove load from hook block assembly.
2. Remove load block assembly from load chain. Some disassembly of 1-fall load block is required.
3. Attach the chain insert tool to the end of bottom block end of the chain.
4. Run hoist in "UP" direction until all of chain is in container. Stop the hoist with the insertion tool remaining in the hoist ready for the new chain.
5. Remove chain container with all of old chain in chain container.
6. Remove fall stop from old chain and save for use with new chain.

#### 2-FALL CHAIN

1. Remove load from hook block assembly.
2. Run hoist in "UP" direction until hook block assembly is about 1.0 foot [30cm] from hoist body.
3. Unfasten load chain from chain anchor mounted on hoist body.
4. Remove load block assembly from load chain by allowing chain to run through it. Attach the chain insertion tool to the bottom block end of the chain.
5. Run hoist in "UP" direction until all of the chain is in the container. Stop the hoist with the insertion tool remaining in the hoist ready for the new chain.
6. Remove chain container with old chain.
7. Remove fall stop from old chain and save for use with new chain.



## 7.4.5 Installing the Load Chain

Figure 13. Chain Installation


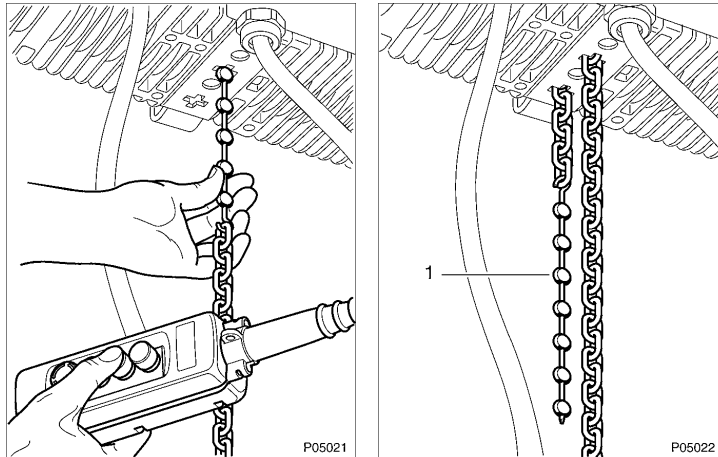


Figure 13-A. Chain Orientation

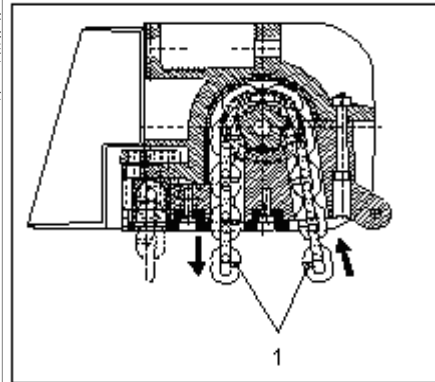

### 1-FALL CHAIN INSTALLATION

1. Attach last link of chain onto hook of CHAIN INSERTION TOOL (item 1, Figure 13).
2. If the insertion tool is not in the hoist (removal procedure), insert other end of CHAIN INSERTION TOOL into chain opening closest to chain container side.



**CAUTION: Make sure the chain weld on chain link faces inward toward chain wheel pocket on hoist load sprocket. See Figure 13-A.**

3. Run hoist “**DOWN**” in slow speed to feed chain through chain sprocket and out other side.
4. Attach fall stop at least 6.0 inches [150 mm] from end of chain (chain container side). Attach load block assembly on other end of load chain. Refer to Figure 14 for details.
5. Make sure that load chain is not twisted or deformed.
6. Attach chain container.

## 2-FALL CHAIN INSTALLATION

1. If the chain insertion tool is not in the hoist (removal procedure), attach last link of chain onto hook of CHAIN INSERTION TOOL (item 1, *Figure 13*).
2. Insert other end of CHAIN INSERTION TOOL into chain opening closest to chain container.



**CAUTION: For a 2-Fall load block assembly, make sure the chain weld on chain link faces inward toward chain wheel pocket on hoist and away from idler sprocket of hook block assembly. See figure 13-A. Follow steps outlined below:**

3. Run hoist in slow speed to feed chain through chain sprocket. Continue running until about 2.0 feet [60cm] of chain is available out the other side.
4. Slide chain onto idler sprocket of load block making sure not to twist chain while inserting it. Link weld must face away from idler sprocket on load block assembly.
5. Attach chain anchor and chain to hoist body. Tighten chain anchor bolts per recommended torque settings in Section 8.4.
6. Attach fall stop 6.0 inches [150 mm] from end of chain (chain container side). See *Figure 14* for details.
7. Make sure that chain is not twisted or kinked.
8. Attach chain container

### After chain installation:


1. Without a load, run chain up and down a few times to make sure load chain is not twisted. If so, remove chain twist.
2. Lubricate load chain.

## 7.5 Fall Stop Assembly

### 7.5.1 General

The slack fall stop is a safety stop, not a functional stop. The fall stop must be located at least six (6.0) inches [150mm] from end of last chain link.

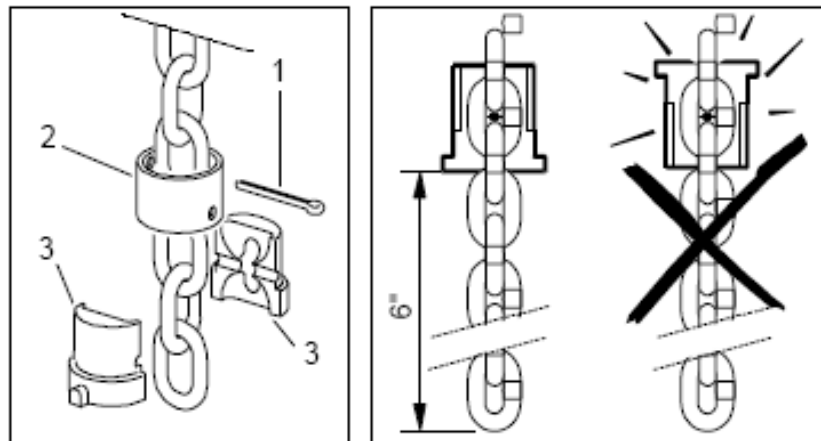Figure 14. Installation of Slack Fall Stop



### 7.5.2 Removing fall stop (Figure 14)


1. Remove cotter pin (item 1).
2. Slide up the tube (item 2).
3. Remove the two fall stop halves (item 3).
4. Slide tube (item 2) off load chain.

### 7.5.3 Fall Stop Installation (Figure 14)

1. Slide tube (item 2) onto load chain.
2. Position two fall stop halves (item 3) on a chain link so that the fall stop will be at least 6 inches [150mm] from end of load chain.
3. Slide tube (item 2) down over two fall stop halves (item 3).
4. Insert and secure cotter pin (item 1).

## 7.6 Chain Container

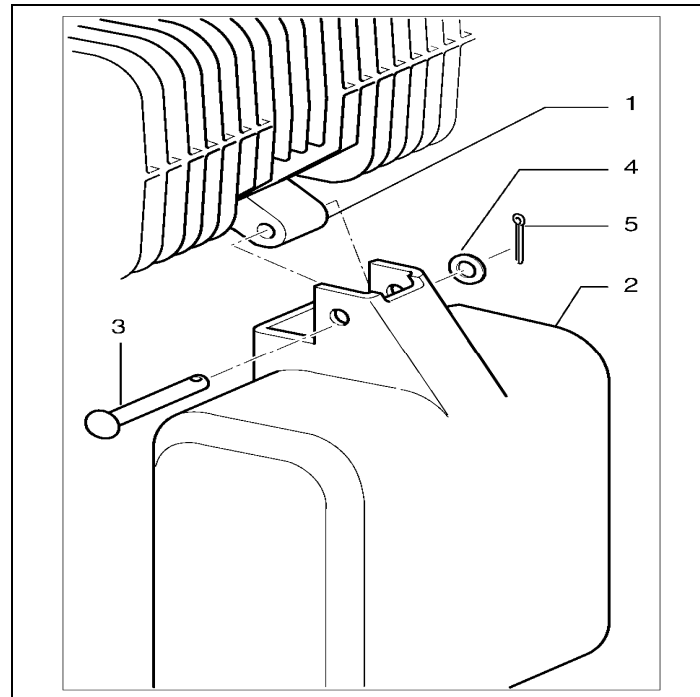Figure 15. Chain Container Installation



**CAUTION: Chain container must be installed for effective operation of travel limit switch.**

### 7.6.1 Removing Chain Container (Figure 15)

1. Remove cotter pin (item 5) from end of pin (item 3).
2. Pull pin (item 3) out while supporting chain container (item 2).
3. Remove chain container (item 2).

### 7.6.2 Installing Chain Container (Figure 15)

1. Insert load chain into chain container (item 2). Position chain container (item 2) onto hoist mounting bracket (item 1).
2. Align holes and insert pin (item 3) through container (item 2) and hoist mounting bracket (item 1).
3. Place washer (item 4) onto pin (item 3).
4. Insert and secure cotter pin (item 5).

## 7.7 Vinyl Chain Bag (optional)

Figure 16. Vinyl Chain Bag Installation Connection



### 7.7.1 Installing Vinyl Chain Bag (Figure 16)

1. Insert load chain into vinyl chain bag. Position vinyl chain bag onto hoist mounting bracket.
2. Align holes and insert cotter pin through appropriate bag connection holes for the specific model.
  - 2.1. Use **Item 1** connection holes for the **Model 05** hoist.
3. Place washer onto pin.
4. Insert and secure cotter pin.

## 7.8 Limit Switches

### 7.8.1 Upper and Lower Travel Safety Limit Switch

The Upper and Lower Travel Limit Switch is an automatic reset type switch and connected to the control circuit. The switch housing is recessed into the underside of hoist body.

The upper and lower limit switches are emergency protection devices and are not to be used as a continuous stop.

The hook block activates the upper limit switch as it contacts the limit switch that is located on bottom side of hoist body. Once the switch is activated, the “**UP**” circuit is opened. The fall stop activates the lower limit switch when hook block is lowered to its lowest travel position. The limit switch is activated and opens the “down” circuit.

The lower limit position is adjustable between the lowest travel and maximum lift. It is adjusted by repositioning the fall stop assembly on free end of load chain. The fall stop **SHALL** always be located at least 6 inches [150mm] from end of last chain link. The upper limit position is adjustable only when an additional fall stop assembly is added between the hook block assembly and the hoist body.

## 7.8.2 Upper and Lower Rotary Travel Limit Switch (Optional Only on 3-Phase units)

The rotary limit switch is adjustable and provides over-travel protection for the upper and lower limits of hoist travel. The limit switch is connected to the control circuit.



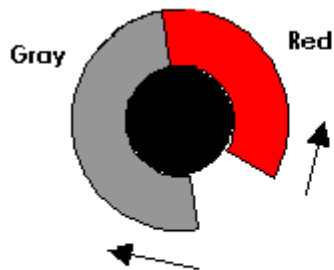
**Note: Not available on Single Phase – 115 Volt Models**



**Note: Rotary limit switch assembly cannot be added to a Hoist. The Hoist must have the rotary limit switch assembly provided at time of initial production.**

### Adjustment

The position of the air-gap between the two discs (red – gray) determines the stopping place. This position can be found by gently turning the two discs. The length of air gap determines length of reset play in opposite direction.



Maximum Height of Lift



Minimum Height of Lift


To reset the rotary limit once it has tripped, the load block assembly must travel approximately 11" [27cm] in opposite direction.

## 7.9 Hooks
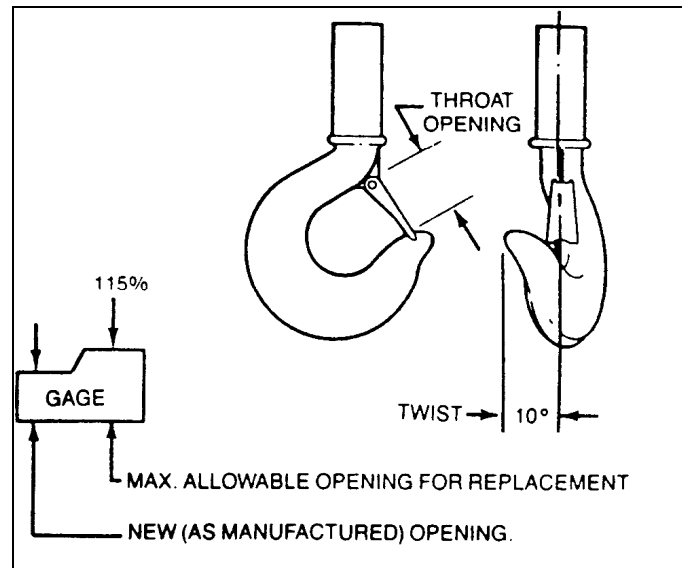
### 7.9.1 General





Check hooks for deformation or cracks. Hooks must be replaced if throat opening has increased by more than 15%, or if throat opening has more than 10-degree twist from plane of straight hook.

Figure 17. Measuring Hook Deformation



Due to many types and sizes of hooks that can be furnished and/or specified by the user / owner, it is recommended that user / owner measure the actual throat opening of hook as originally furnished. See *Figure 17*. Record the throat dimension on above sketch. Retain as a permanent record. This record can then be used for determining when hook must be replaced due to deformation or excessive throat opening.

### CAUTION:

-  Abuse or overloading of hoist is indicated when any hook is twisted or has a throat opening in excess of normal. Other load bearing components **SHALL** be checked for damage.
-  Safety latches **SHALL** be replaced if missing, bent, or broken.
-  A safety latch **SHALL** function properly at all times.
-  Repairing hooks by welding or reshaping is strictly forbidden.



### 7.9.2 Inspection

Inspection for wear on top hook and load hook **SHALL** be checked routinely. Measure the throat opening. (dimension-a2). If throat opening exceeds maximum opening allowed, replace hook. Damaged safety latches **SHALL** be replaced immediately.

Maximum allowed throat opening:

Hook Class:	012T load hook	025T load hook	top hook
Maximum allowed opening:	0.905" [23 mm]	1.181" [30 mm]	1.456"[37mm]

### 7.9.3 Hook Dimensions and Specifications

Figure 18. Hook Dimensions

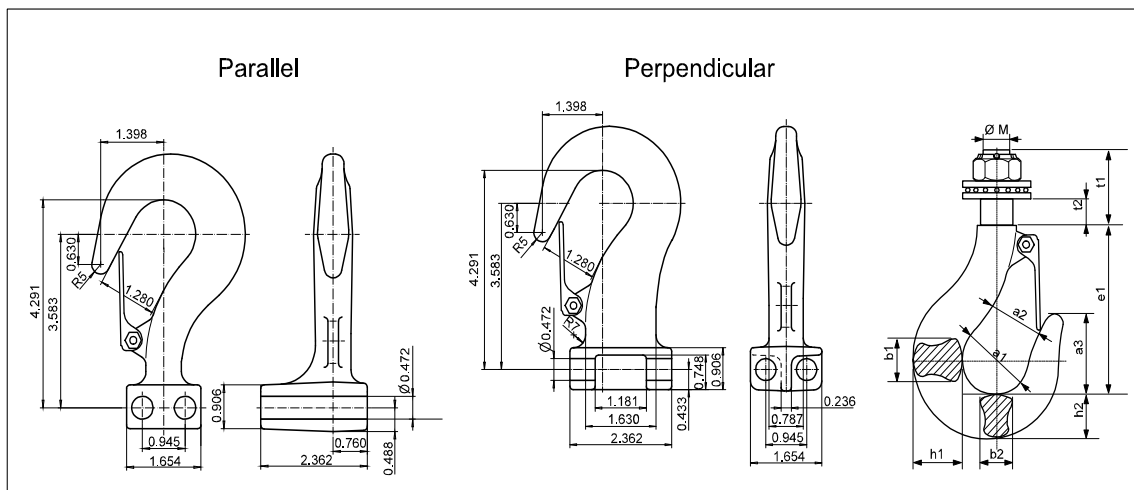



Table 4. Hook Dimensions

					DIMENSIONS - INCH / [mm]											
CAP TON	CAP KG	TEST LBS	FALLS	HOOK CLASS	ØM	Øa1	a2	a3	b1	b2	e1	h1	h2	t1	t2	
¼	250	1102	1	012T	0.551 [14]	1.181 [30]	0.787 [20]	1.339 [34]	0.748 [19]	0.591 [15]	3.268 [83]	0.866 [22]	0.748 [19]	1.260 [32]	0.394 [10]	
½	500	2205	1	012T	0.551 [14]	1.181 [30]	0.787 [20]	1.339 [34]	0.748 [19]	0.591 [15]	3.268 [83]	0.866 [22]	0.748 [19]	1.260 [32]	0.394 [10]	
			2	025T	0.630 [16]	1.417 [36]	1.024 [26]	1.614 [41]	0.866 [22]	0.748 [19]	3.780 [96]	1.102 [28]	0.945 [24]	1.496 [38]	0.512 [13]	
1	1000	4410	1	025T	0.630 [16]	1.417 [36]	1.024 [26]	1.614 [41]	0.866 [22]	0.748 [19]	3.780 [96]	1.102 [28]	0.945 [24]	1.496 [38]	0.512 [13]	

**Mark:** ISO 2766  
**DIN model number:** 15401  
**DIN 15400 Class:** T  
**DIN 15401 Material:** 35 CD 4

## 7.9.4 Top Hook

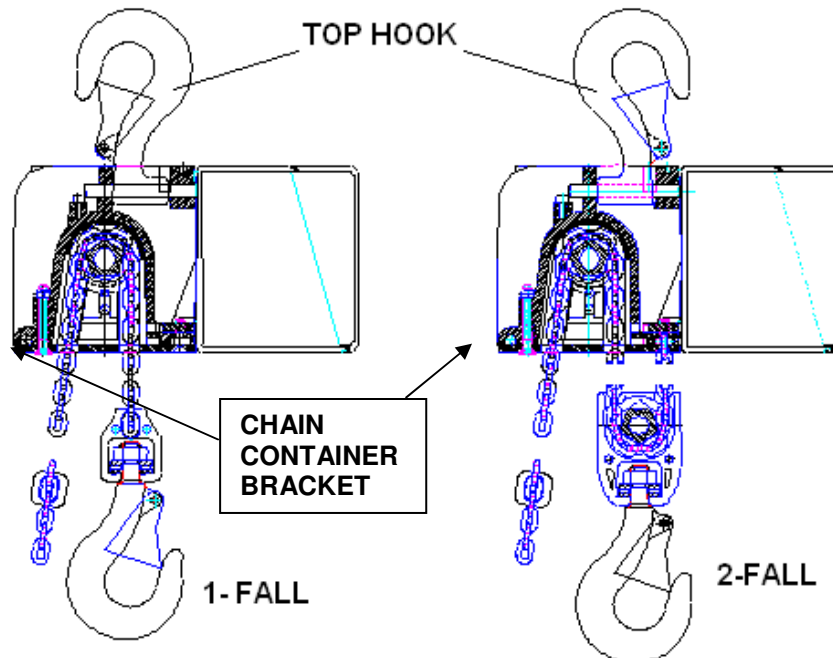Figure 19. Top Hook Orientation



**CAUTION:** Before removing Top Hook, de-energize the power to the hoist per ANSI Z244.1 and make certain that any load is removed from the load hook. Also support the total weight of the hoist, including chain, prior to removing the Top Hook.

### Removing Top Hook

1. Place hoist on workbench. Protect limit switches on bottom side of hoist.
2. Remove screw and retaining washer.
3. Pull pins out and remove hook.



**CAUTION:** Proper installation of top hook is critical for hoist balance.

### Installing Top Hook

1. Place hoist on workbench. Protect limit switches on bottom side of hoist.
2. Determine number of chain falls: 1-fall or 2-fall. Reference Figure 19.
3. Select proper placement of top hook relative to number of chain falls:
  - If 1-fall, align top hook so that tip of hook faces toward chain container.
  - If 2-fall, align top hook so that tip of hook faces away from chain container.
4. Place hook into the slot on hoist body. Verify that top hook saddle and load hook saddle are in line with each other. Install pins and retaining washer. Secure retaining washer with screw.

## 7.10 Control Changes and Fuses

The control panel components are assembled onto a Printed Circuit (PC) Board. The layouts and wiring diagrams found within this section are for standard hoist controls. The hoist motor brake rectifier is an integral part of the Printed Circuit (PC) Board.

Two-speed hoists are available for 208, 230, 460, and 575 volt three-phase power supplies. The two-speed hoists can only be connected to the specified serial plate voltage.

Three-phase single-speed hoists are available and re-connectable for 208, 230, and 460 volts. Single-phase single-speed hoists are also available with 115 volt one-phase power supply.

### 7.10.1 Control Circuit Fuses

The control fuse for three-phase control panels is located in a vertical, cylindrical fuse holder mounted to the printed circuit board. There are two holders identified as position F100 or F101. The supply voltage determines which location the fuse is inserted. See Figure 20 for a typical panel view. The top rotates loose for replacement. There is only one top; therefore, the fuse is located in the position with the top.

The control fuse for the Single-Phase 115V control panels is located in a fuse holder attached to the din rail beside the contactor. See Figure 3 Section 2.7. The top of the fuse holder flips open so that a fuse can be removed or installed.

Table 5. Control Fuses

POWER SUPPLY	CONTROL VOLTAGE	FUSE SIZE
3 – PHASE	115 VAC	500 mA
3 – PHASE	48 VAC	630 mA
1 - PHASE	115 VAC	250 mA

## 7.10.2 Three-phase Single-speed Voltage Changes:

### Proceed as follows:

1. Use a straight slot screwdriver and remove the cap on top of the fuse holder. There is only one cap for two fuse holders, locations F100 and F101. The fuse is located in the fuse holder with the cap. Place control circuit fuse into correct fuse holder position depending on supply voltage.
  - 208 volts            position F101
  - 230 volts            position F100
  - 460 volts            position F100
2. Connect hoist motor leads on terminal strip X5 per appropriate single speed wiring diagram.
3. Connect hoist motor brake leads (see panel layouts and wiring diagrams)
  - 208 / 230V (-) brake lead to X7 and (+) brake lead to K21
  - 460V (-) brake lead to K21 and (+) brake lead to K21
4. Consult Motorized Trolley Manual (if applicable)



**CAUTION: Motorized trolley drives are not voltage re-connectable. Consult the motorized trolley manual if a voltage change over is required.**

## 7.11 Control Panel Layout – Three Phase – Two-speed Hoist – 208/230/460 Volts

Figure 20. Control Panel Components and Layout – Three Phase – Two Speed


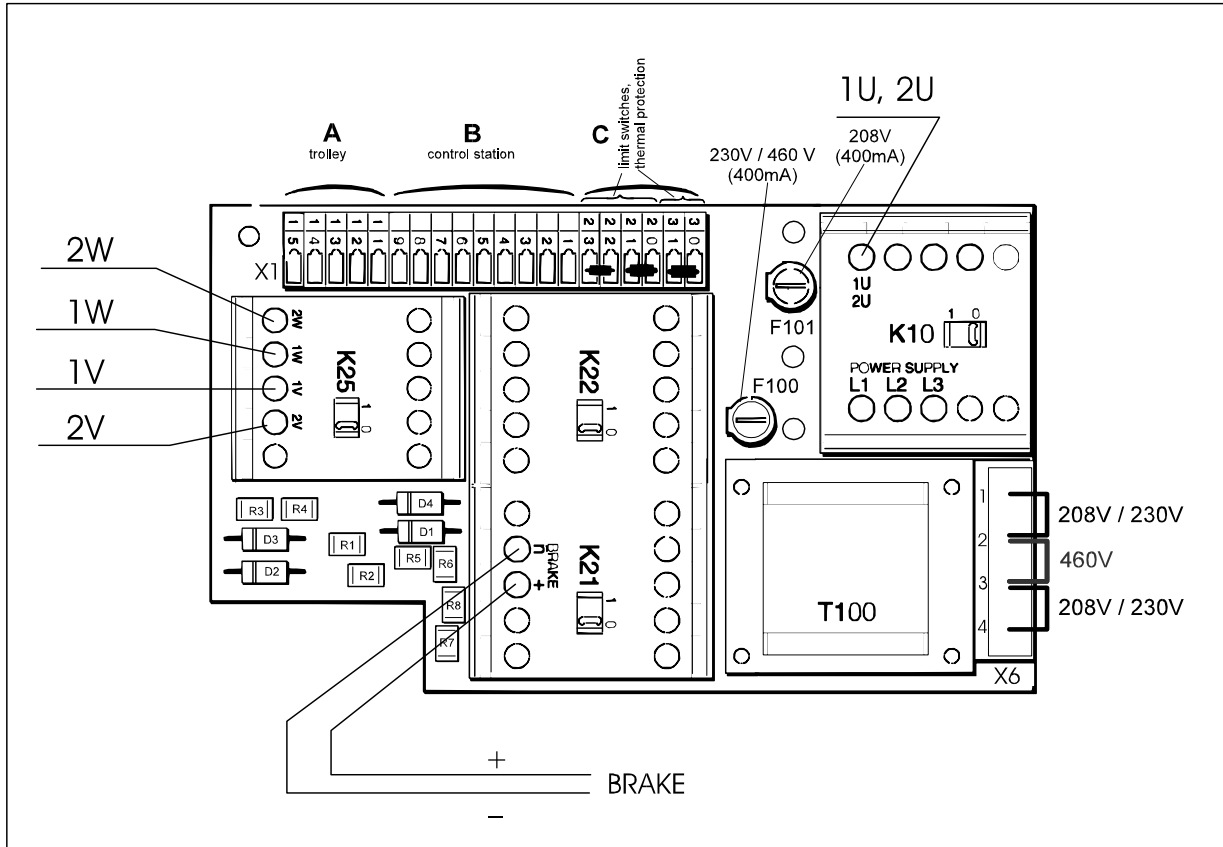



Table 6. Control Panel Components – Three-Phase Two-Speed Parts List

ITEM	DESCRIPTION
L1	HOIST POWER SUPPLY – PHASE 1
L2	HOIST POWER SUPPLY – PHASE 2
L3	HOIST POWER SUPPLY – PHASE 3
PE	POWER SUPPLY GROUND
X1	TERMINAL STRIP ON PRINTED CIRCUIT BOARD
X6	TERMINAL STRIP ON CONTROL TRANSFORMER – NOTE JUMPER CONNECTIONS
BRAKE (-)	BRAKE COIL SUPPLY (NEGATIVE)
BRAKE (+)	BRAKE COIL SUPPLY (POSITIVE)
X23	PUSH BUTTON PLUG CONNECTION
X24	MOTORIZED TROLLEY PLUG CONNECTION
K10	MAIN LINE CONTACTOR
K21	HOIST “UP” CONTACTOR
K22	HOIST “DOWN” CONTACTOR
K25	HOIST TWO-SPEED FAST CONTACTOR
T100	CONTROL TRANSFORMER
F100	FUSE HOLDER POSITION 230 VOLT OR 460 VOLT SUPPLY
F101	FUSE HOLDER POSITION 208 VOLT ONLY
1U, 2U	MOTOR SUPPLY LEADS
1V	MOTOR SUPPLY LEAD
2V	MOTOR SUPPLY LEAD
1W	MOTOR SUPPLY LEAD
2W	MOTOR SUPPLY LEAD

### 7.12 Three Phase – Wiring Diagram – Two-speed Hoist - 208/230/460 volts – Power Circuit

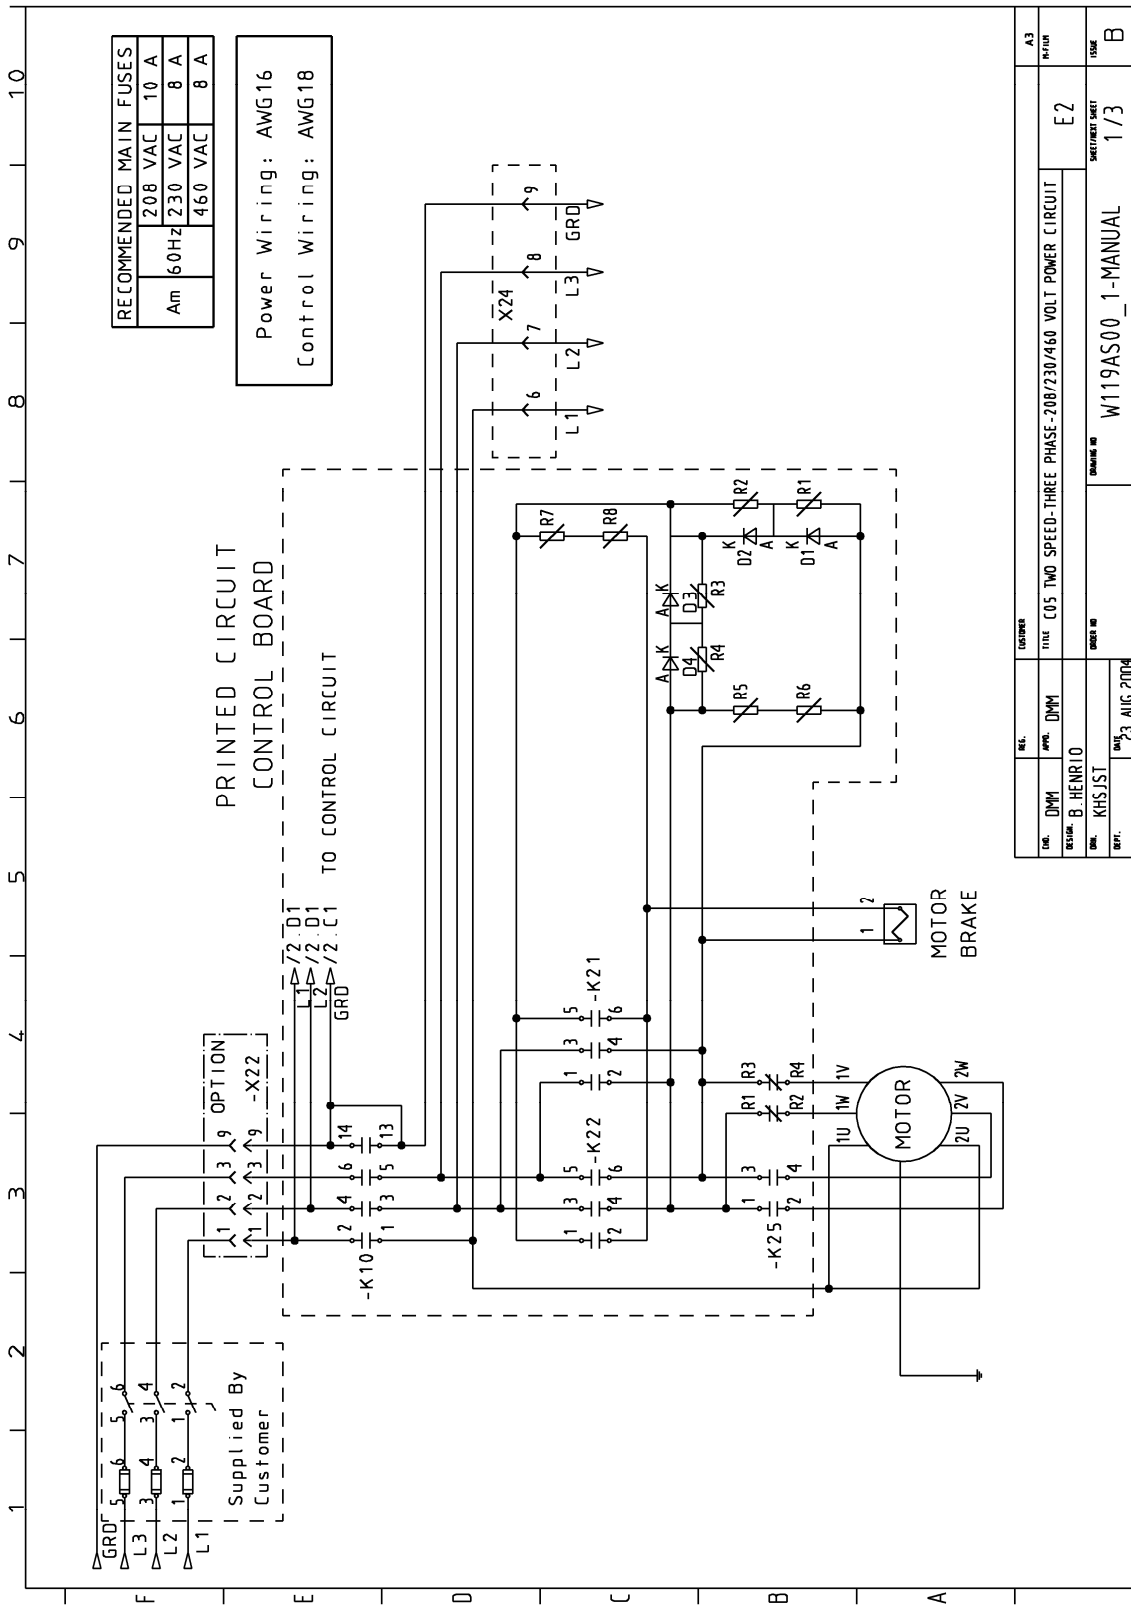

### 7.13 Three Phase – Wiring Diagram – Two-speed Hoist - 208/230/460 volts – Control Circuit

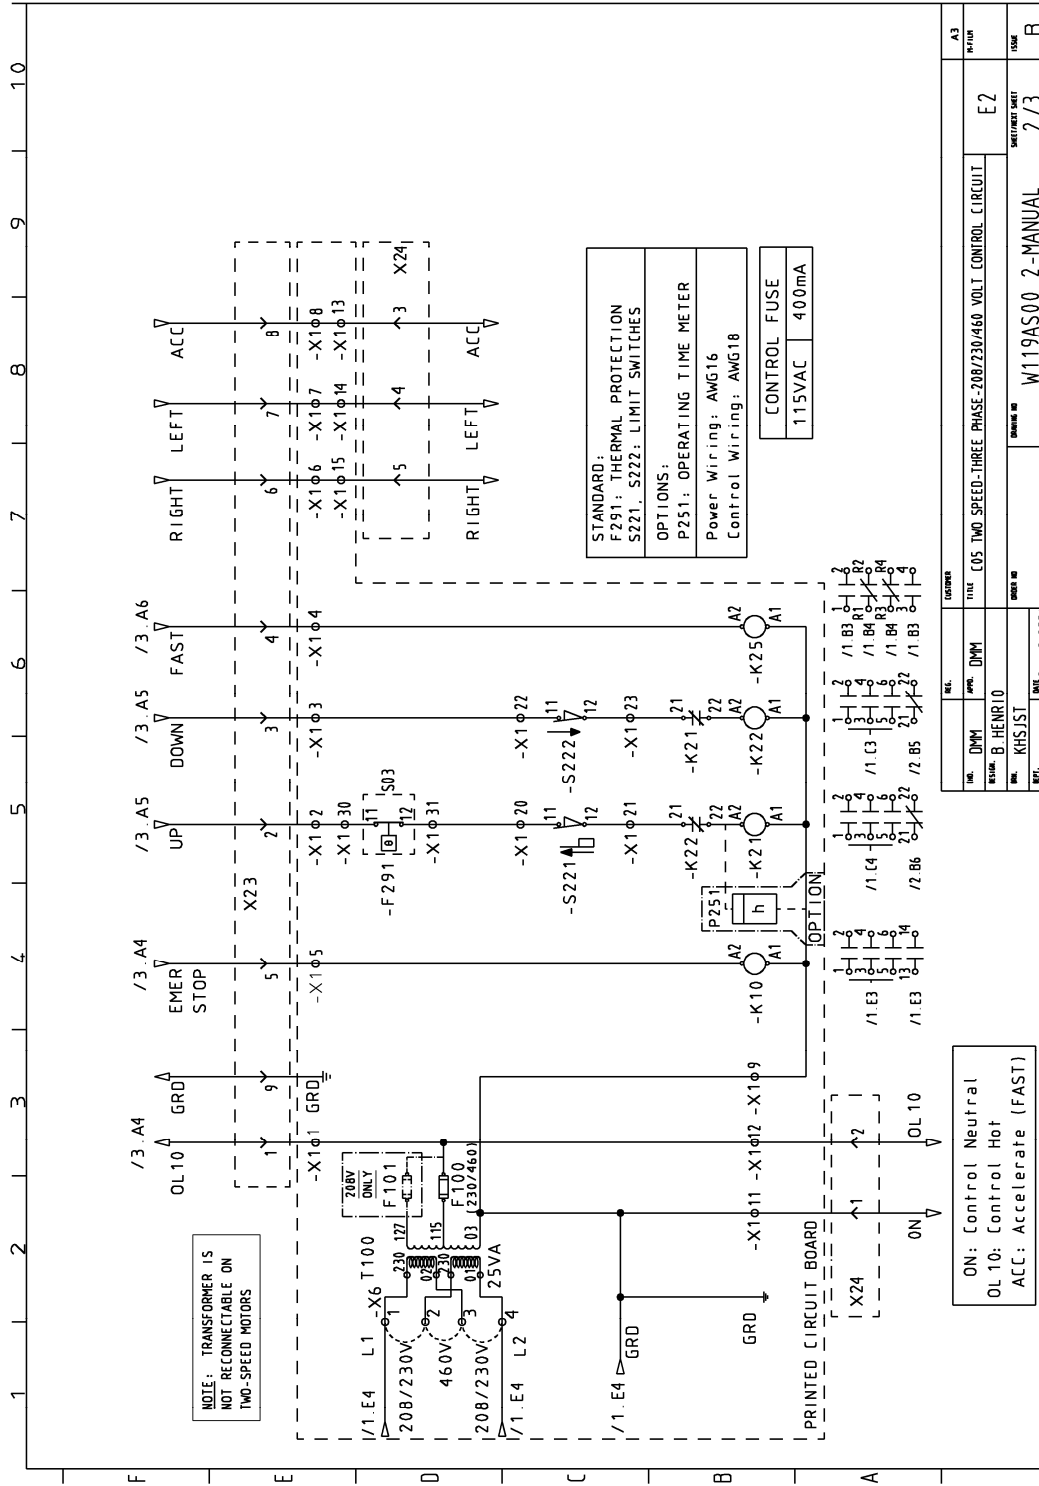

### 7.14 Control Panel Layout – Three Phase – Two-speed Hoist – 575 volts


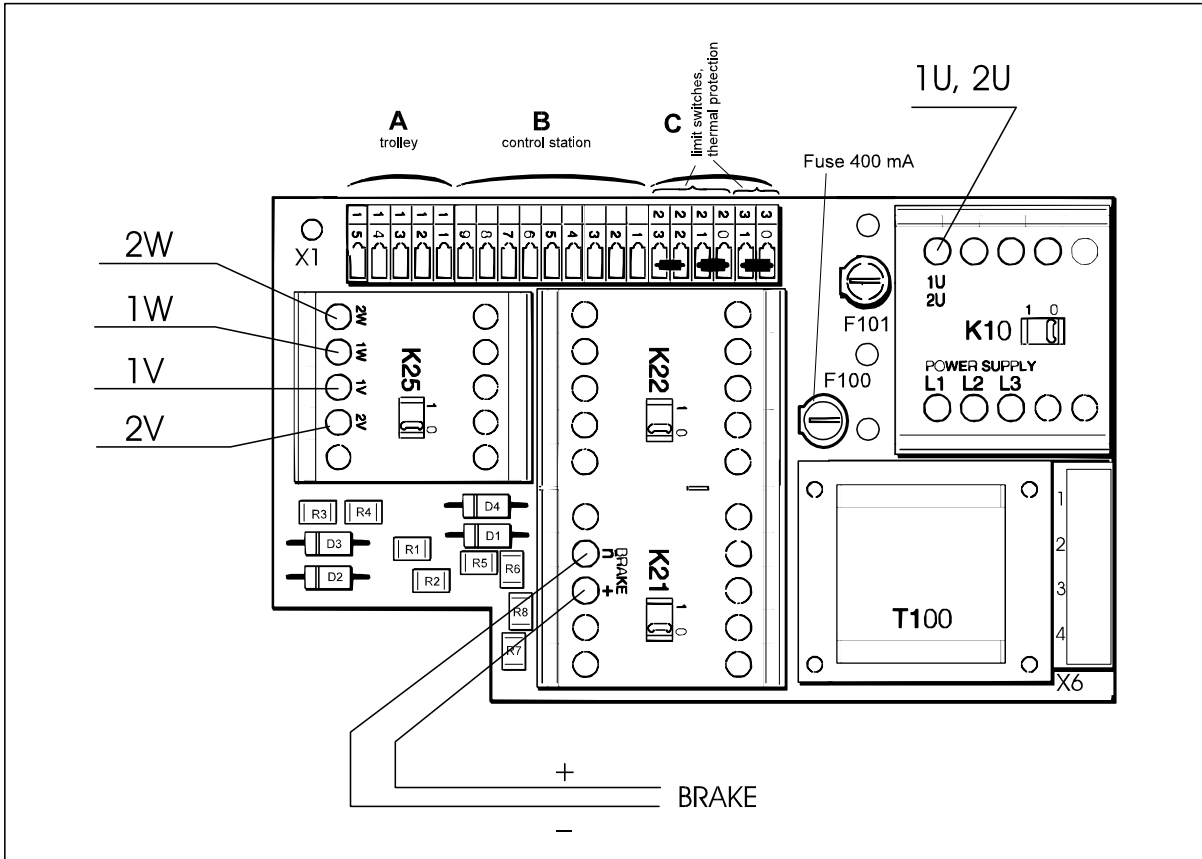


Table 7. Control Panel (Three-Phase Two-Speed 575v) Parts List

ITEM	DESCRIPTION
L1	HOIST POWER SUPPLY – PHASE 1
L2	HOIST POWER SUPPLY – PHASE 2
L3	HOIST POWER SUPPLY – PHASE 3
PE	POWER SUPPLY GROUND
X1	TERMINAL STRIP ON PRINTED CIRCUIT BOARD
X6	TERMINAL STRIP ON CONTROL TRANSFORMER – NOTE JUMPER CONNECTIONS
BRAKE (-)	BRAKE COIL SUPPLY (NEGATIVE)
BRAKE (+)	BRAKE COIL SUPPLY (POSITIVE)
X23	PUSH BUTTON PLUG CONNECTION
X24	MOTORIZED TROLLEY PLUG CONNECTION
K10	MAIN LINE CONTACTOR
K21	HOIST “UP” CONTACTOR
K22	HOIST “DOWN” CONTACTOR
K25	HOIST TWO-SPEED FAST CONTACTOR
T100	CONTROL TRANS FORMER
F100	FUSE HOLDER POSITION
1U, 2U	MOTOR SUPPLY LEADS
1V	MOTOR SUPPLY LEAD
2V	MOTOR SUPPLY LEAD
1W	MOTOR SUPPLY LEAD
2W	MOTOR SUPPLY LEAD

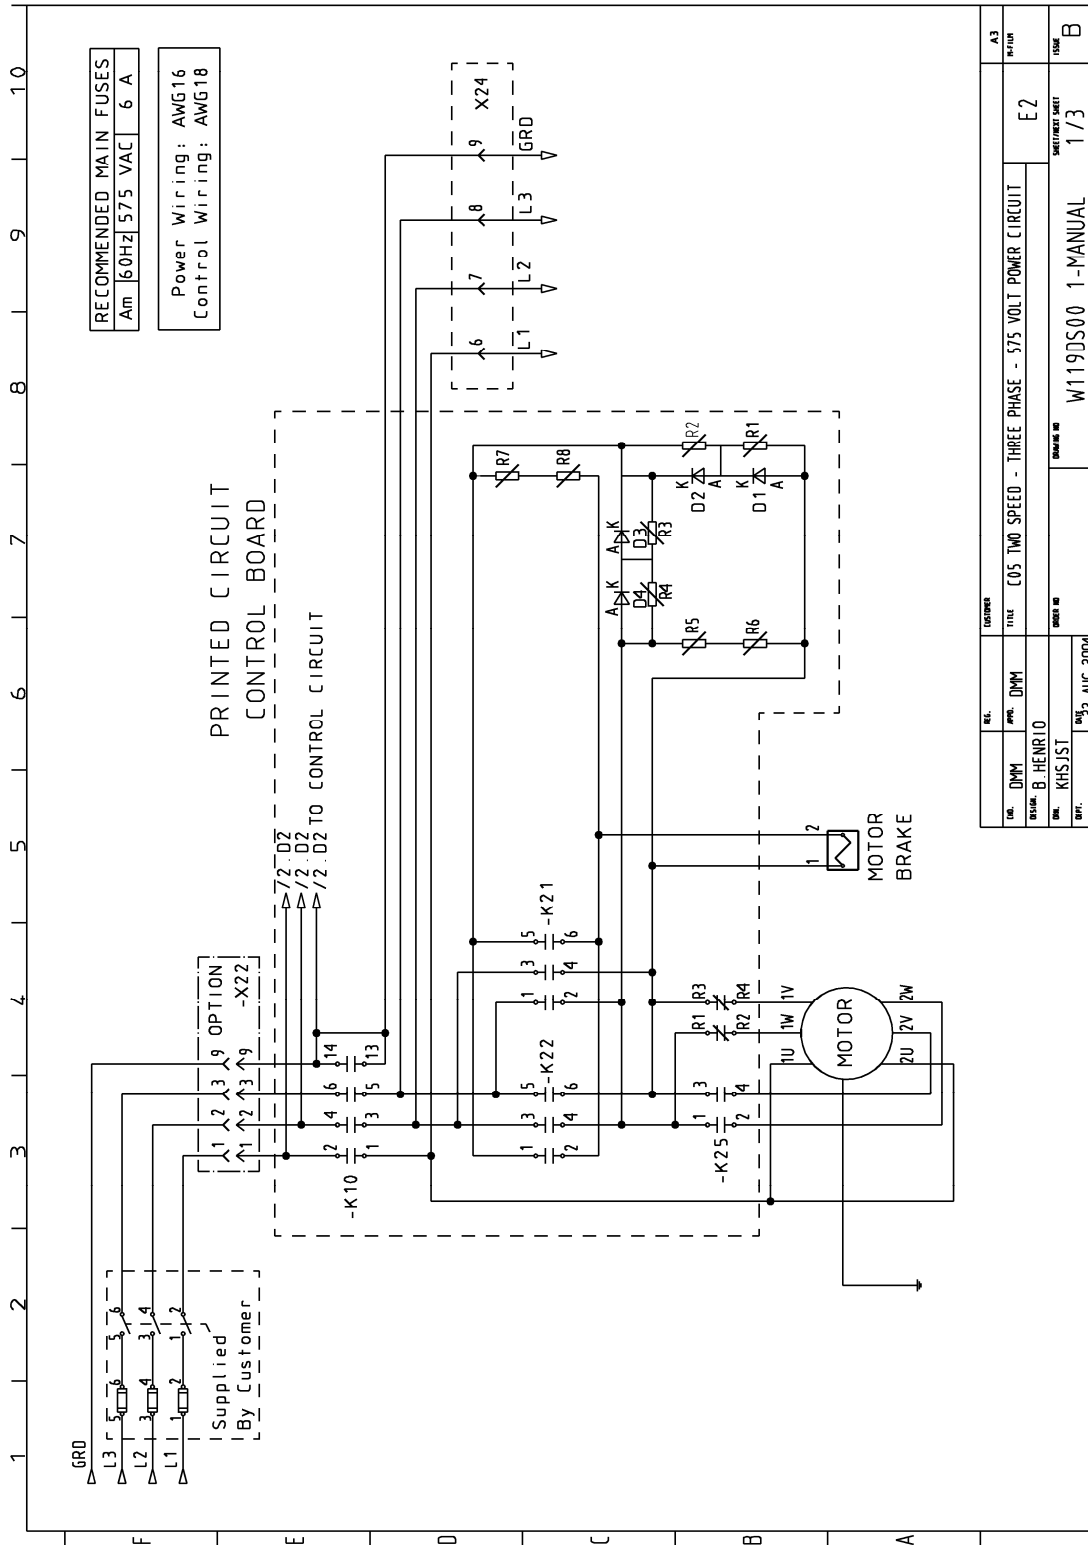


### 7.15 Three Phase – Wiring Diagram – Two-speed Hoist – 575 volts – Power Circuit



REV.	DATE	BY	CHKD	DESCRIPTION
1	03 AUG 2008	B.HENRTO	KHSJST	C05 TWO SPEED - THREE PHASE - 575 VOLT POWER CIRCUIT
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				
46				
47				
48				
49				
50				
51				
52				
53				
54				
55				
56				
57				
58				
59				
60				
61				
62				
63				
64				
65				
66				
67				
68				
69				
70				
71				
72				
73				
74				
75				
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				
91				
92				
93				
94				
95				
96				
97				
98				
99				
100				
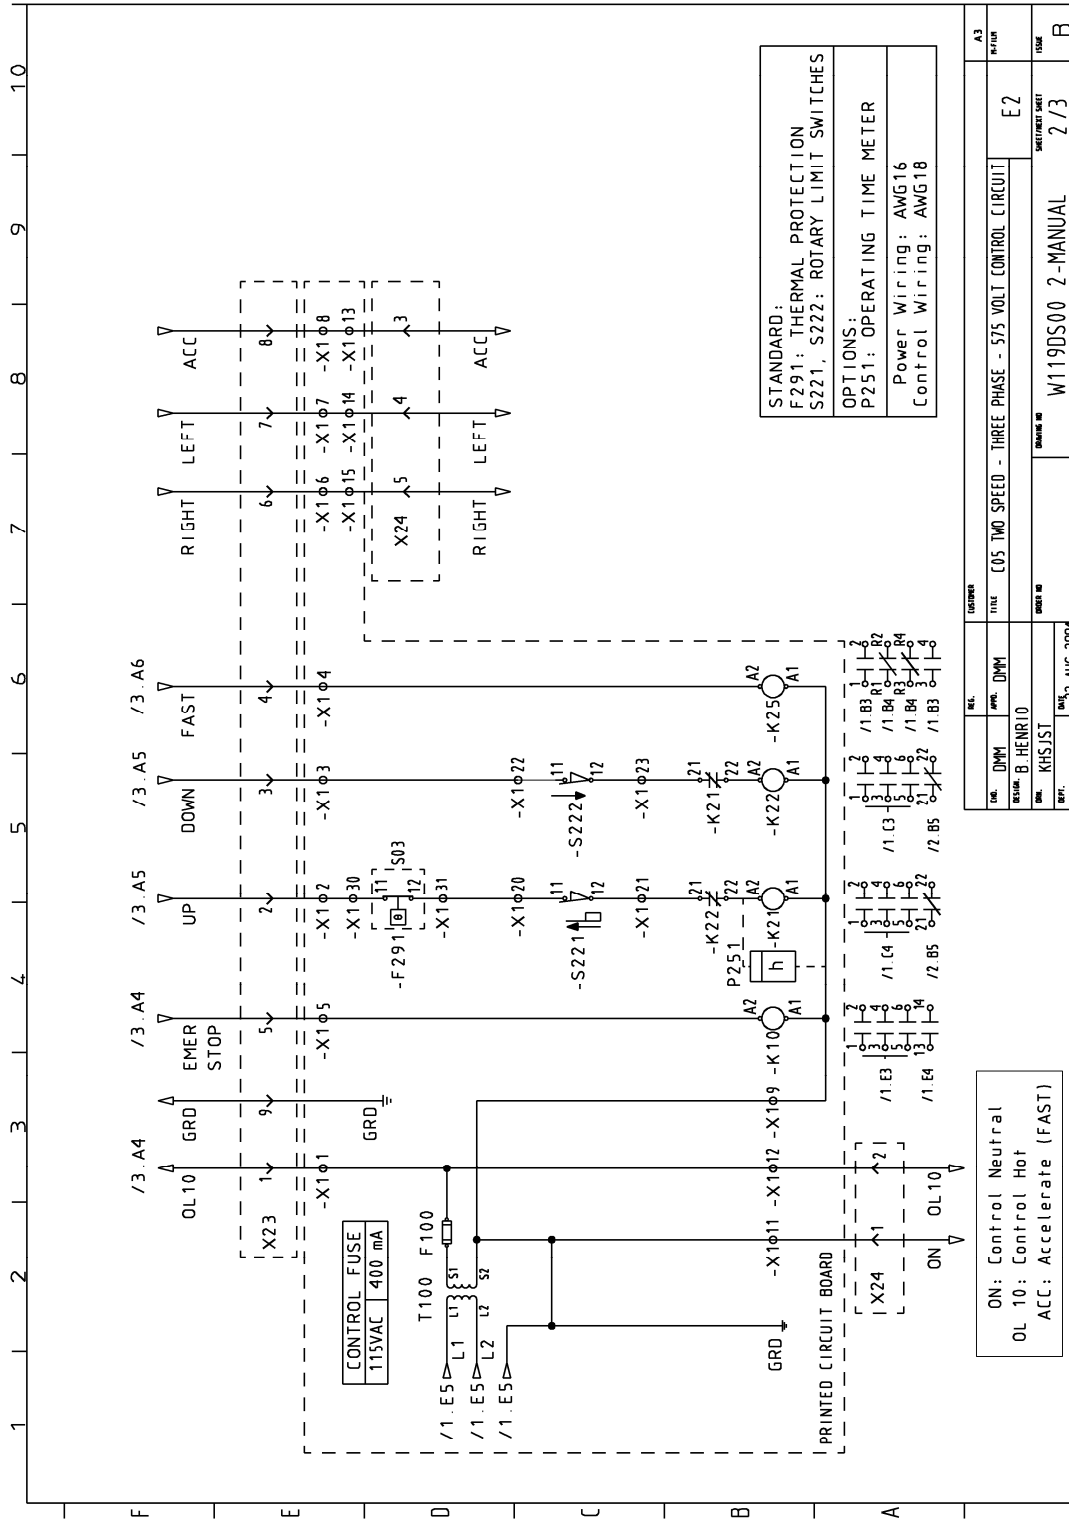
## 7.16 Three Phase – Wiring Diagram – Two-speed Hoist – 575 volts – Control Circuit



### 7.17 Control Panel Layout – Three Phase – Single Speed Hoist – 208/230 volts

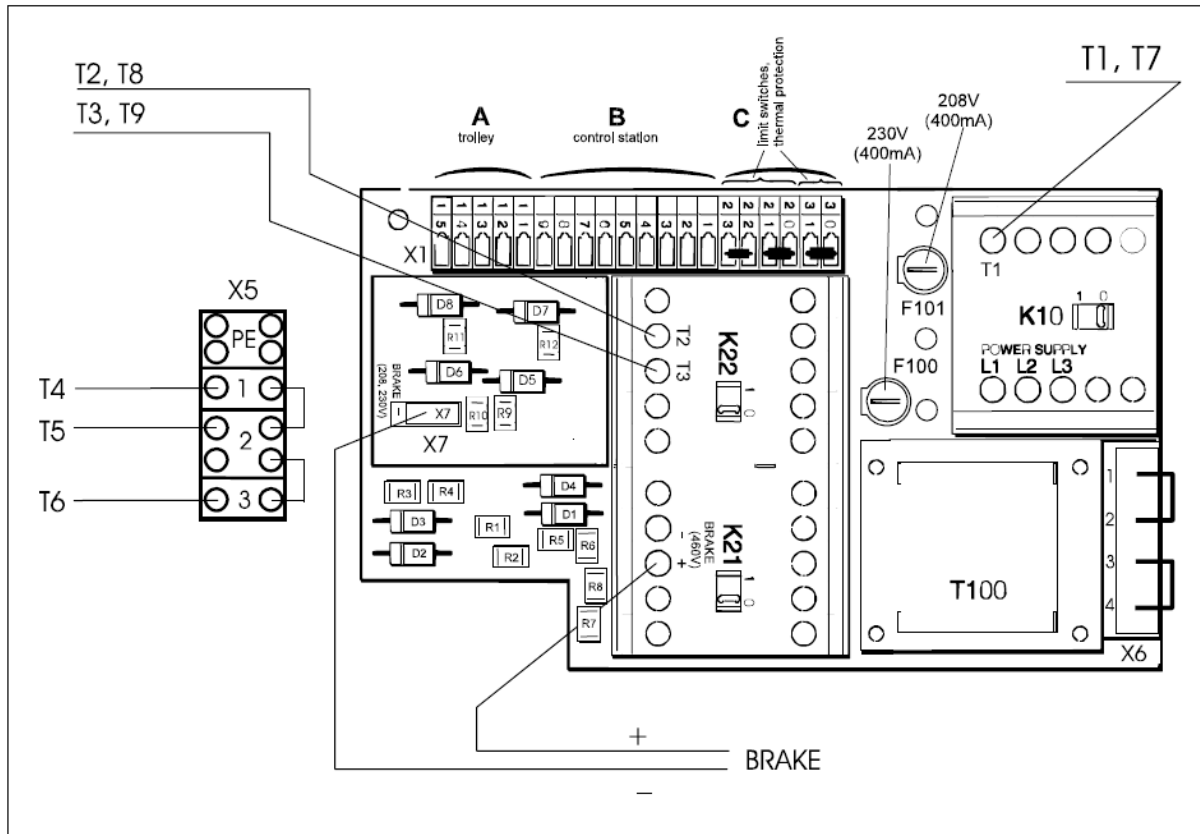


Table 8. Control Panel (Three-Phase Single-Speed Hoist 208/230v) Parts List

ITEM	DESCRIPTION
L1	HOIST POWER SUPPLY – PHASE 1
L2	HOIST POWER SUPPLY – PHASE 2
L3	HOIST POWER SUPPLY – PHASE 3
PE	POWER SUPPLY GROUND
X1	TERMINAL STRIP ON PRINTED CIRCUIT BOARD
X6	TERMINAL STRIP ON CONTROL TRANSFORMER – NOTE JUMPER CONNECTIONS
BRAKE (-)	BRAKE COIL SUPPLY (NEGATIVE)
BRAKE (+)	BRAKE COIL SUPPLY (POSITIVE)
X23	PUSH BUTTON PLUG CONNECTION
X24	MOTORIZED TROLLEY PLUG CONNECTION
K10	MAIN LINE CONTACTOR
K21	HOIST "UP" CONTACTOR
K22	HOIST "DOWN" CONTACTOR
K25	HOIST TWO-SPEED FAST CONTACTOR
T100	CONTROL TRANS FORMER
F100	FUSE HOLDER POSITION 230 VOLT OR 460 VOLT SUPPLY
F101	FUSE HOLDER POSITION 208 VOLT ONLY
T1 thru T9	MOTOR SUPPLY LEADS

### 7.18 Control Panel Layout – Three Phase – Single Speed Hoist – 460 volts


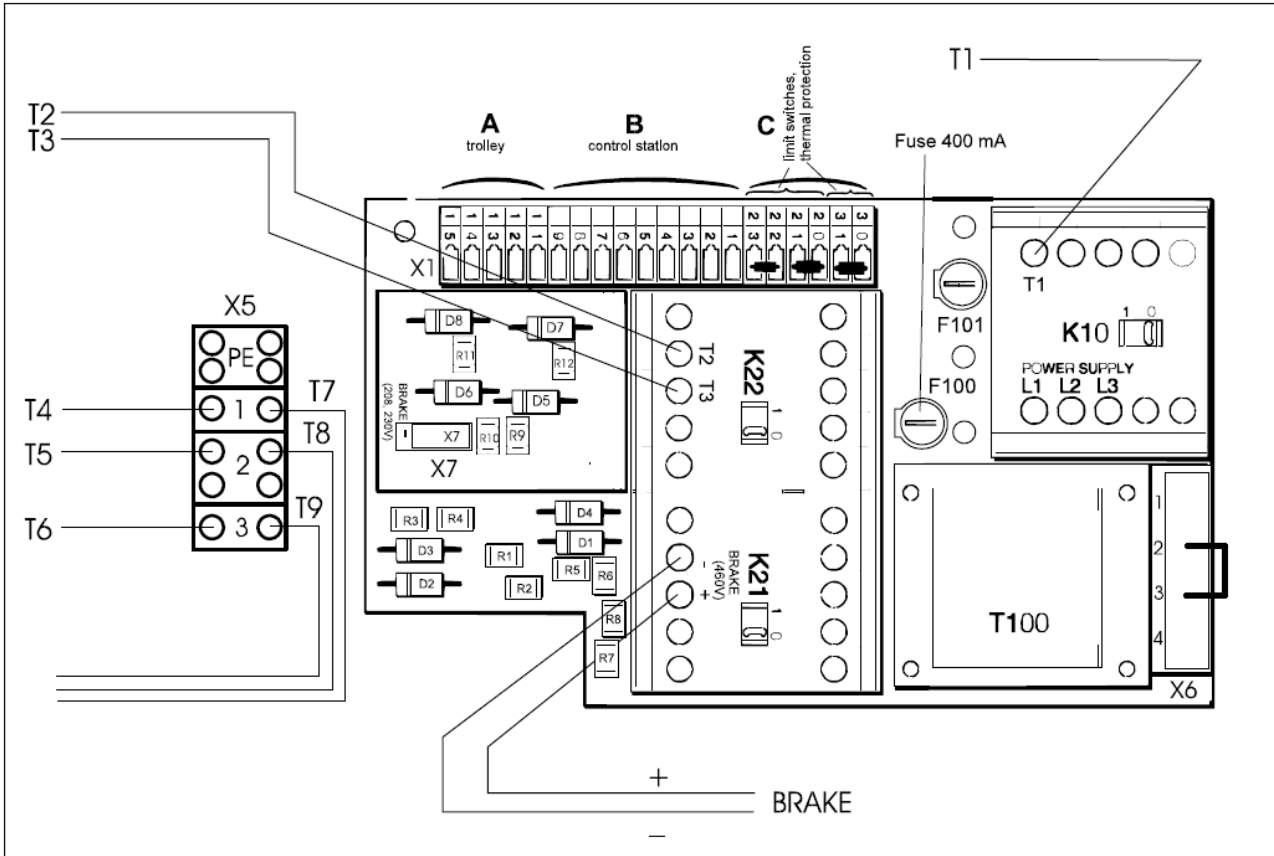


Table 9. Control Panel (Three-Phase Single-Speed Hoist 460v) Parts List

ITEM	DESCRIPTION
L1	HOIST POWER SUPPLY – PHASE 1
L2	HOIST POWER SUPPLY – PHASE 2
L3	HOIST POWER SUPPLY – PHASE 3
PE	POWER SUPPLY GROUND
X1	TERMINAL STRIP ON PRINTED CIRCUIT BOARD
X6	TERMINAL STRIP ON CONTROL TRANSFORMER – NOTE JUMPER CONNECTIONS
BRAKE (-)	BRAKE COIL SUPPLY (NEGATIVE)
BRAKE (+)	BRAKE COIL SUPPLY (POSITIVE)
X23	PUSH BUTTON PLUG CONNECTION
X24	MOTORIZED TROLLEY PLUG CONNECTION
K10	MAIN LINE CONTACTOR
K21	HOIST “UP” CONTACTOR
K22	HOIST “DOWN” CONTACTOR
K25	HOIST TWO-SPEED FAST CONTACTOR
T100	CONTROL TRANS FORMER
F100	FUSE HOLDER POSITION 460 VOLT SUPPLY
T1 thru T9	MOTOR SUPPLY LEADS


### 7.19 Three Phase – Wiring Diagram – Single Speed Hoist – 208/230/460 volts – Power Circuit

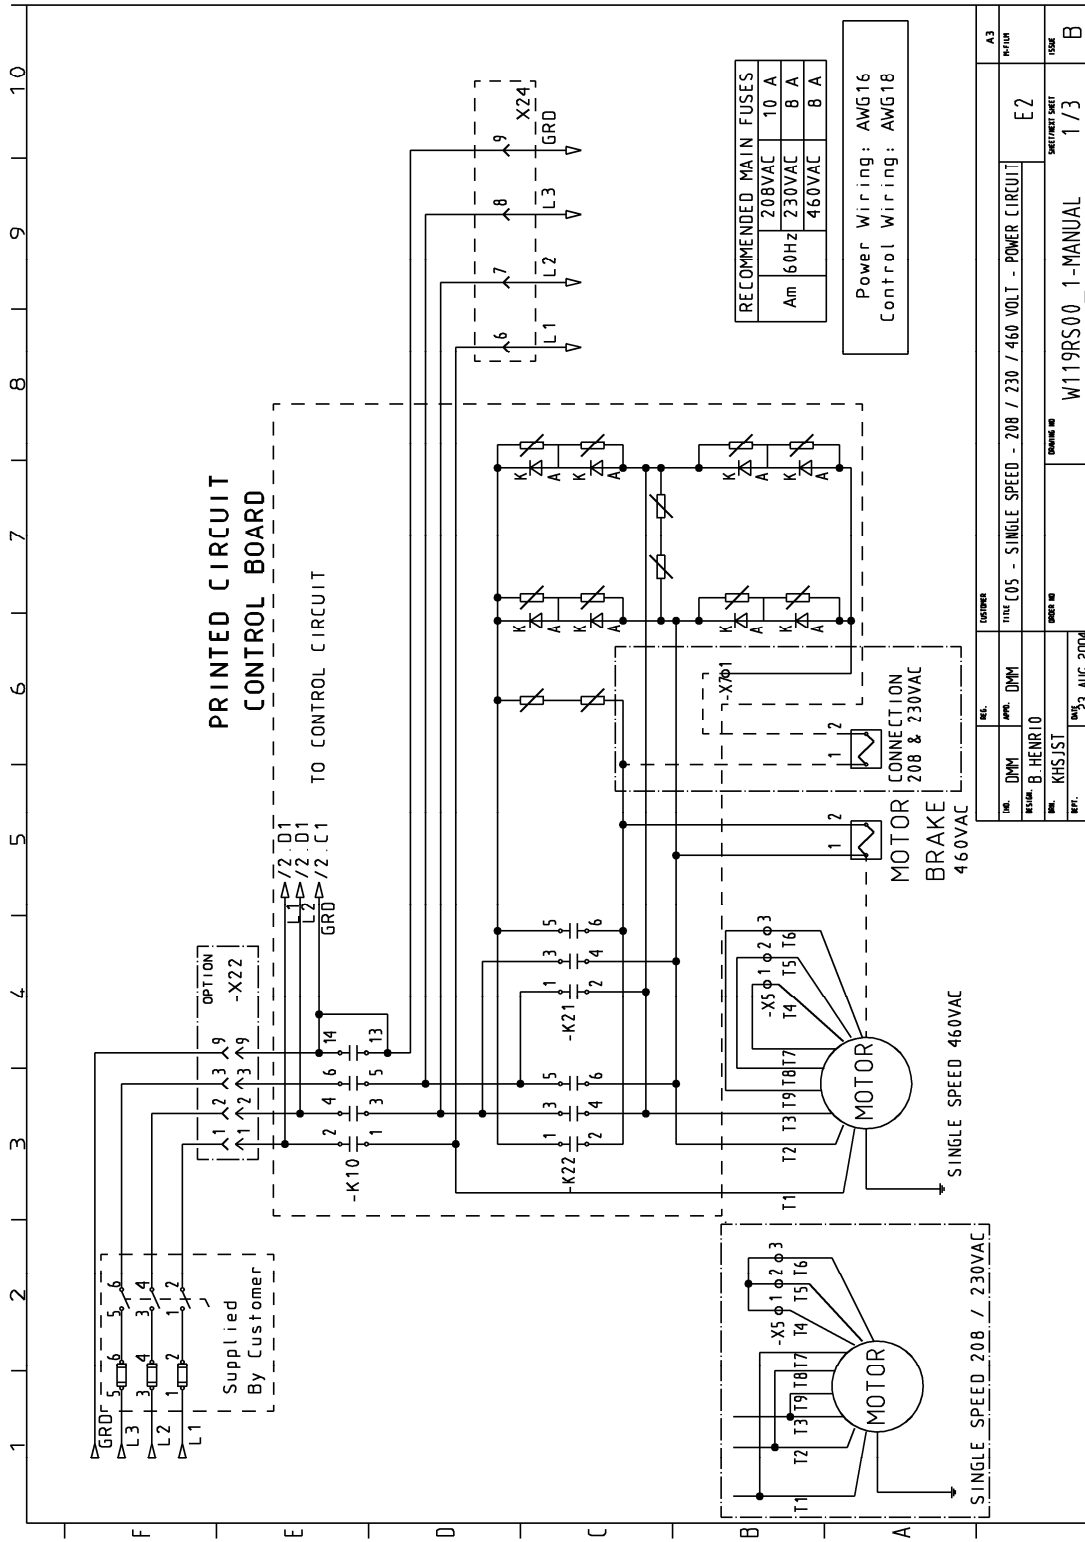

REV.	DATE	BY	CHKD.	APP'D.	TITLE
1	23 AUG 2008	KHSJST	B HENRIO	DMM	SINGLE SPEED - 208 / 230 / 460 VOLT - POWER CIRCUIT
2					
3					

DRWING NO: W119RS00\_1-MANUAL  
SHEET NO: 1/3

## 7.20 Three Phase – Wiring Diagram – Single Speed Hoist – 208/230/460 volts – Control Circuit

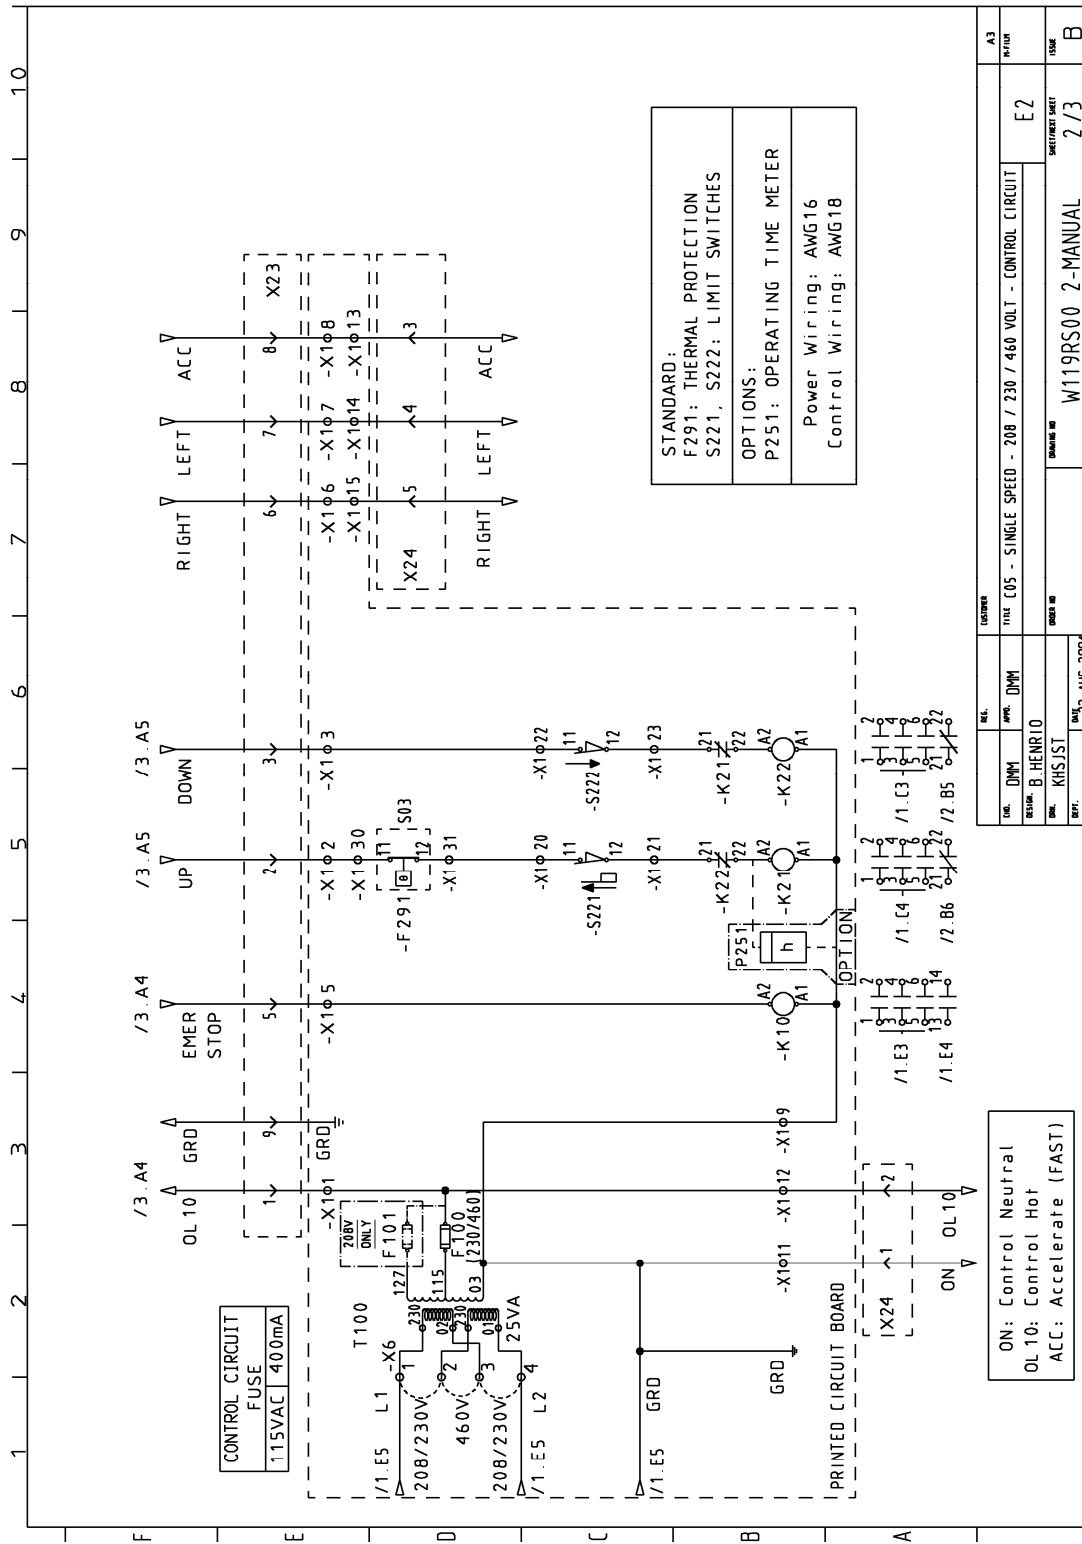

## 7.21 Power Supply Layout – Single Phase – Control Panel – 115V


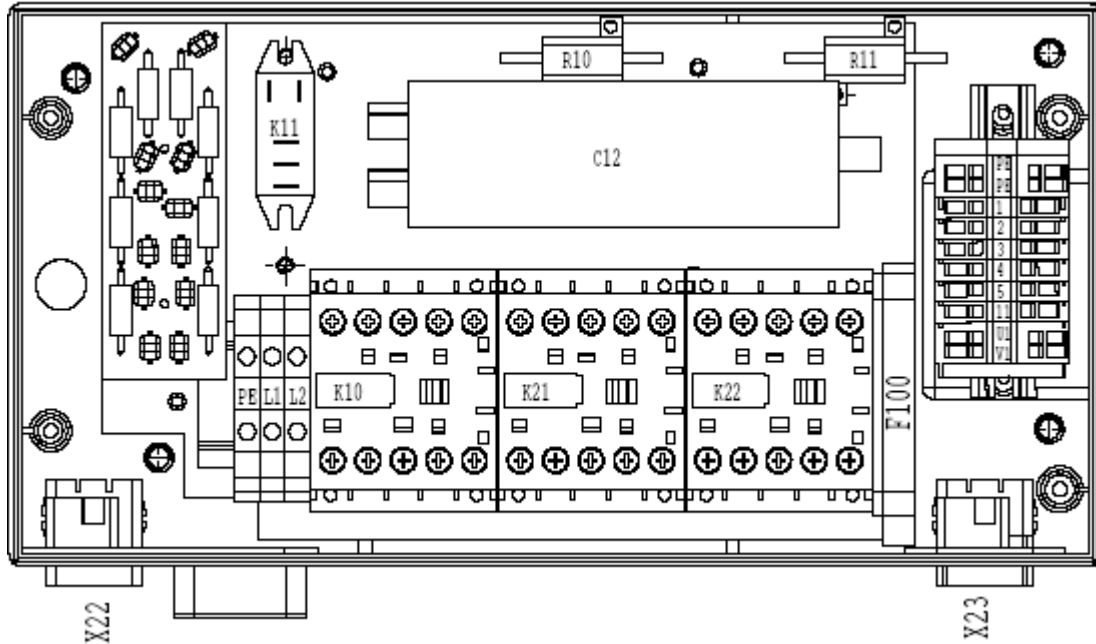


Table 10. Power Supply (Single-Phase Control Panel 115v) Parts List


ITEM	DESCRIPTION
L1	HOIST POWER SUPPLY – NEUTRAL
L2	HOIST POWER SUPPLY – POWER PHASE
PE	POWER SUPPLY GROUND
X1	TERMINAL STRIP ON PRINTED CIRCUIT BOARD
X6	TERMINAL STRIP ON CONTROL TRANSFORMER – NOTE JUMPER CONNECTIONS
BRAKE (-)	BRAKE COIL SUPPLY (NEGATIVE)
BRAKE (+)	BRAKE COIL SUPPLY (POSITIVE)
X22	POWER SUPPLY PLUG (OPTIONAL)
X23	PUSH BUTTON PLUG CONNECTION
X24	MOTORIZED TROLLEY PLUG CONNECTION
K10	MAIN LINE CONTACTOR
K21	HOIST “UP” CONTACTOR
K22	HOIST “DOWN” CONTACTOR
T100	CONTROL TRANSFORMER
F100	FUSE HOLDER POSITION
	MOTOR SUPPLY LEADS

### 7.22 Single Phase – Wiring Diagram – 115V Power Circuit

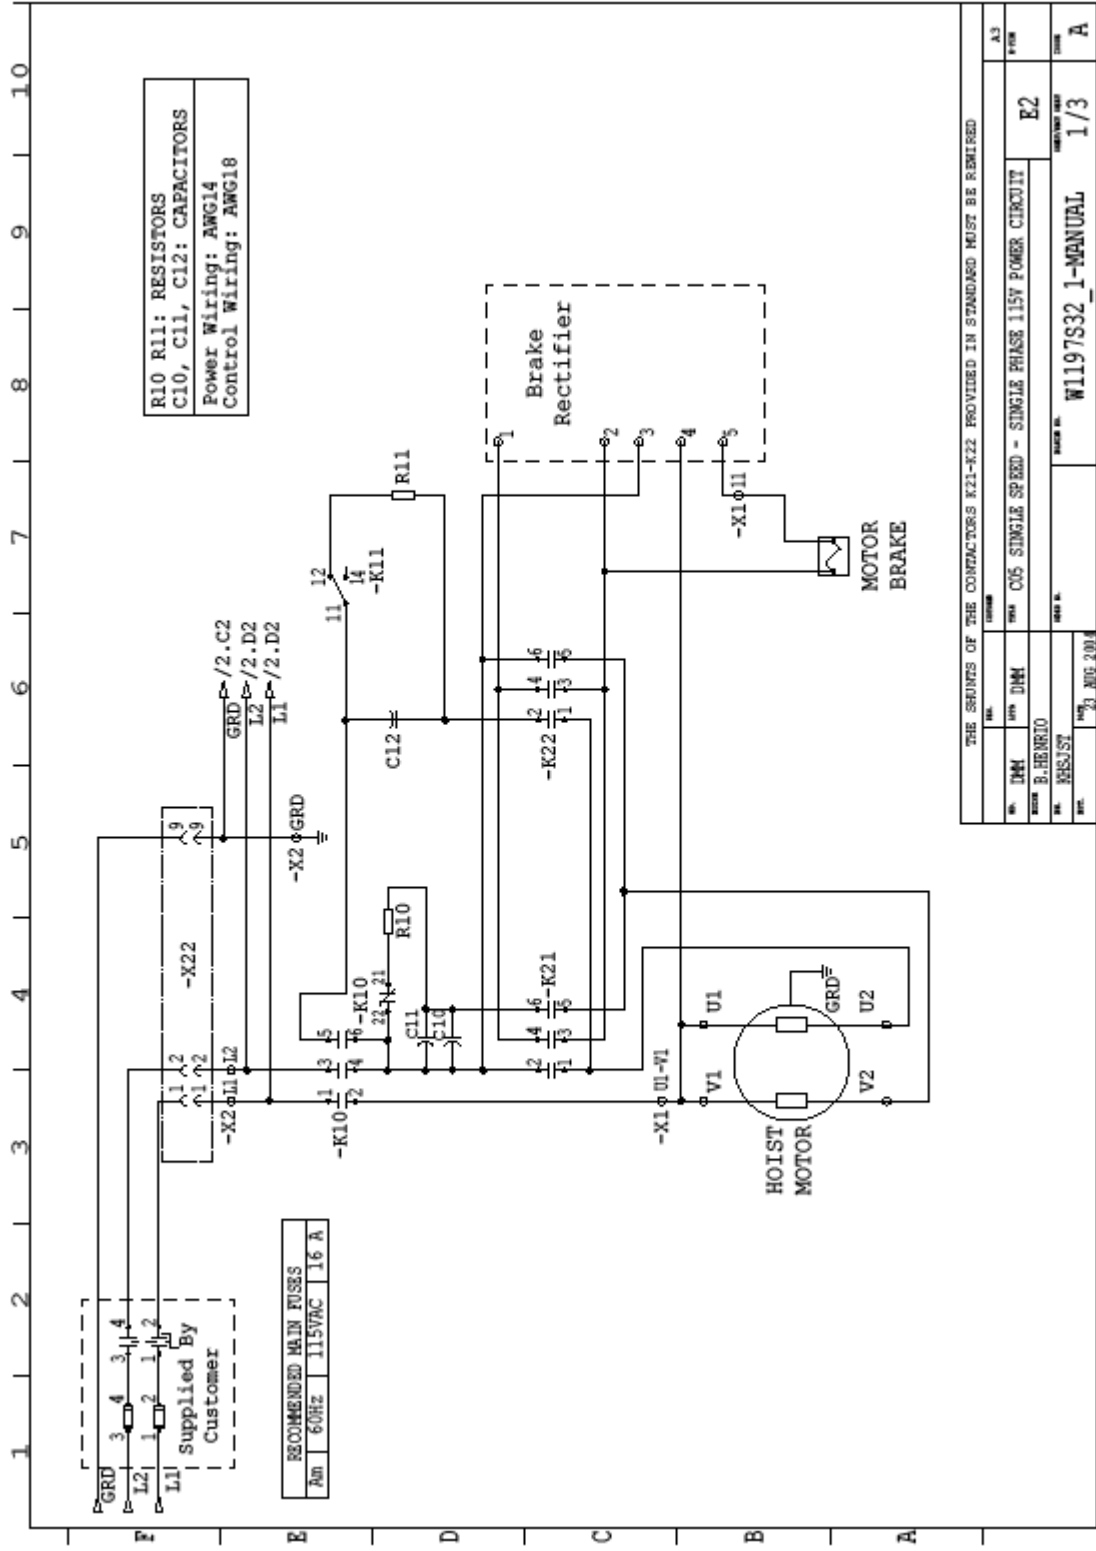





### 7.23 Single Phase – Wiring Diagram – Control Circuit

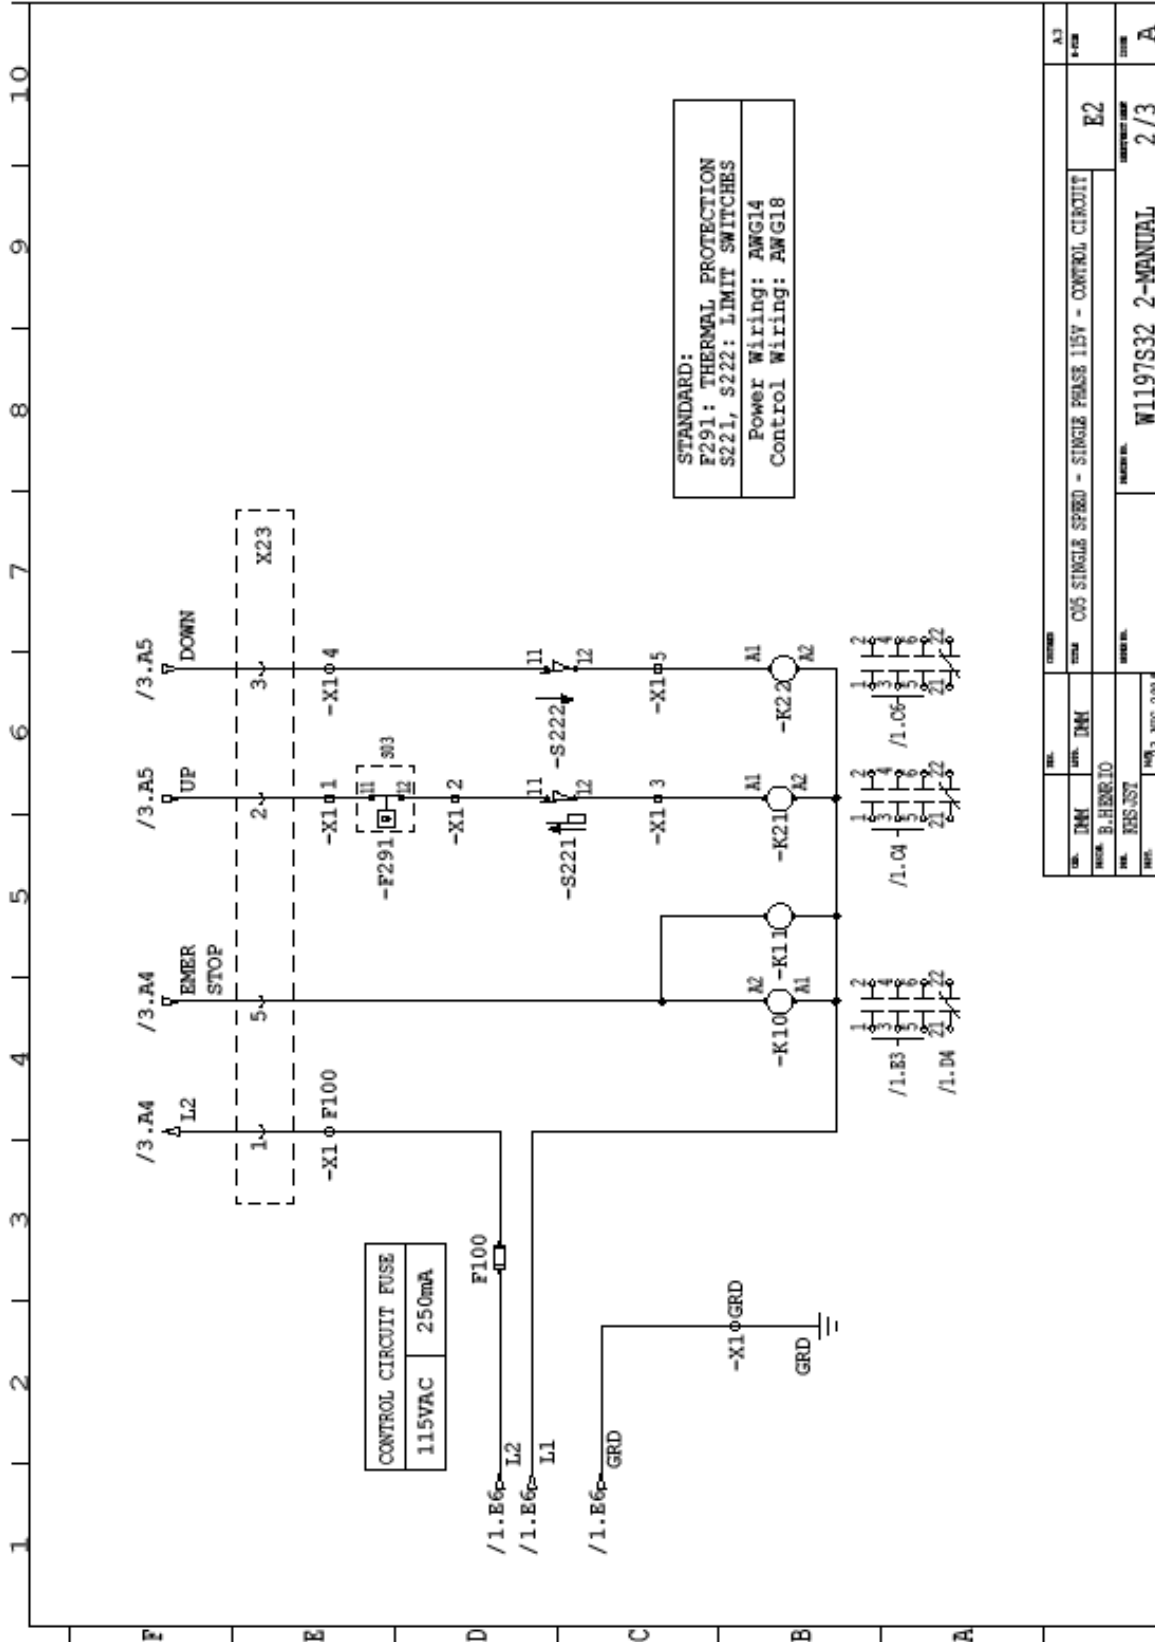


### 7.24 Wiring Diagram – Single Phase – 3 Button – Push Button

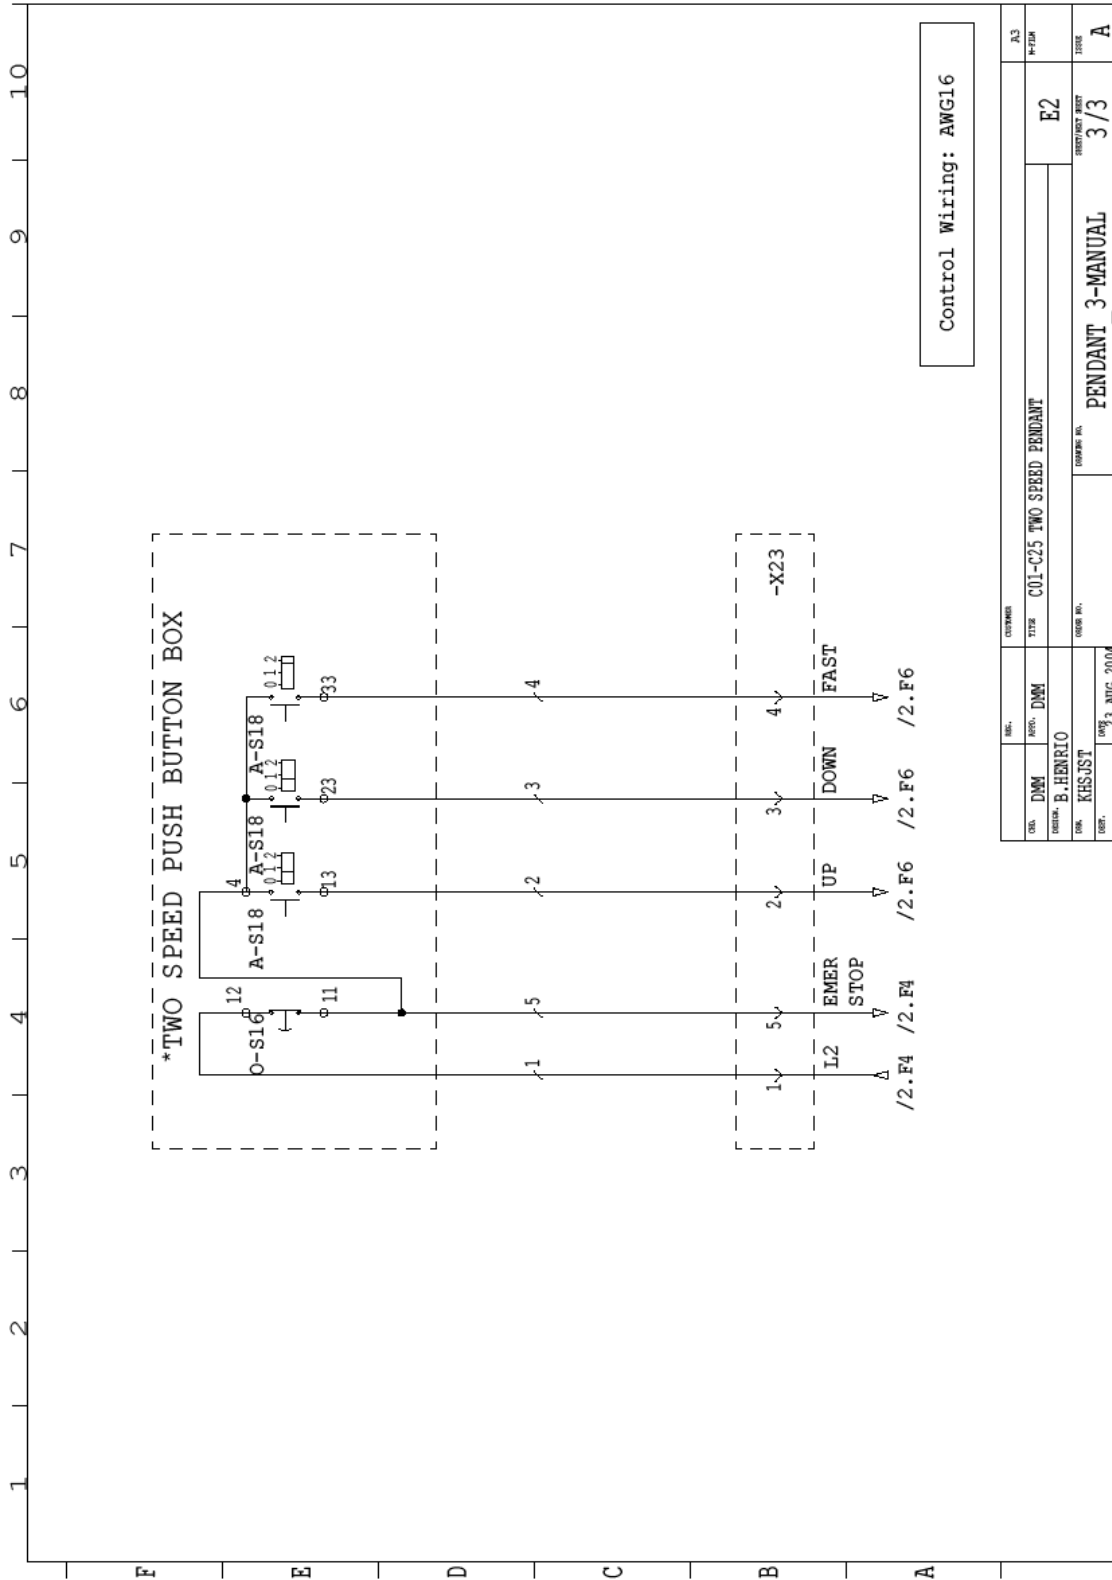

### 7.25 Wiring Diagram – 5 Button – Push Button

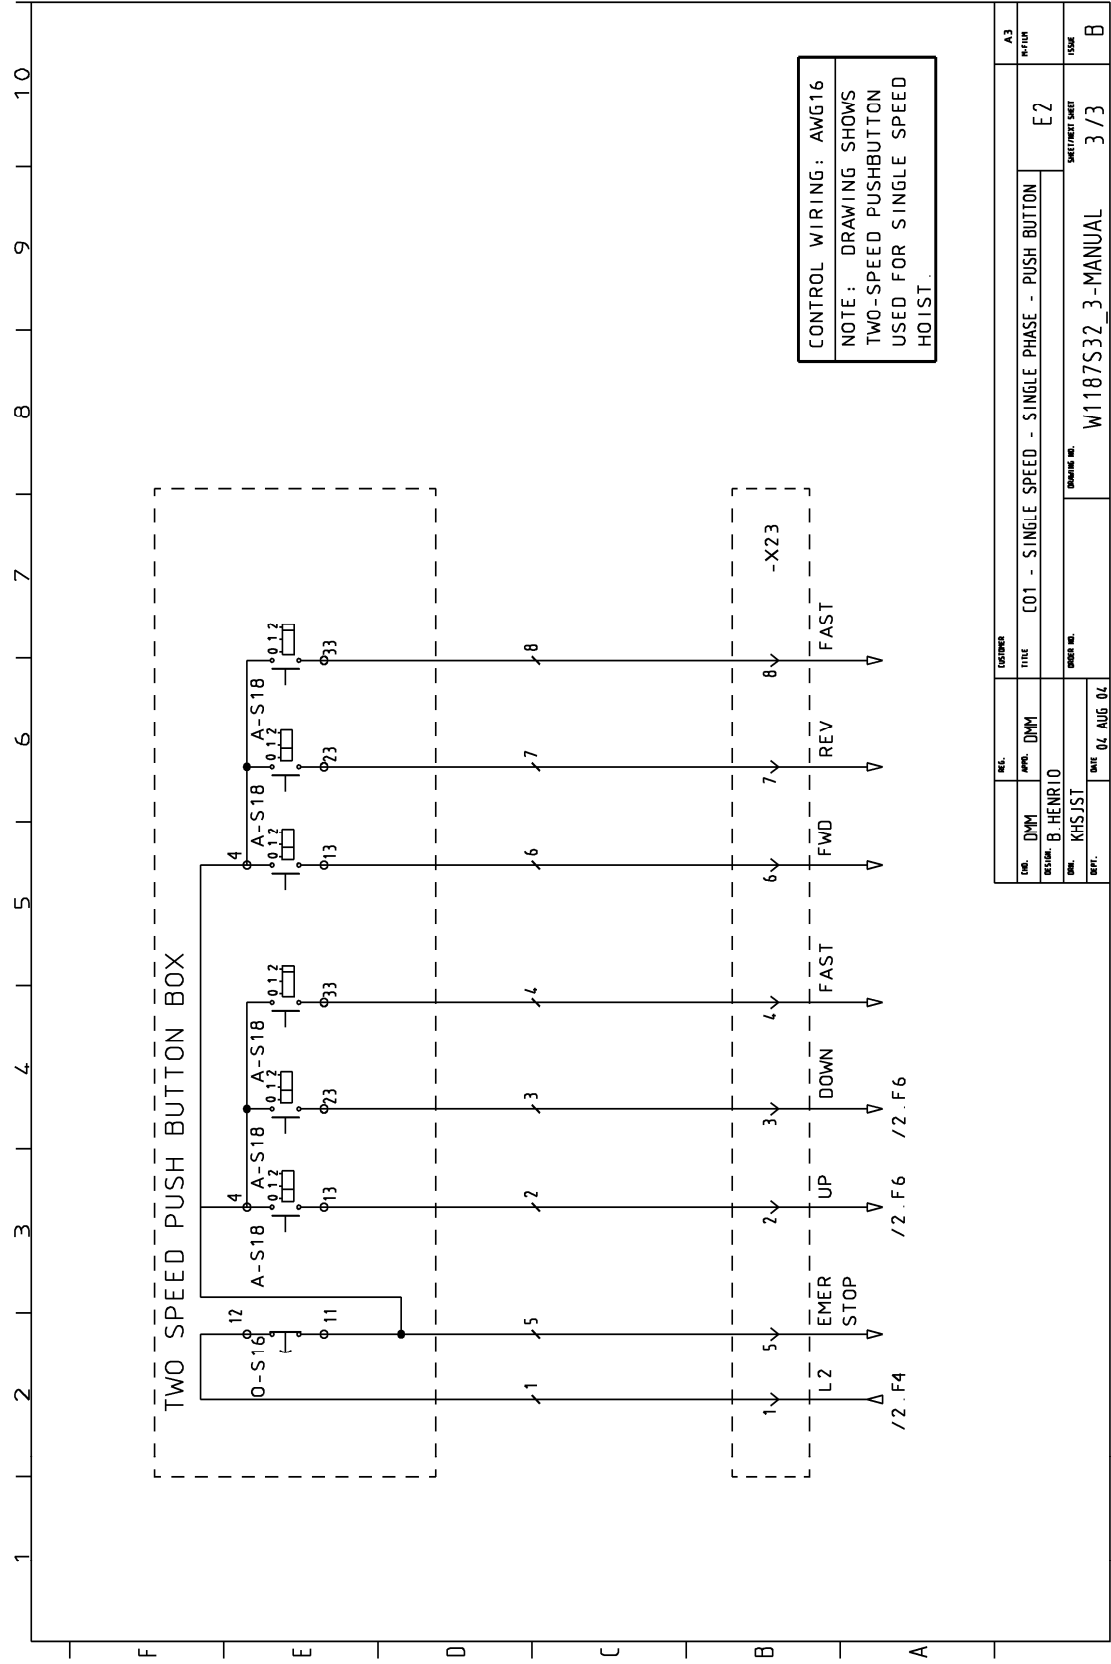

### 7.26 Wiring Diagram – 7 Button – Push Button

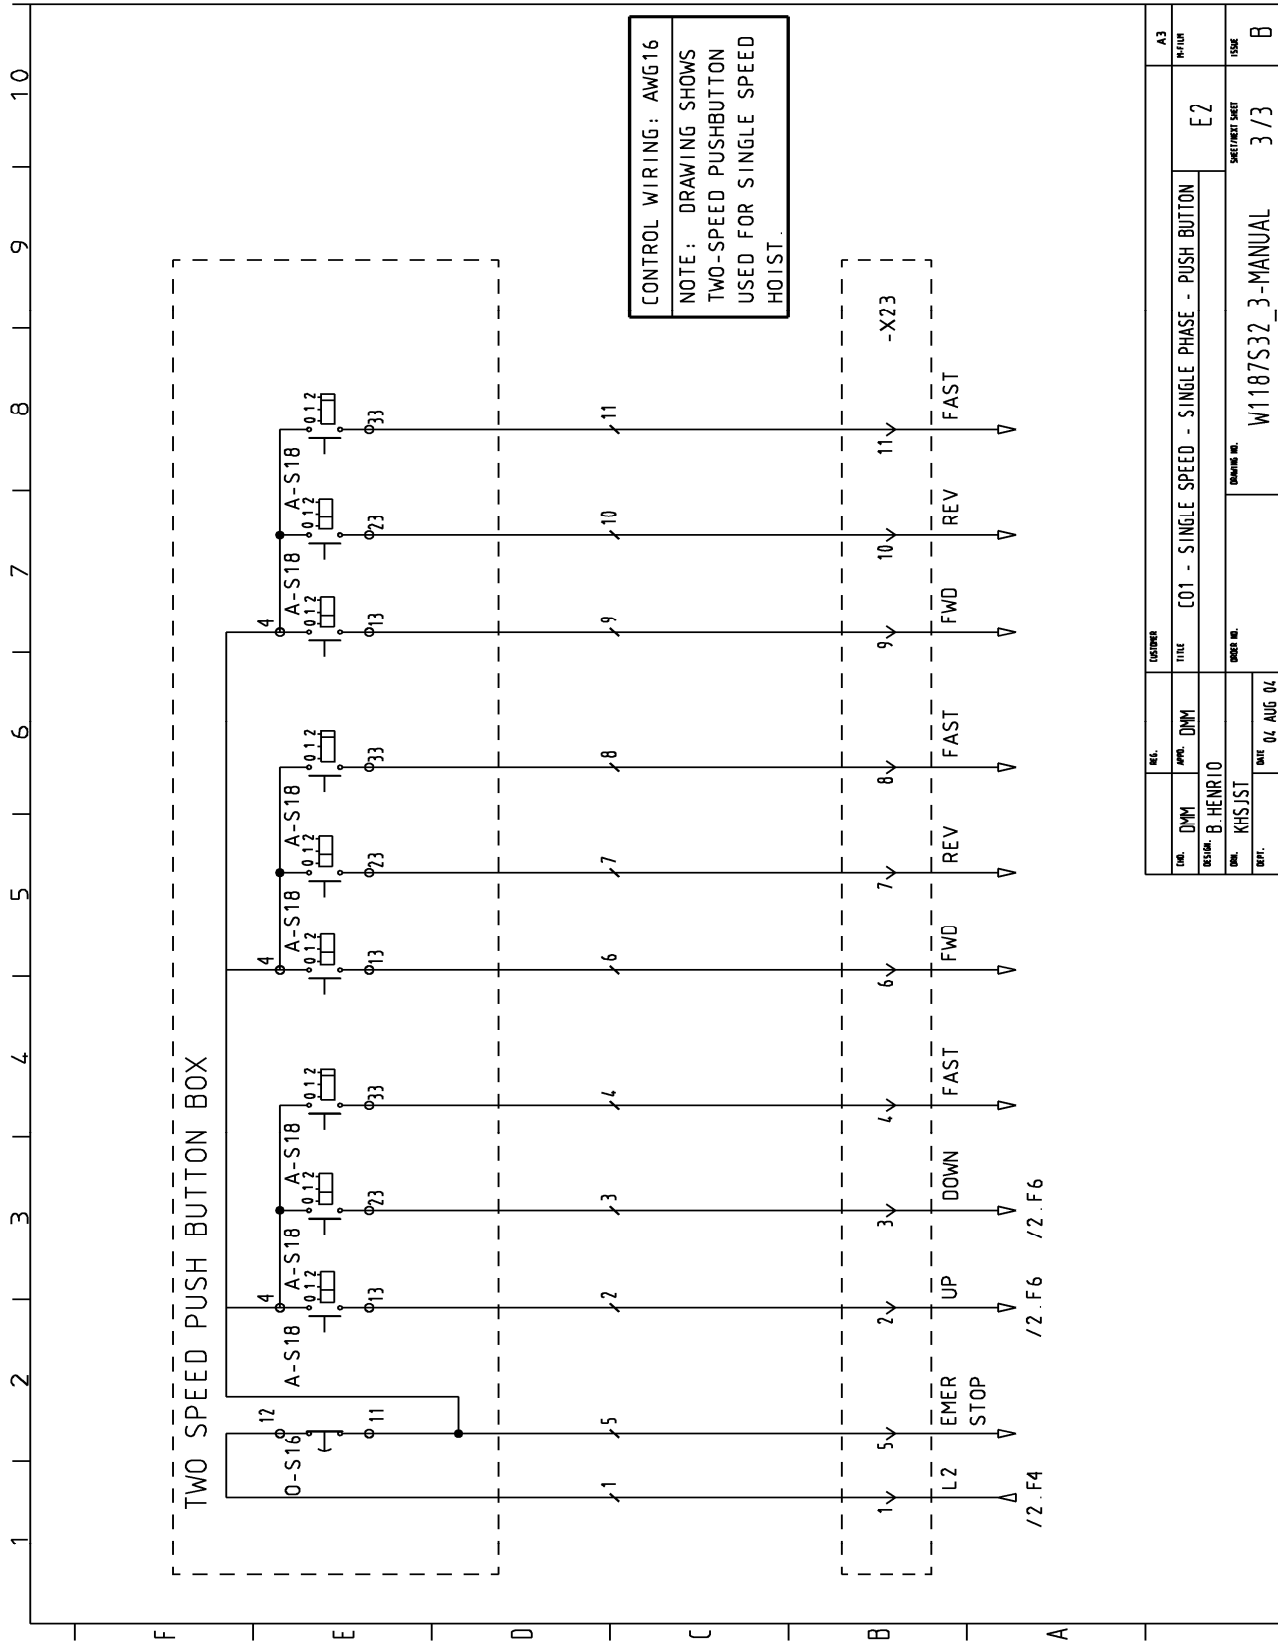

## 8 PREVENTATIVE MAINTENANCE

### 8.1 Maintenance and Inspection Table

Table 11. Maintenance and Inspection Schedule

INSPECTION CHECK	INTERVAL	QUALIFIED PERSON
BRAKE OPERATION FOR HOLDING AND RELEASING	DAILY	OPERATOR
LOAD CHAIN FOR DAMAGE	DAILY	OPERATOR
SUSPENSION SUPPORT OF P/ B ASSEMBLY	DAILY	OPERATOR
CLEANLINESS & LUBRICATION OF LOAD CHAIN	MONTHLY	OPERATOR
UPPER / LOWER LIMIT SWITCHES	DAILY	OPERATOR
CHECK LOAD CHAIN FOR WEAR – MEASURE AND RECORD	EVERY 3 MONTHS	QUALIFIED INSPECTOR
CHECK HOOKS FOR WEAR MEASURE AND RECORD	EVERY 3 MONTHS	QUALIFIED INSPECTOR
CHECK LOAD BLOCK HARDWARE TO VERIFY TIGHTNESS	EVERY 3 MONTHS	OPERATOR
CHECK TOP HOOK / COUPLING HARDWARE FOR TIGHTNESS	EVERY 3 MONTHS	OPERATOR
CHECK SLIP CLUTCH & HOIST BRAKE ADJUSTMENT	EVERY 3 -6 MONTHS	QUALIFIED MECHANIC
CHECK LUBRICATION OF OPEN WHEEL GEARING	EVERY 3 -6 MONTHS	QUALIFIED MECHANIC
CHECK WIRE TERMINALS TIGHTNESS	SEMI-ANNUALLY	QUALIFIED MECHANIC
LUBRICATE 2-FALL LOAD BLOCK SPROCKET	ANNUALLY	OPERATOR
CHECK ALL HARDWARE FOR TIGHTNESS AND CORROSION	ANNUALLY	QUALIFIED MECHANIC
CLEAN MOTOR COOLING FINS	ANNUALLY	QUALIFIED MECHANIC
LUBRICATE ALL GEARING	ANNUALLY	QUALIFIED MECHANIC
INSPECT LOAD BLOCK THRUST BEARING	ANNUALLY	QUALIFIED MECHANIC



**CAUTION: INSPECTION AND MAINTENANCE INTERVALS SHOULD BE ADJUSTED BASED UPON OWNER / USER KNOWLEDGE OF APPLICATION, ENVIRONMENT, AND FREQUENCY OF USE TO PREVENT DAMAGE TO PEOPLE, EQUIPMENT, AND FACILITIES.**

## 8.2 Lubrication

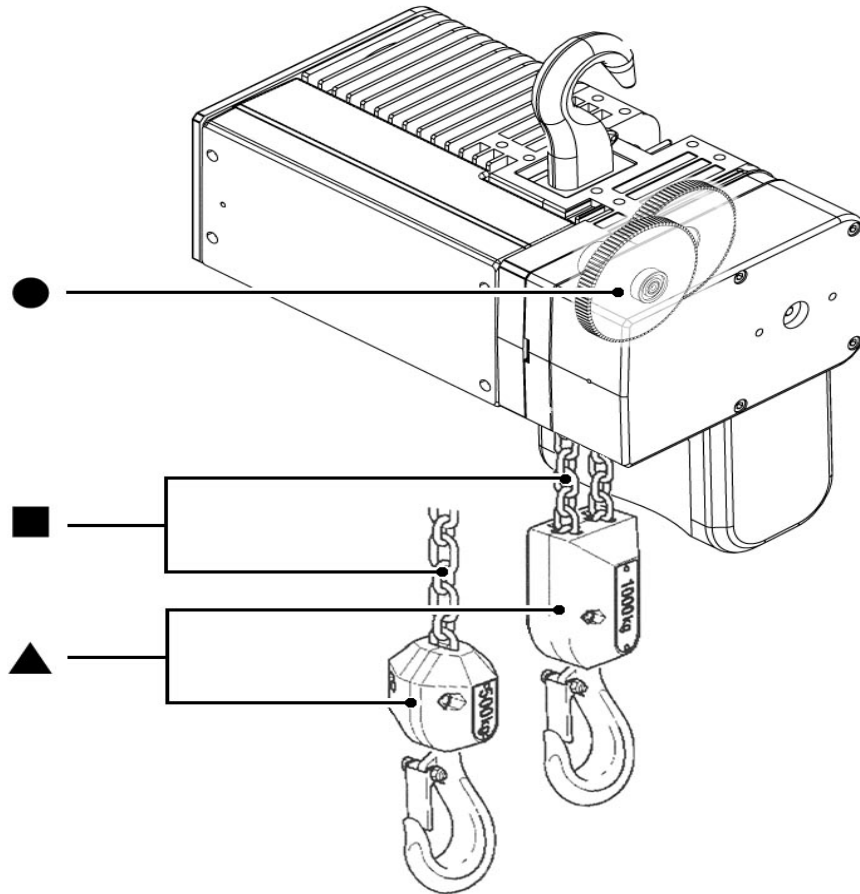


Table 12. Lubrication Specifications

LUBRICATION POINT	SPECIFICATIONS	ACCEPTABLE LUBRICANTS	QUANTITY
Chain ■	Oil or Liquid grease	Chain lubricating fluid (Ceplattyn or similar) EP-90	As required
Idler sprocket ▲ Slide bearing + bearing	Grease (without MoS2) KP 2 (DIN 51 502) Soap-based lithium Approx. drip point + 500°F Worked penetration 509-563°F Operating temperature - 4°F - +266°F	BP: BP Energrease LS - EP 2 Esso: Unirex N2 Mobil: Mobilgrease HP Shell: Shell Alvania EP Grease 2	As required
Gears ●	KP 0 K grease (DIN 51502) Soap-based lithium + MoS 2 Approx. drip point + 180°C Worked penetration 355 - 385°C Operating temperature -30°C to + 130°C	Mobil: Mobilgrease special BP: Multi-purpose grease L 21 M Shell: Shell Retimax AM Texaco: Molytex grease EP 2	0.05 liter

Open Wheel Gearing: EP1 Mobilux or equivalent.

### 8.3 Recommended technical support for various spare parts

Table 13. Recommended Technical Support for Various Spare Parts

SPARE PART	REPLACED BY
Upper chain guide	Qualified Electrician & Mechanic
Output shaft	Qualified Electrician & Mechanic
PG cable gland	Qualified Electrician
Gear shaft + nuts	Qualified Mechanic
Motor end cap	Qualified Mechanic
Gearing (1st/2nd stage)	Qualified Electrician & Mechanic
Brake & end cap sealing	Qualified Mechanic
Other seals and O-rings	Qualified Mechanic
Brake-limiter	Qualified Electrician
Brake end cap	Qualified Mechanic
Lower chain guide	Qualified Mechanic
Rubber buffer	Qualified Mechanic
Electric box	Qualified Electrician
PC-board	Qualified Electrician
Plugs	Qualified Electrician
Chain	Qualified Mechanic
Chain bucket	Qualified Mechanic
Slack fall stop	Qualified Mechanic
Suspension hook	Qualified Mechanic
Hook block assembly	Qualified Mechanic
Control box	Qualified Electrician

 **Once a part has been replaced, perform an operational check of hoist per Sections 3.3 and 3.4.**

### 8.4 Screw Tightening Torque (lb-ft) Specifications

Table 14. Screw Tightening Torque Specifications

TYPE	M5	M6	M8	M10	M12
STANDARD SCREWS	4	7	18	35	61
SELF-TAPING SCREWS	4	6	15	30	53

## 8.5 Troubleshooting

Table 15. Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Hoist does not lift or lower load	Emergency stop button is activated	Deactivate button
	Blown fuse	Replace the fuse
	Motor thermal protection activated	Allow motor to cool down
	Pendant plug pin pushed out	Reinstall plug pin
	Contact terminal screws loose	Tighten screws
	Mainline switch shut off	Turn switch on
Hoist does not lift load	Overload condition	Reduce load
	Slip clutch worn or incorrectly adjusted	Replace wear items or readjust slip clutch torque
	Brake not releasing	Check brake coil resistance. Check air gap setting. Adjust if necessary. Check rectifier output voltage.
Load drifts more than 4 inches [100mm]	Brake lining worn Air gap on brake is too wide	Replace wear items as necessary Adjust air gap setting
Travel direction does not correspond to that indicated on push button	Power supply incorrectly connected	See SECTION 3
Abnormal noises while lifting or lowering	Load chain and its components are not lubricated	Clean and lubricate load chain.
	Load chain is worn	Replace chain
	Chain wheel or chain guide is worn	Replace chain wheel or chain guide
	Idler sprocket is worn	Replace idler sprocket
	A supply phase is missing	Connect the three phases
	Twist or kink in load chain	Remove twist or kink





---

**THIS PAGE INTENTIONALLY LEFT BLANK**

## 9 PARTS ILLUSTRATION

### 9.1 Hoist Body – Three Phase Power Supply

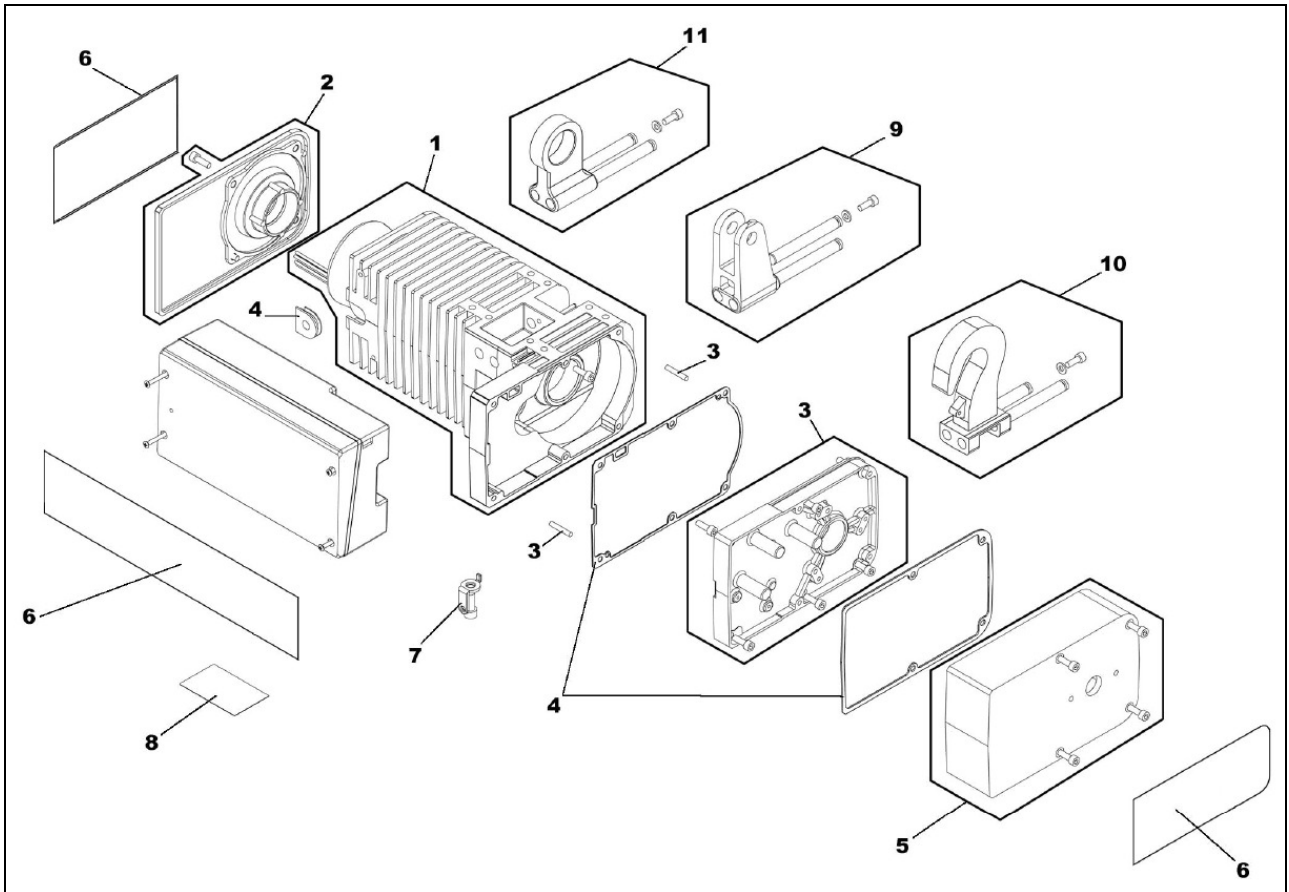


Table 16. Hoist Body Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
	52309839	COMPLETE HOIST BODY 460V TWO SPEED 32/8 FPM	1
	52309840	COMPLETE HOIST BODY 208/230V TWO SPEED 32/8 FPM	1
	52309841	COMPLETE HOIST BODY 208/230/460V SINGLE SPEED 32 FPM	1
	52309842	COMPLETE HOIST BODY 208/230/460V SINGLE SPEED 16FPM	1
	52309845	COMPLETE HOIST BODY 575V SINGLE SPEED 32 FPM	1
1	N/A	HOIST MACHINED BODY CASTING	1
2	52308741	MOTOR FLANGE ASSEMBLY	1
3	52308742	GEAR SET WITHOUT ROTARY LIMIT SWITCH	1
4	52308768	GEAR & BRAKE COVER SEAL SET	1
5	52308747	BRAKE COVER SET	1
6	2406879011	LM05 SERIES II BODY BRANDING SET – THREE PHASE	1
7	2218000	PUSHBUTTON SUSPENSION SET	1
8a	2213309001	HOIST BODY LOAD CAPACITY STICKER – ¼ TON	1
8b	2213309002	HOIST BODY LOAD CAPACITY STICKER – ½ TON	1
8c	2213309003	HOIST BODY LOAD CAPACITY STICKER – 1 TON	1
8d	2213309007	HOIST BODY LOAD CAPACITY STICKER – 250 kg	1
8e	2213309008	HOIST BODY LOAD CAPACITY STICKER – 500 kg	1
8f	2213309009	HOIST BODY LOAD CAPACITY STICKER – 1000 kg	1
9a	2229921	“C” STYLE TROLLEY COUPLING SET – PERPENDICULAR	1
9b	2229920	“C” STYLE TROLLEY COUPLING SET – PARALLEL	1
10a	2219955	TOP HOOK SET – PERPENDICULAR	1
10b	2219954	TOP HOOK SET – PARALLEL	1
11	52308832	RPT STYLE TROLLEY COUPLING SET	1
-	52308744	INSPECTION PORT CAP SET	1
-	2212017	TOP HOOK SAFETY LATCH – STEEL PLATE STYLE	1
-	2213445001	ELECTRICAL HAZARD WARNING STICKER	1
-	2213445002	ELECTRICAL WIRING INFORMATION STICKER	1

## 9.2 Hoist Body – Single Phase Power Supply

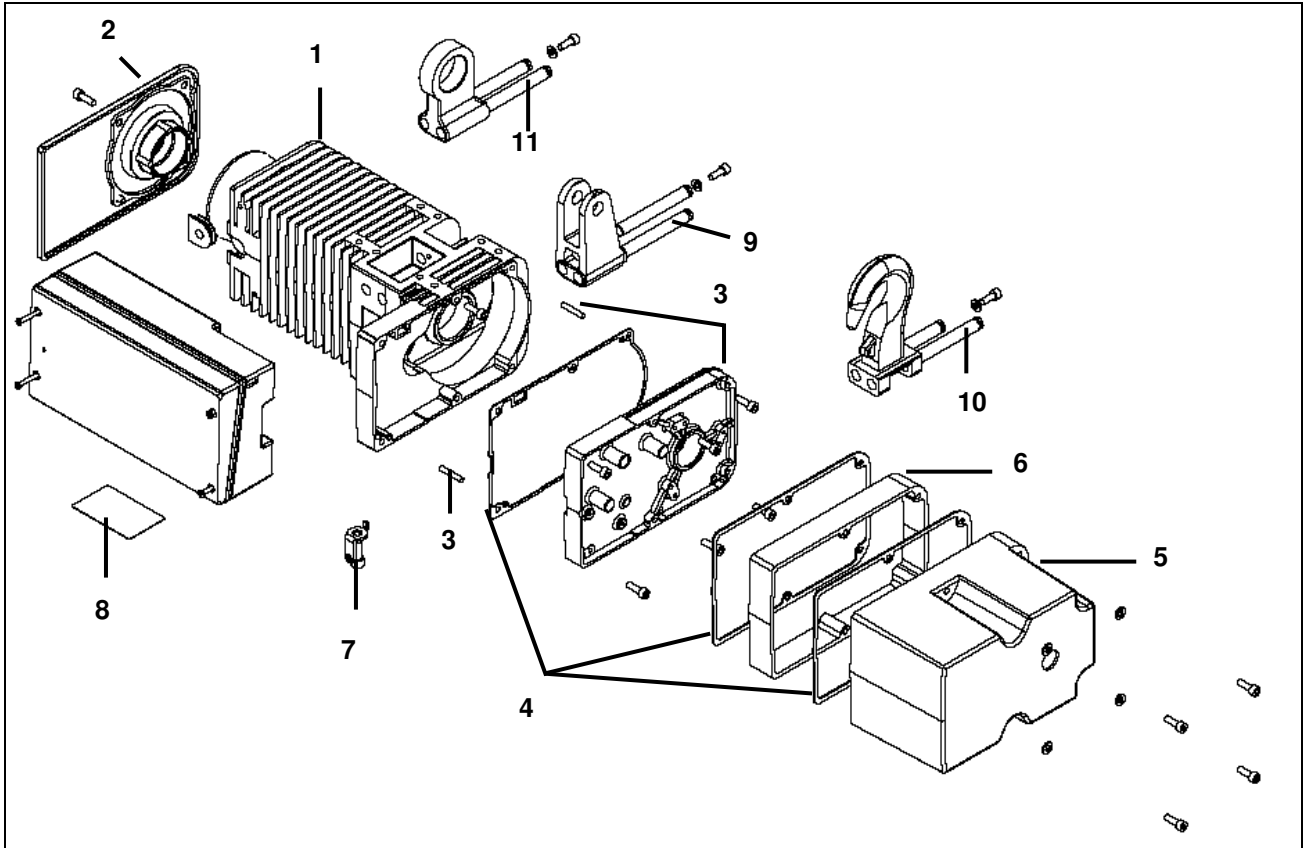


Table 17. Hoist Body Single Phase Power Supply Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
-	52315418	BODY & CONTROLS – 115V SINGLE PHASE – 16S	1
1	N/A	MACHINED CASING	1
2	52308741	MOTOR FLANGE ASSEMBLY	1
3	52308742	GEAR COVER WITHOUT ROTARY LIMIT ASSEMBLY	1
4	52308768	GEAR & BRAKE COVER SEAL SET	1
5	52305510	BRAKE COVER SET – SINGLE PHASE UNITS ONLY	1
6	52316243	EXTENSION HOUSING – SINGLE PHASE UNITS ONLY	1
7	2218000	PUSHBUTTON SUSPENSION SET	1
8a	2213309001	BODY CAPACITY STICKER – ¼ TON	1
8b	2213309002	BODY CAPACITY STICKER – ½ TON	1
8c	2213309003	BODY CAPACITY STICKER – 1 TON	1
8d	2213309007	BODY CAPACITY STICKER – 250 KG	1
8e	2213309008	BODY CAPACITY STICKER – 500 KG	1
8f	2213309009	BODY CAPACITY STICKER – 1000 KG	1
9a	2229921	“C” TROLLEY COUPLING SET - PERPENDICULAR	1
9b	2229920	“C” TROLLEY COUPLING SET - PARALLEL	1
10a	2219955	TOP HOOK SET - PERPENDICULAR	1
10b	2219954	TOP HOOK SET - PARALLEL	1
11	52308832	RPT COUPLING SET	1
-	2212017	TOP HOOK SAFETY LATCH – STEEL PLATE TYPE	1
-	52308744	INSPECTION PORT CAP	1
-	2213445001	ELECTRICAL HAZARD WARNING STICKER	1
-	2213445002	ELECTRICAL WIRING INFORMATION STICKER	1
12	2406879009	LM05 SERIES II BODY BRANDING SET – SINGLE PHASE	1

### 9.3 Helical Gear Mechanism & Brake

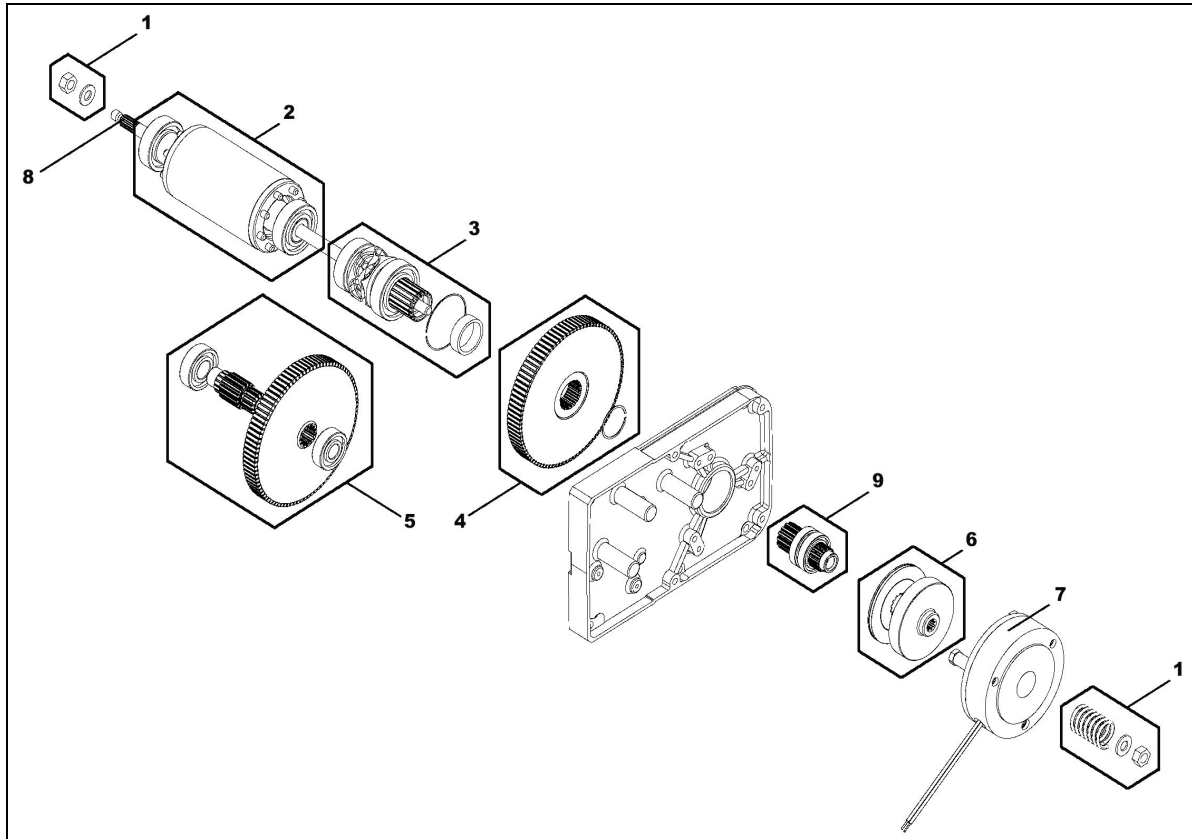


Table 18. Helical Gear Mechanism and Brake Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	2211016	SLIP CLUTCH SPRING SET	1
2a	52305652	ROTOR ASSEMBLY – THREE PHASE POWER SUPPLY	1
2b	52315793	ROTOR ASSEMBLY – SINGLE PHASE POWER SUPPLY	1
3	52305659	LOAD CHAIN SPROCKET ASSEMBLY	1
4a	52305473	8 M / min GEAR WHEEL	1
4b	52308850	16 M / min GEAR WHEEL	1
5a	52308771	GEAR SET – 8 M / min	1
5b	52315180	GEAR SET – 16 M / min	1
6a	52308772	TORQUE LIMITER / SLIP CLUTCH SET – 3 PHASE	1
6b	52315403	SLIP CLUTCH SET – SINGLE PHASE	1
7a	52305489	MOTOR BRAKE ASSEMBLY 190 VDC – 208/230/460VAC SS	1
7b	52305488	MOTOR BRAKE ASSEMBLY 100 VDC – 115/208/230VAC TS	1
7c	52305490	MOTOR BRAKE ASSEMBLY 230 VDC – 575VAC TS	1
8	52305461	MOTOR SHAFT	1
9	52305658	PINION SET	1

**THIS PAGE INTENTIONALLY LEFT BLANK**

## 9.4 Lifting Assembly

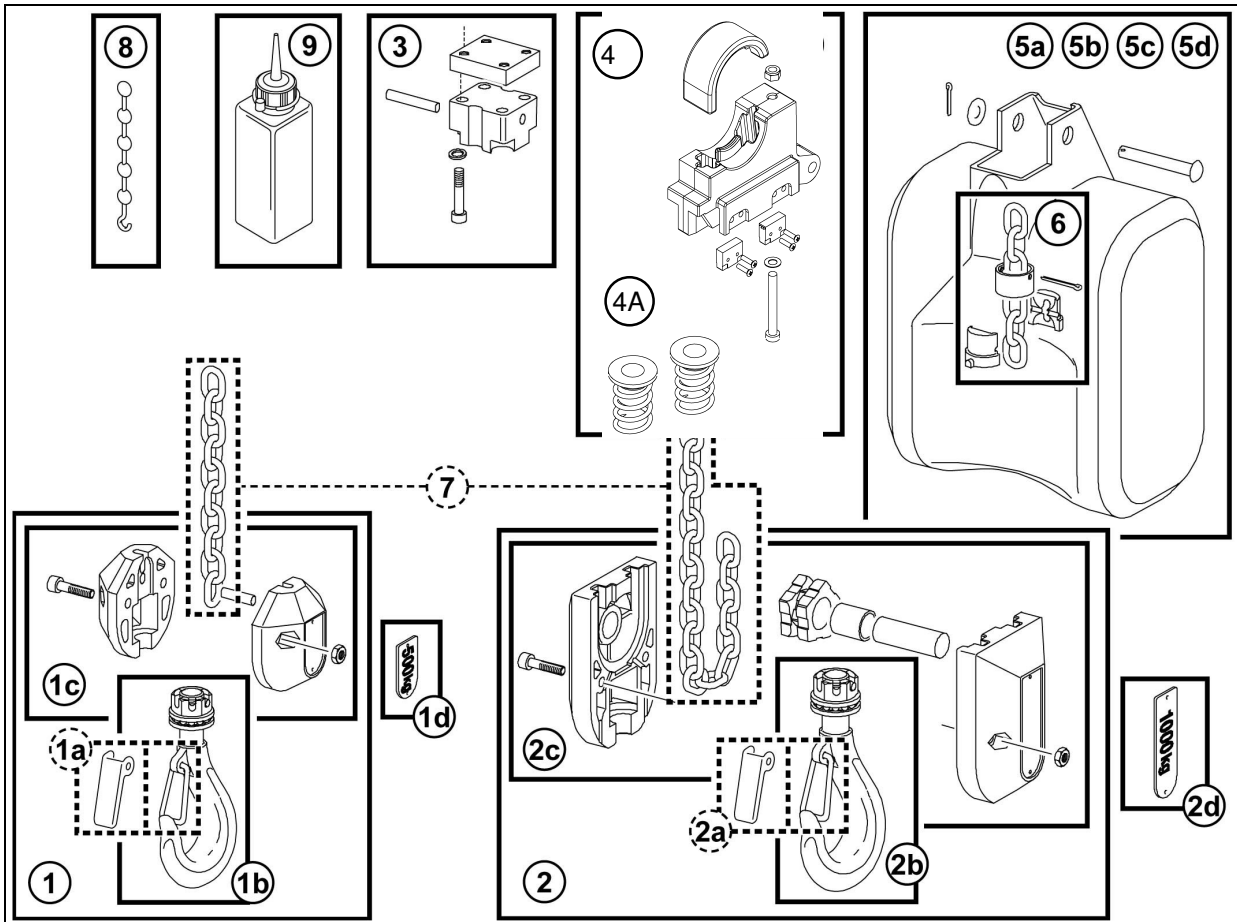





Table 19. Lifting Assembly Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	2219902	1-FALL LOAD BLOCK ASSY - STD HOOK	1
1	2212018	1-FALL LOAD BLOCK ASSY – SELF-LOCKING HOOK	1
1a	001512	1-FALL SAFETY LATCH – WIRE TYPE	1
1a	2212016	1-FALL SAFETY LATCH – STEEL PLATE TYPE	1
1b	2212011	1-FALL LOAD HOOK	1
1b	2217015	1-FALL LOAD HOOK – SELF LOCKING	1
1c	2219985	1-FALL LOAD BLOCK HALVES SET	1
1d	2213308008	1-FALL LOAD BLOCK CAPACITY STICKER – 250 KG	2
1d	2213308009	1-FALL LOAD BLOCK CAPACITY STICKER – 500 KG	2
1d	2213308001	1-FALL LOAD BLOCK CAPACITY STICKER – 1/4 TON	2
1d	2213308002	1-FALL LOAD BLOCK CAPACITY STICKER – 1/2 TON	2
2	2212020	2-FALL LOAD BLOCK ASSY – STD HOOK	1
2	2212028	2-FALL LOAD BLOCK ASSY – SELF-LOCKING HOOK	1
2a	001515	2-FALL SAFETY LATCH – WIRE TYPE	1
2a	2212017	2-FALL SAFETY LATCH – STEEL PLATE TYPE	1
2b	2217004	2-FALL LOAD HOOK – STD HOOK	1
2b	2247015	2-FALL LOAD HOOK – SELF-LOCKING	1
2c	2219987	2-FALL LOAD BLOCK HALVES SET	1
2d	2213333009	2-FALL LOAD BLOCK CAPACITY STICKER – 500 KG	2
2d	2213333010	2-FALL LOAD BLOCK CAPACITY STICKER – 1000 KG	2
2d	2213333002	2-FALL LOAD BLOCK CAPACITY STICKER – ½ TON	2
2d	2213333003	2-FALL LOAD BLOCK CAPACITY STICKER – 1 TON	2
3	52309350	CHAIN ANCHOR SET (2-FALL HOISTS)	1
4	<a href="#">52315430</a>	CHAIN GUIDE ASSEMBLY SET W/ SWITCHES (STANDARD)	1
4a	52293583	SPRING & PLATE SET (SET OF 3)	1
5a	2219990	CHAIN CONTAINER SET – 25FT [8M] MAXIMUM CHAIN LENGTH	1
5b	2249925	CHAIN CONTAINER SET – 50FT [16M] MAXIMUM CHAIN LENGTH	1
5c	2249926	CHAIN CONTAINER SET – 75FT [30M] MAXIMUM CHAIN LENGTH	1
5d	2249932	CHAIN CONTAINER SET – 150FT [50M] MAXIMUM CHAIN LENGTH	1
6	2211050	SLACK FALL STOP ASSEMBLY	1
7a	2213500	LOAD CHAIN – STD ZINC PLATED	*
7b	2213501	LOAD CHAIN – BLACK	*
7c	2213502	LOAD CHAIN – STAINLESS STEEL – CHECK CAPACITY LIMITS	*
8	2211045	LOAD CHAIN INSERTION TOOL	1
9	9995008	CHAIN LUBRICANT	1



\* NOTE: REFER TO CHAIN HOIST LIFT AND NUMBER OF FALLS FOR CHAIN QUANTITY

### 9.5 Chain Guide Assembly – With Limit Switches

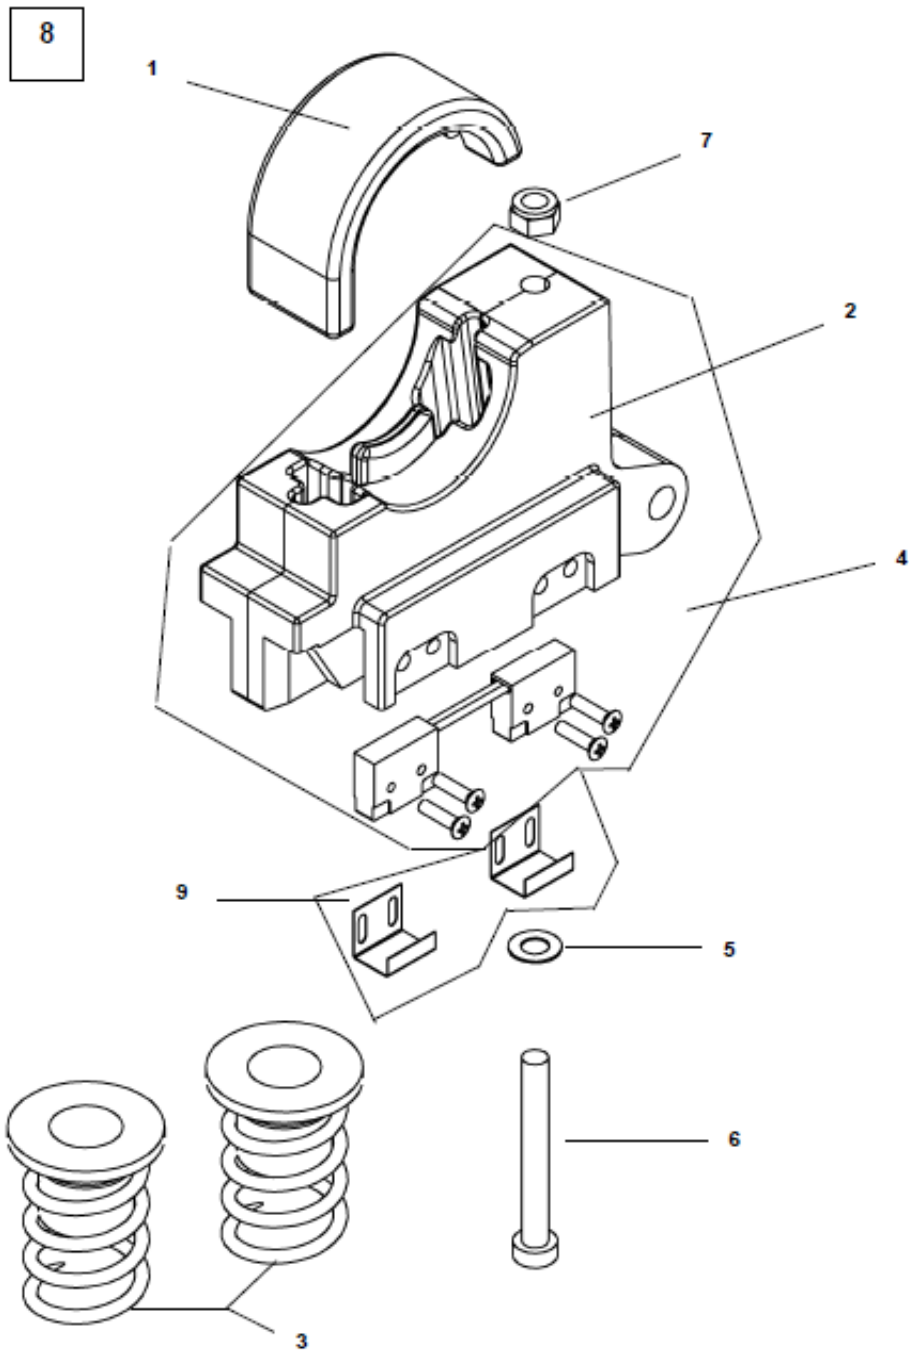

ITEM	PART NUMBER	DESCRIPTION	QTY
1	2214011	UPPER CHAIN GUIDE	1
2	52305493	LOWER CHAIN GUIDE	1
3	52293583	WASHER & SPRING SET (SET OF 3)	1
4	52305660	SET OF CHAIN GUIDE AND LIMIT SWITCHES	1
5	52315431	SET OF SCREWS (5 + 6 + 7)	1
8	52315430	COMPLETE LIMIT SWITCH	1
9	52337705	MICRO SWITCH SLIDES	2
-	52326175	MICRO SWITCH	1

## 9.6 Controls

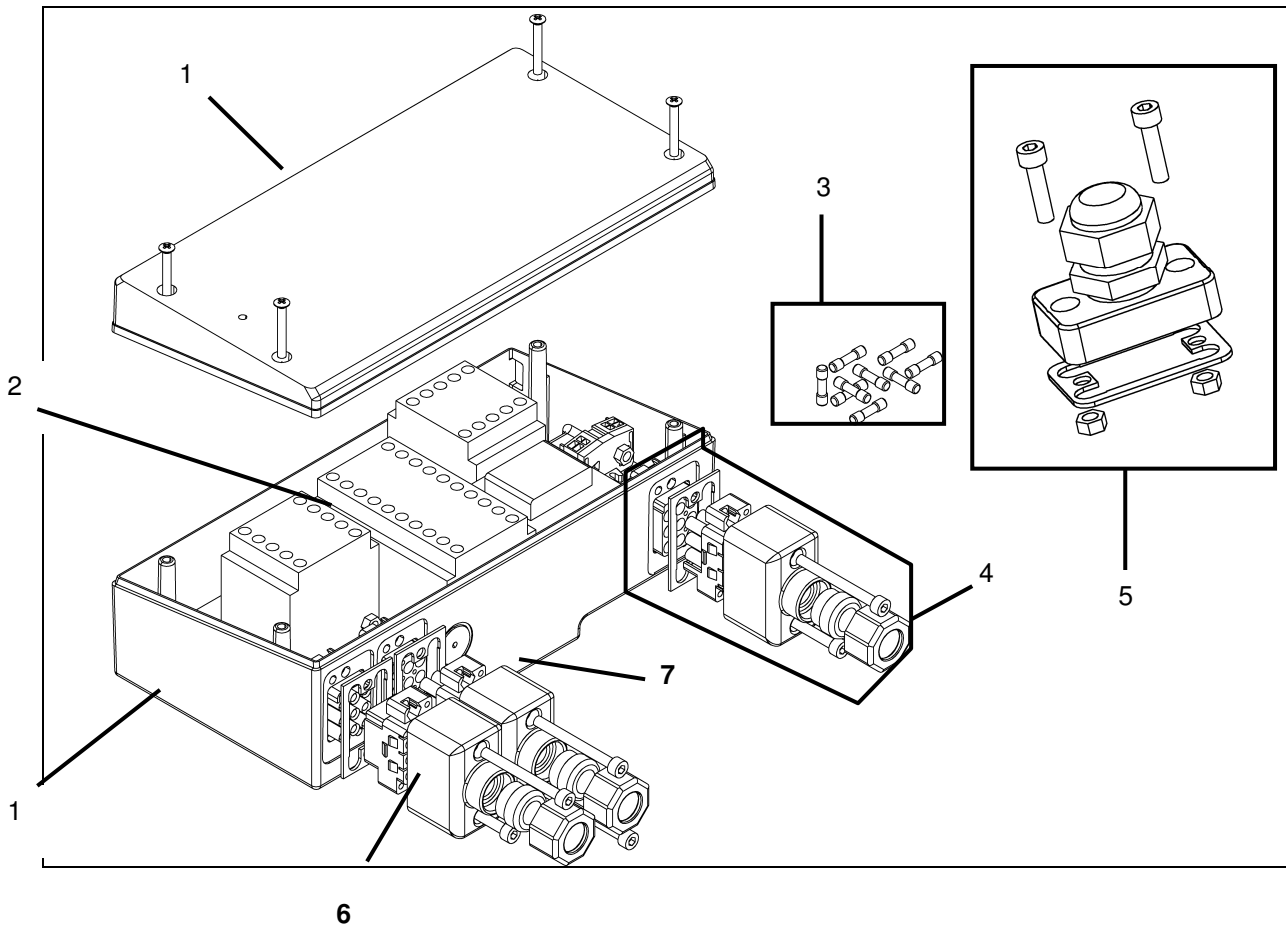


Table 20. Controls Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	52308791	CONTROL BOX BASE & COVER SET	1
2	2213017	TS CONTROL – 208/230/460V – 115V CONTROL VOLTAGE	1
2	2213016	TS CONTROL – 575V – 115V CONTROL VOLTAGE	1
2	2213018	SS CONTROL – 208/230/460V – 115V CONTROL VOLTAGE	1
2	52314707	SS CONTROL – 115V – 115 CONTROL SINGLE PHASE	1
-	52305694	HOUR COUNTER 115V CONTROL VOLTAGE (NOT SHOWN)	1
3	52314754	115V CONTROL CIRCUIT FUSES - SET OF 10	1
4	2249945	PUSH BUTTON PLUG SET	1
5	2249947	POWER CABLE GLAND SET - STD	1
6	2249982	POWER PLUG SET – OPTIONAL	1
7	2249946	TROLLEY PLUG SET	1

## 9.7 Rotary Limit Switch

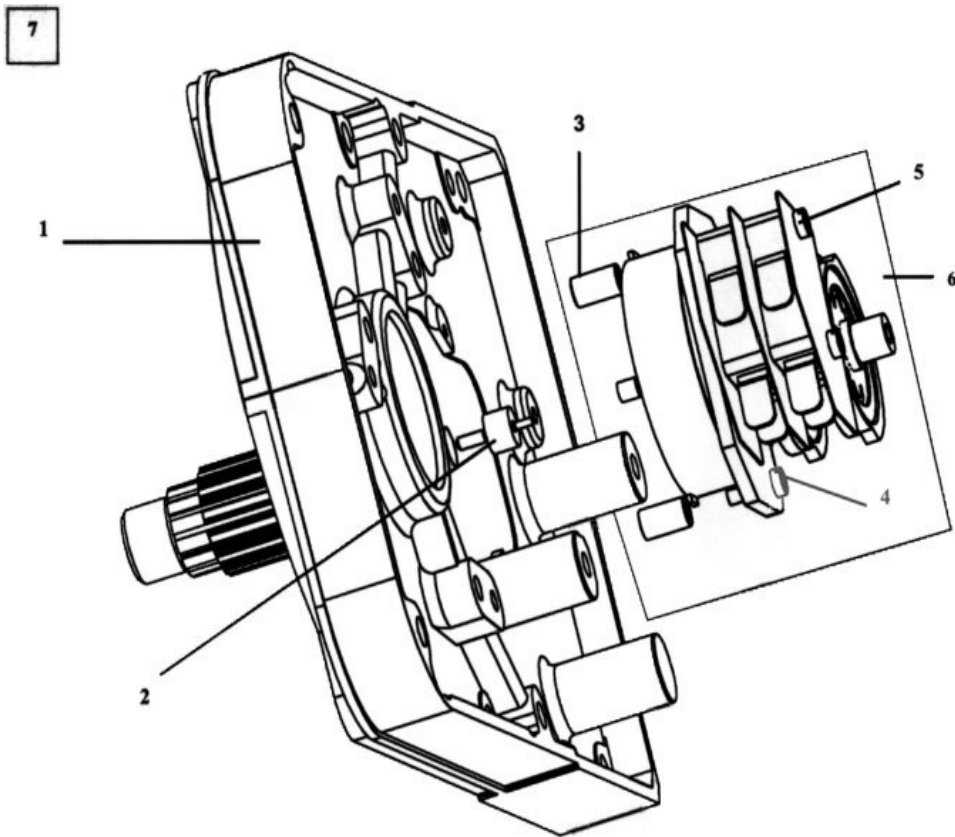


Table 21. Rotary Limit Switch Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	52305505	FLANGE ONLY	1
2	52305507	SHAFT	1
3,4,5	52315475	LIMIT SWITCH FIXING KIT ASSEMBLY + SPACER	1
6	52314755	CAM LIMIT SWITCH + SHAFT (2 CAMS)	1
7	52315474	CAM OPERATED LIMIT SWITCH COMPLETE (2 CAMS)	1
	52305510	BRAKE HOUSING FOR 4 CAM LIMIT SWITCH	1

## 9.8 Double Brake Mechanism

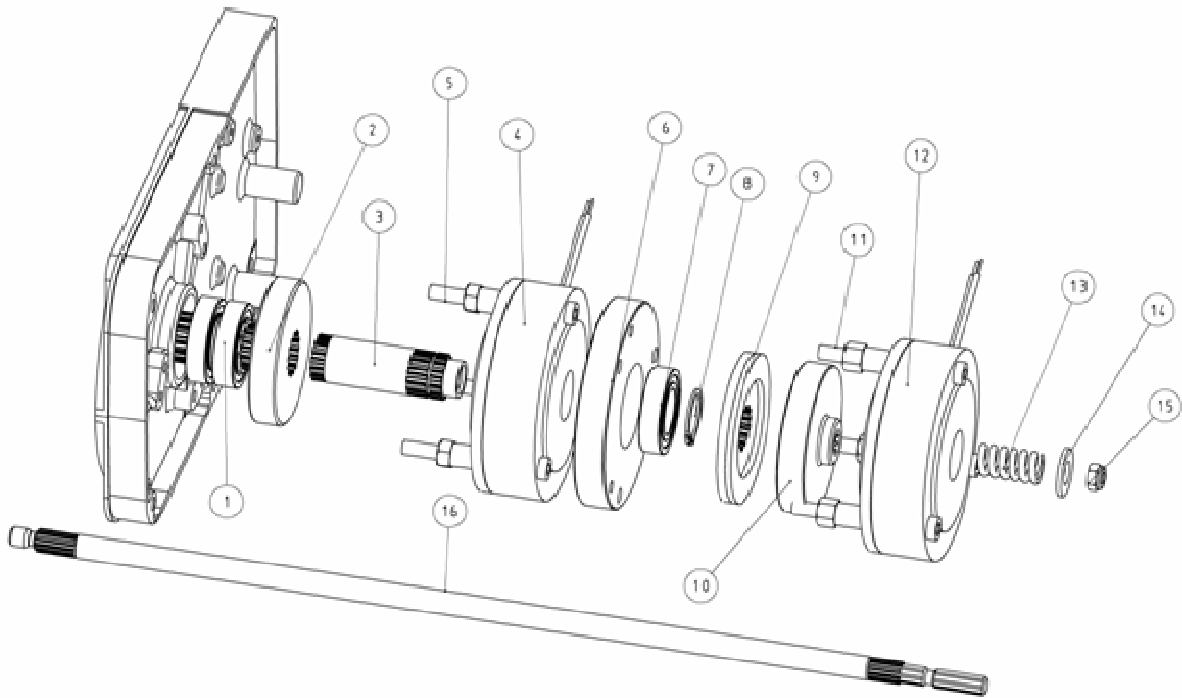


Table 22. Double Brake Mechanism Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	52310083	SPECIAL GEAR SHAFT ASSEMBLY	1
2	52305514	DOUBLE BRAKE LIMITER DISK	1
3	52305516	DOUBLE BRAKE LIMITER AXLE	1
4	-	BRAKE	1
5	52308396	SCREW	3
6	52305515	SECOND BRAKE SUPPORT	1
7	52253277	BEARING	1
8	830860	CIRCLIPS	1
9	52305485	BRAKE DISC SET	1
10	52305483	BRAKE DISK Ø 65	1
11	830934	SCREW	3
12	-	BRAKE	1
13	52353589	LIMITER SPRING	1
14	550758	WASHER	1
15	8030800	TRISTOP NUT DIN 980	1
16	52305512	DOUBLE BRAKE MOTOR SHAFT	1

## 9.9 Low Headroom Trolley

### 9.9.1 Low Headroom Trolley (Drive Components)

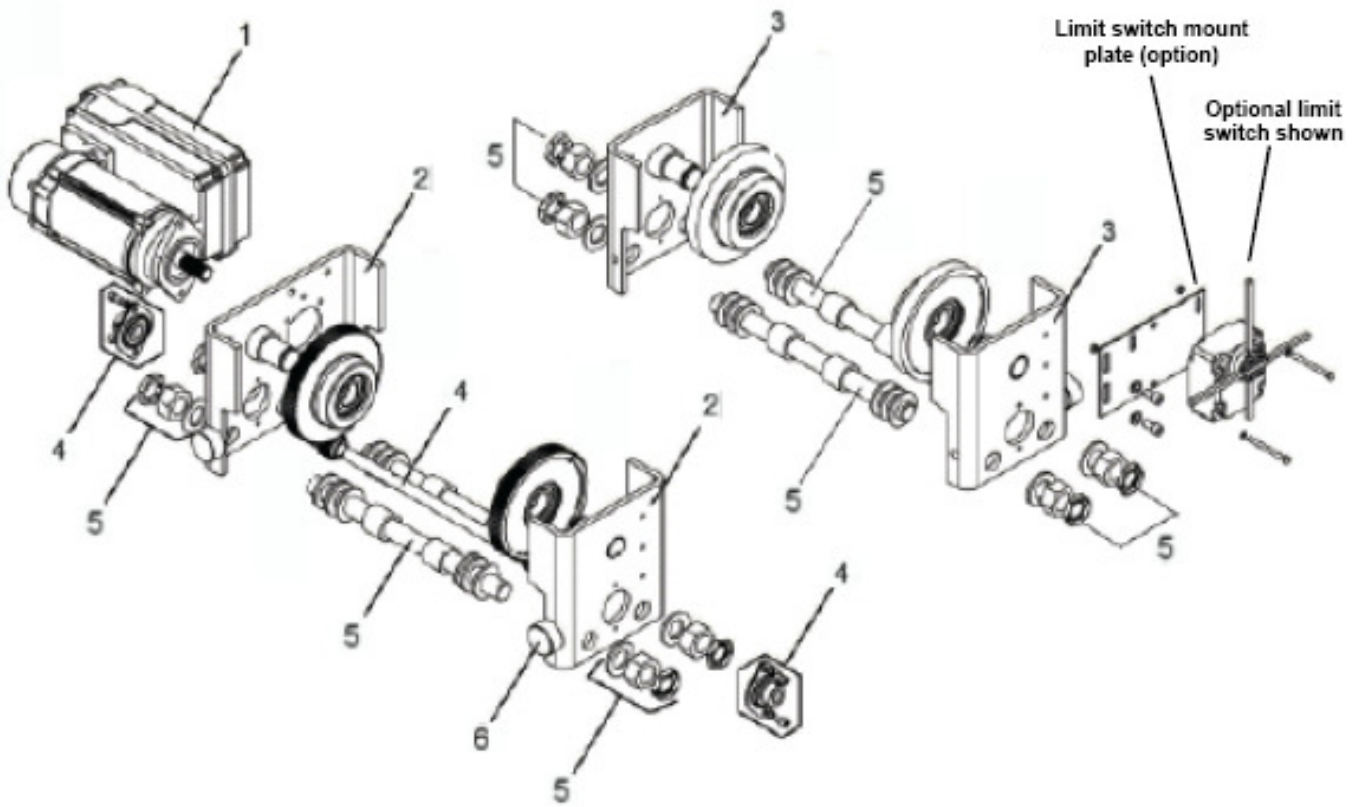


Table 23. Low Headroom Trolley Short Outreach (Drive Components)

ITEM	DESCRIPTION			C10 SHORT	
				QTY	CODE
1	Complete 2-speed motor drive 115Vc	460V	≤ 2 Ton (2000 Kg)	1	52306026
		575V		1	52306027
		208/230V		1	52306028
	Complete inverter motor drive 115Vc	460V	> 1 Ton (1000 Kg)	1	52299090
575V 208/230V		> 1 Ton ≤ 2 Ton	1	52304881	
2	Geared drive side plates			2	52391073
3	Ung geared idler side plates			2	52391072
4	Pinion drive assy			1	52311194
5	XHEAD assy 2.28 - 4.33 in. (set of 4)			4	556902
	XHEAD assy 4.45 - 6.69 in. (set of 4)			4	556903
	XHEAD assy 7.00 – 9.45 in. (set of 4)			4	556904
	XHEAD assy 9.76 – 12.20 in. (set of 4)			4	556905
6	Rubber buffer			4	558993
*	Transformer for inverter trolley		460V	1	52304748
			575V	1	52304749
			208/230V	1	52304746
*	Transformer mounting bracket			1	2309848001

\* Not shown in diagram



### 9.9.2 Low Headroom Trolley (Suspension Components)

Figure 21. Low headroom trolley (suspension components)

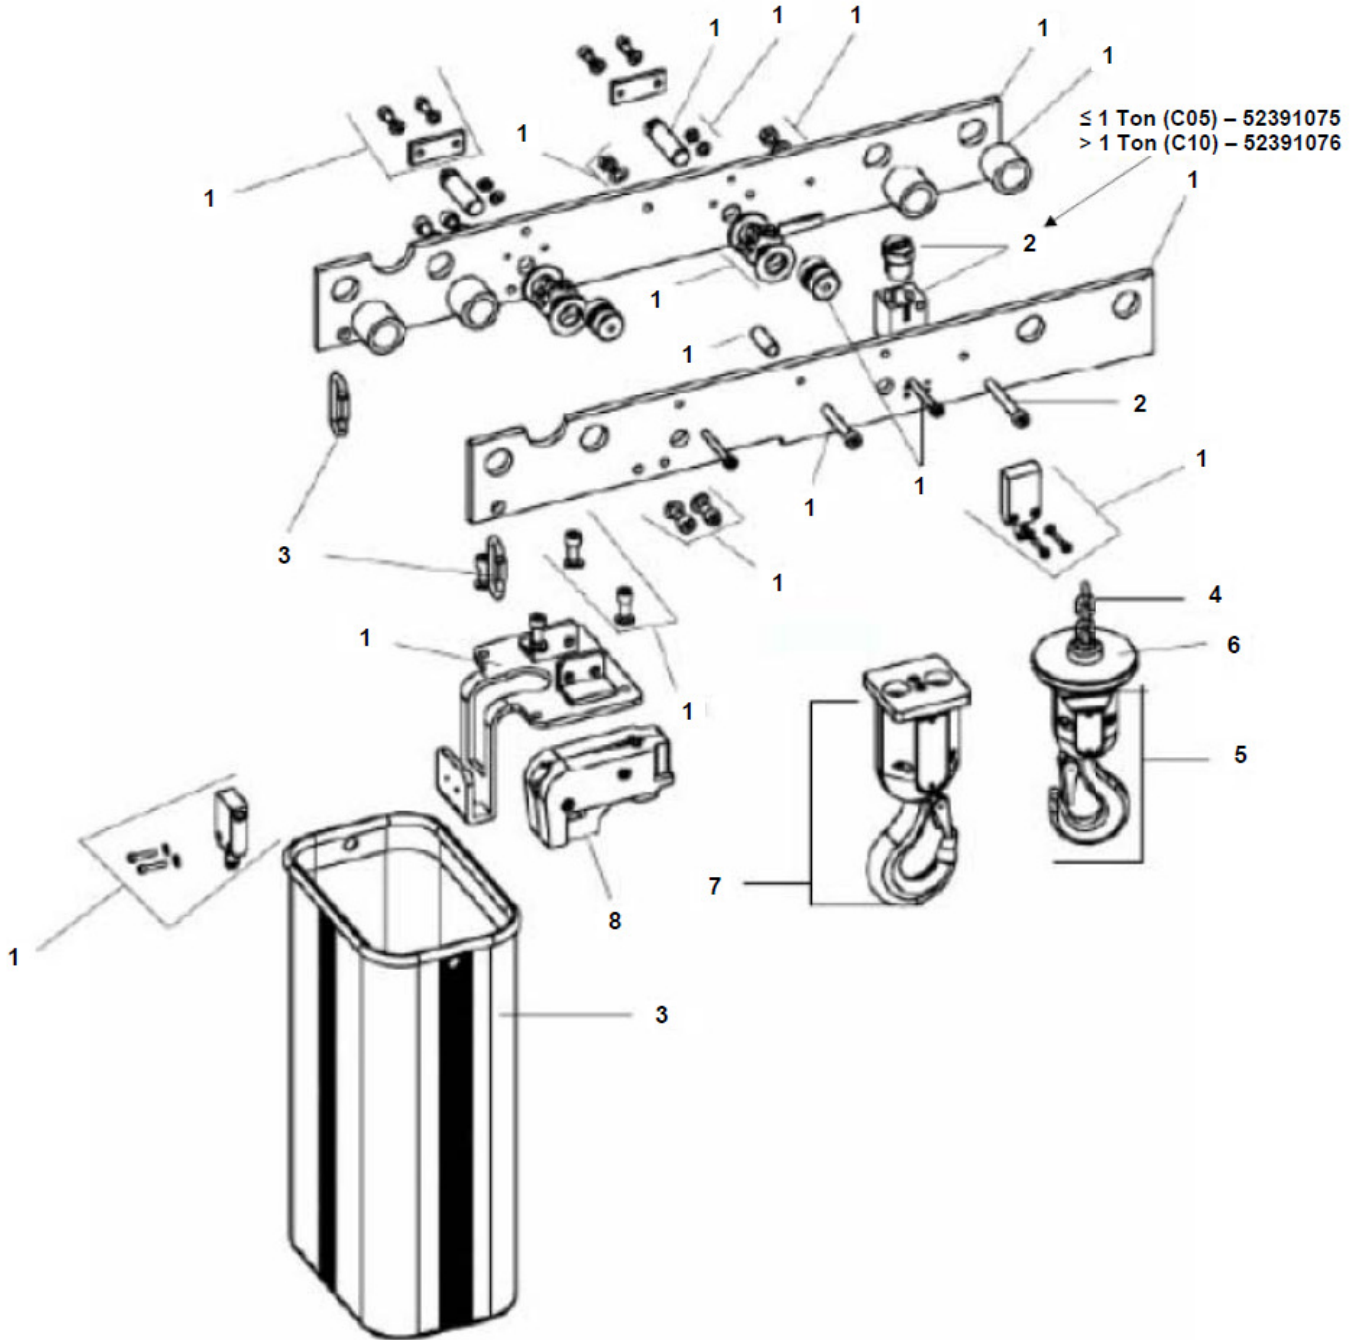




Table 24. Low Headroom Trolley (Suspension Components)


ITEM	DESCRIPTION	C10 SHORT		
		QTY	CODE	
1	LH Short Outreach Frame Assy	1	52391065	
2	Fixed point assy (not applicable for 1-fall hoists)	1	52391075	
3	Chain bag (from 0 to 30 m)	to 65 ft.	1	52333407
		66 to 130 ft.	1	52328053
4	Lifting chain galva. (Length: HOL + 5 ft.)	-	2243500	
5	Lower hook block assy 1 fall	1	52387611	
6	Counterweight for 1 fall hook	1	557939	
7	Lower hook block assy 2 falls	1	52387610	
8	Chain guide	1	52391768	



NOTE: When hoists are mounted on a low headroom trolley, they are supplied with aluminum chain guide.

## 9.10 Electric trolley (Swiveling trolley 0 to 3.2 Tons (3200 Kg))

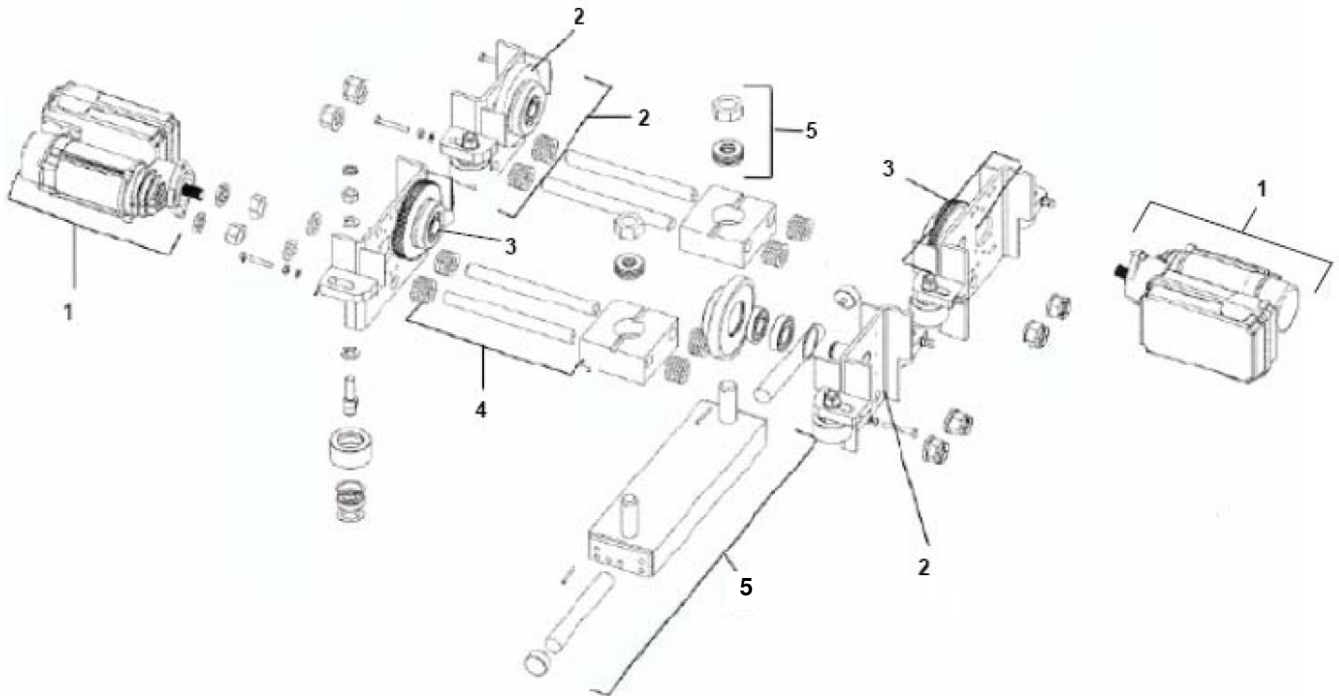Figure 22. Electric trolley (swiveling trolley 0 to 3.2 tons (3200 Kg))



NOTE: ECH is attached to swivel trolley through a mechanical connection. No top hook connection available.

Table 25. Electric trolley (Swiveling trolley 0 to 3.2 Tons (3200 Kg))

ITEM	DESCRIPTION			QTY	CODE
1	Complete 2-speed motor drive 115Vc	460V	≤ 3.2 Ton (3200 Kg)	2	52306026
		575V		2	52306027
		208/230V		2	52306028
	Complete inverter motor drive 115Vc	460V	≤ 1 Ton (1000 Kg)	2	52299090
		575V 208/230V	> 1 Ton ≤ 3.2 Ton	2	52304881
2	Idler side plate			2	52326596
3	Drive side plate			2	52326597
4	Swivel CHR Kit 2.60 – 4.33 in. (set of 4)			1	556966
	Swivel CHR Kit 2.60 – 4.33 in. (set of 4)			1	556967
	Swivel CHR Kit 2.60 – 4.33 in. (set of 4)			1	556968
	Swivel CHR Kit 2.60 – 4.33 in. (set of 4)			1	556969
5	Cross bar set for C05			1	52326598
	Cross bar set for C10			1	52326599
	Cross bar set for C16/20/25			1	52326602

## 9.11 Push Button Assembly – Horizontal Pairs of Buttons

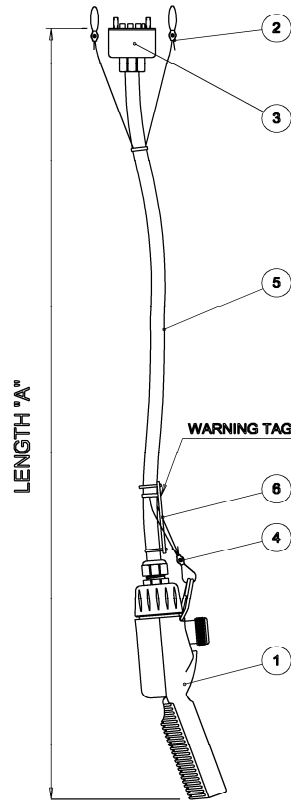


Table 26. Push Button Assembly (Horizontal Pairs of Buttons) Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
-	2309765010	P/B ASSEMBLY 10 FT, E-STOP, TWO SPEED HOIST	1
-	2309765015	P/B ASSEMBLY 15 FT, E-STOP, TWO SPEED HOIST	1
-	2309765020	P/B ASSEMBLY 20 FT, E-STOP, TWO SPEED HOIST	1
-	2309767010	P/B ASSEMBLY 10 FT, E-STOP, TWO SPEED HOIST, TWO SPEED TROLLEY	1
-	2309767015	P/B ASSEMBLY 15 FT, E-STOP, TWO SPEED HOIST, TWO SPEED TROLLEY	1
-	2309767020	P/B ASSEMBLY 20 FT, E-STOP, TWO SPEED HOIST, TWO SPEED TROLLEY	1
1a	52301832	P/B ENCLOSURE ASSEMBLY – E-STOP – TS HOIST	1
1b	2213466004	P/B ENCLOSURE ASSEMBLY – E-STOP – TS HOIST, TWO SPEED TROLLEY	1
2	2218000	UPPER SUSPENSION KIT	1
3	7285036	P/B ASSEMBLY - PLUG KIT	1
4	558073	SUSPENSION UNIT	1
5	52292266	PUSH BUTTON ELECTRICAL CABLE 16 GAUGE / 12 CONDUCTOR RPC	1
6	<a href="#">2309414005</a>	<a href="#">LM</a> OPERATOR'S WARNING TAG - ENGLISH	1

## 9.12 Pushbutton Assembly – Horizontal Pairs of Buttons

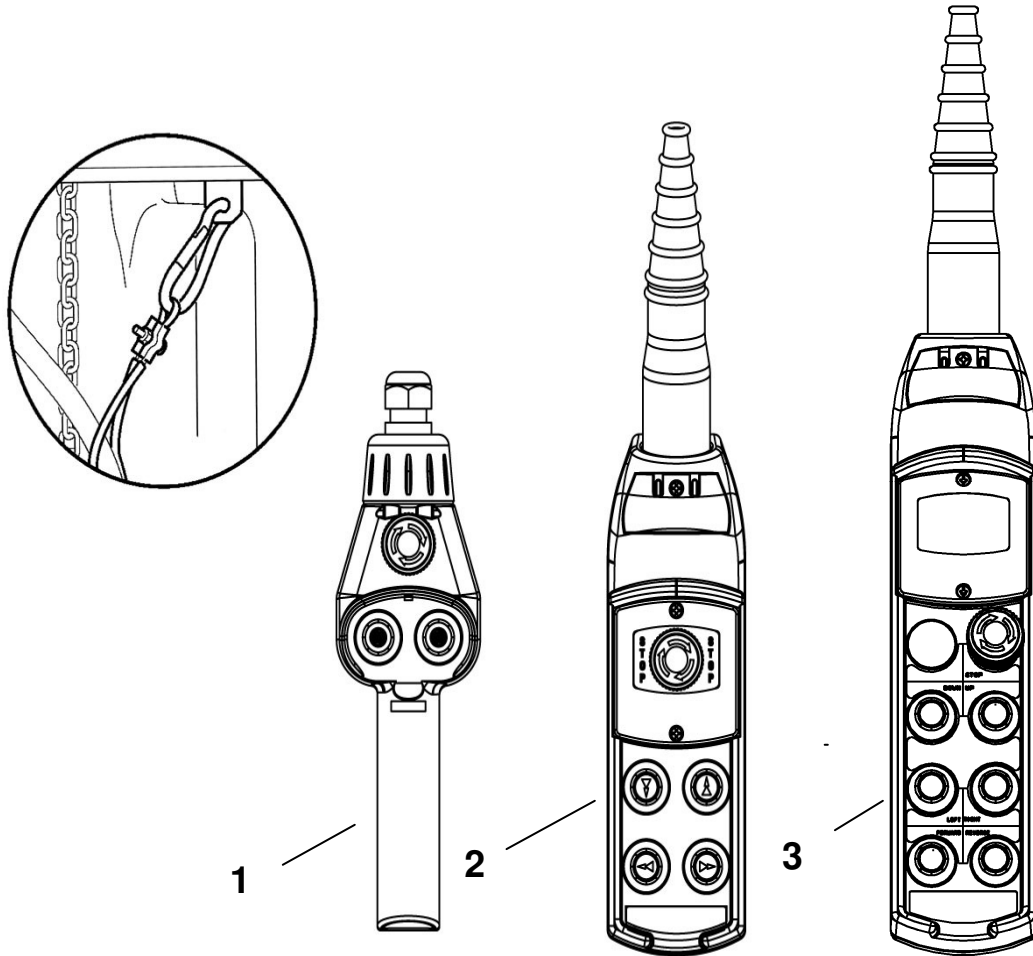


Table 27. Push Button Assembly – Horizontal Pairs of Buttons Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	52301832	PISTOL GRIP P/B CONTROL ASSEMBLY – TWO SPEED	1
2	2213466004	P/B CONTROL ASSEMBLY – TWO SPEED – 5 BUTTON	1
3	2213466005	P/B CONTROL ASSEMBLY – TWO SPEED – 7 BUTTON	1

### 9.13 Push Button Assembly – Vertical Pairs of Buttons (Option)


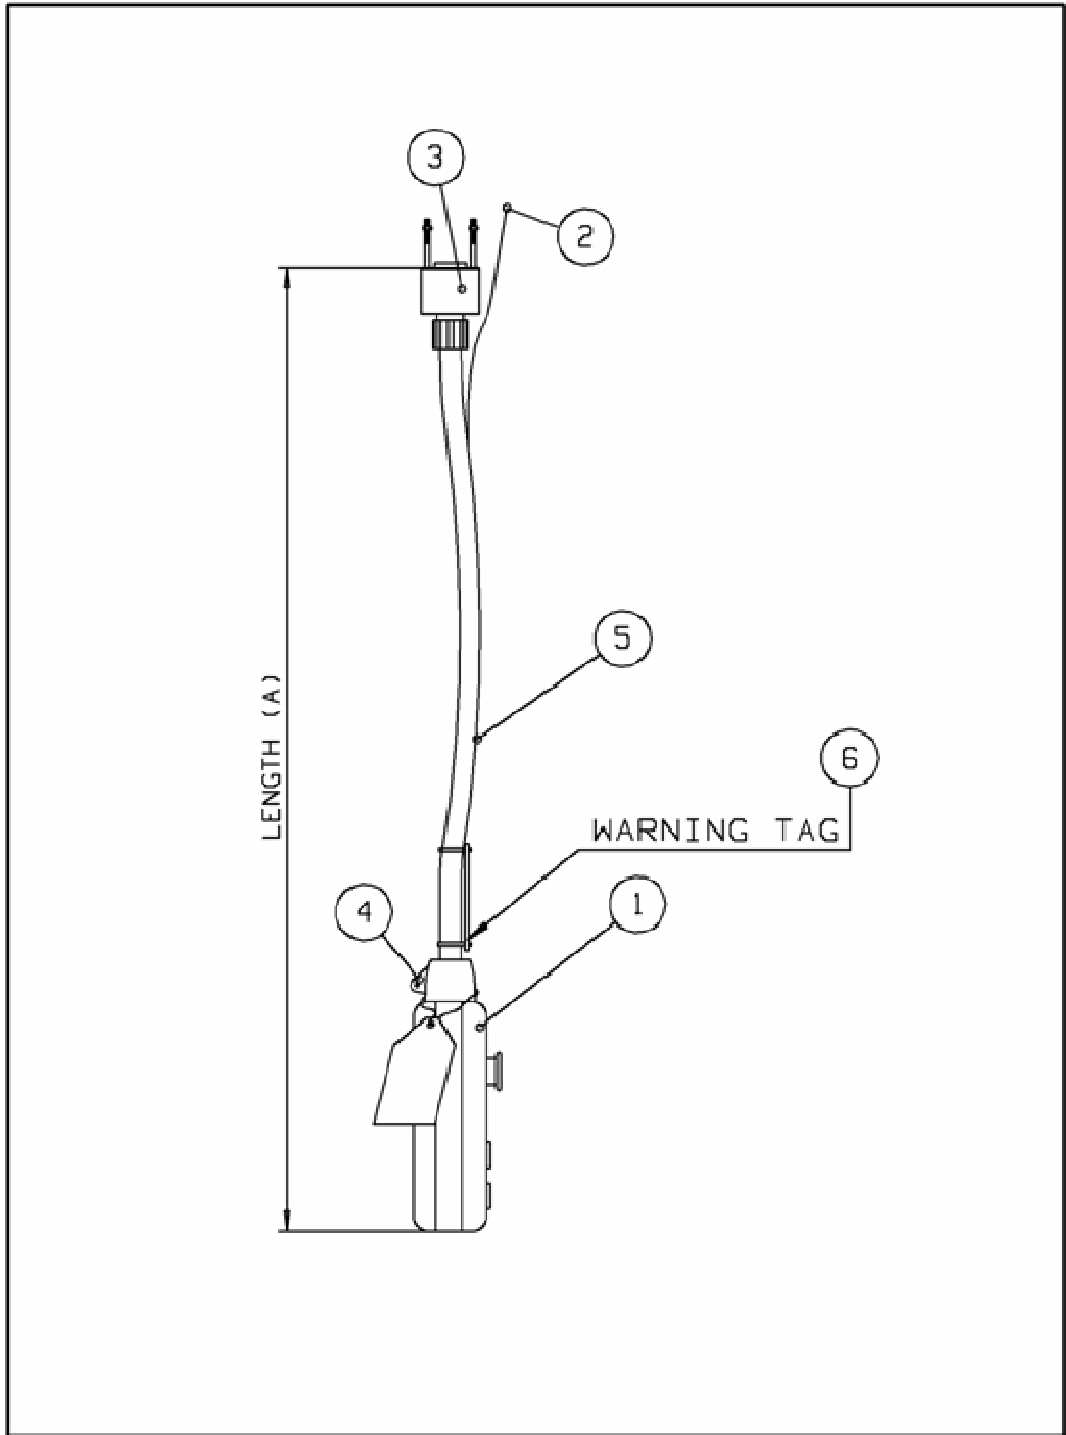


Table 28. Push Button Assembly – Vertical Pairs of Buttons (Option) Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
-	2309673010	E-STOP, SINGLE SPEED HOIST – 10 FT P/B ASSEMBLY	1
-	2309673015	E-STOP, SINGLE SPEED HOIST – 15 FT P/B ASSEMBLY	1
-	2309673020	E-STOP, SINGLE SPEED HOIST – 20 FT P/B ASSEMBLY	1
-	2309674010	E-STOP, TWO SPEED HOIST – 10 FT P/B ASSEMBLY	1
-	2309674015	E-STOP, TWO SPEED HOIST – 15 FT P/B ASSEMBLY	1
-	2309674020	E-STOP, TWO SPEED HOIST – 20 FT P/B ASSEMBLY	1
1	2212932011	E-STOP, SS HOIST PUSHBUTTON ENCLOSURE ASSEMBLY	1
1	2212932012	E-STOP, TS HOIST PUSHBUTTON ENCLOSURE ASSEMBLY	1
2	2218000	UPPER SUSPENSION KIT	1
3	7285036	PLUG KIT	1
4	558073	SUSPENSION UNIT	1
5	52292266	PUSH BUTTON ELECTRICAL CONTROL CABLE	1
6	<a href="#">2309414005</a>	LM PUSHBUTTON WARNING TAG - ENGLISH	1

### 9.14 Push Button Assembly – Vertical Buttons (Option)

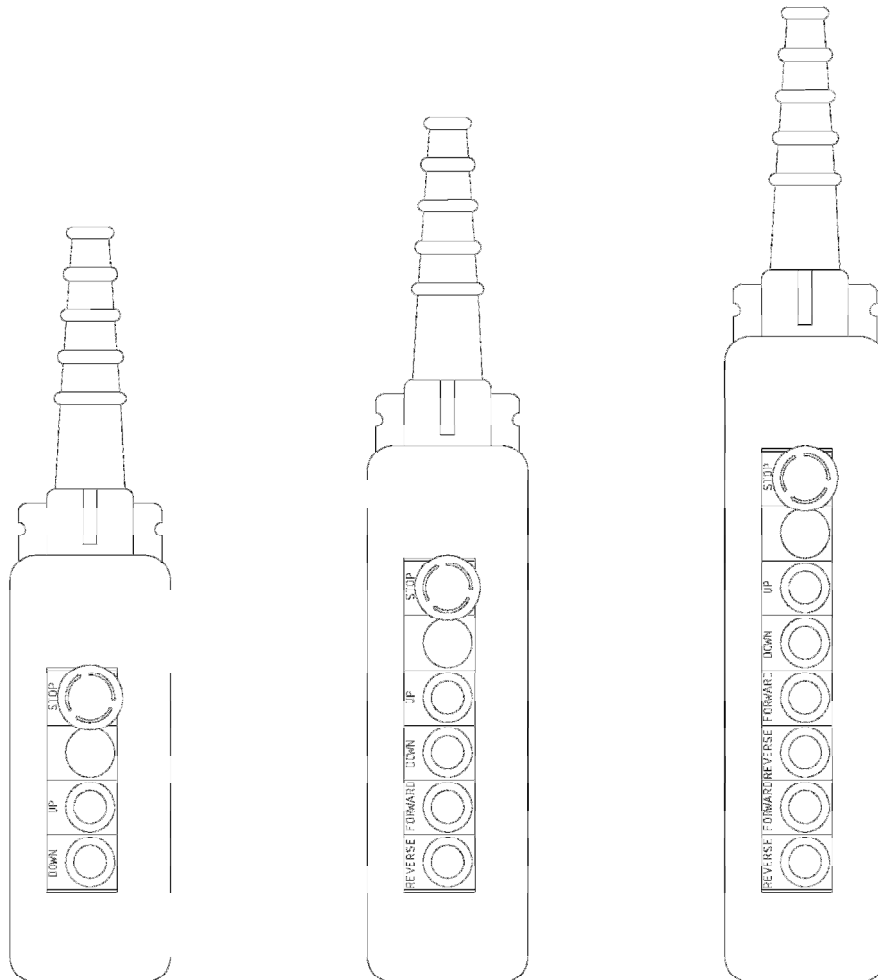

Push Button Assembly - Vertical Buttons (Option) Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY
1	2212932011	3 BUTTON P/B TELEMECANIQUE – S*, 1H	1
1	2212932012	3 BUTTON P/B TELEMECANIQUE – S*, 2H	1
2	2212932032	5 BUTTON P/B TELEMECANIQUE – S*, 1H, 2T	1
2	2212932033	5 BUTTON P/B TELEMECANIQUE – S*, 2H, 2T	1
3	2212932034	7 BUTTON P/B TELEMECANIQUE – S*, 2H, 2T, 2B	1
3	2212932035	7 BUTTON P/B TELEMECANIQUE – S*, 1H, 2T, 1B	1
3	2212932036	7 BUTTON P/B TELEMECANIQUE – S*, 2H, 2T, 1B	1
3	2212932037	7 BUTTON P/B TELEMECANIQUE – S*, 1H, 2T, 2B	1



---

**THIS PAGE INTENTIONALLY LEFT BLANK**